

# TI Design TIDA-00036

# I2C Controlled Single Cell Charger with 5.1V 2.1A or 1A Synchronous Boost

# 1 GENERAL

#### 1.1 PURPOSE

The purpose of this document is to provide detailed instructions for testing the TIDA-00036 modules (bq24195/195L EVM).

#### 1.2 REFERENCE DOCUMENTATION

1) bq24195/195L Datasheet

2) TIDA-00036 SCH.pdf

3) TIDA-00036 \_PCB.pdf

4) TIDA-00036 \_BOM.xls

### 1.3 DEFINITIONS

This procedure details how to configure the evaluation board. On the test procedure the following naming conventions are followed. Refer to the schematic for details.

VXXX: External voltage supply name (VBUS, VBAT, VSYS)

LOADW: External load name (LOAD)

V(TPyy): Voltage at internal test point TPyyy. For example, V(TP12) means the

voltage at TP12.

V(Jxx): Voltage at jack terminal Jxx.

V(TP(XXXXX)): Voltage at test point "XXXXX". For example, V(ACDET) means the voltage

at the test point which is marked as "ACDET".

V(XXX, YYY): Voltage across point XXX and YYY.

I(JXX(YYY)): Current going out from the YYY terminal of jack XX.

Measure:→A,B Check specified parameters A, B. If measured values are not within

specified limits the unit under test has failed.

<u>Observe</u> → A,B Observe if A, B occur. If they do not occur, the unit under test has failed.

<u>Short</u> → A,B Connect A to B using a jumper

Jxx(BBB): Terminal or pin BBB of jack xx

Assembly drawings have location for jumpers, test points and individual components.



### 2 SAFETY

#### 2.1 EYE PROTECTION

Safety Glasses are to be worn while performing all testing on the EVM.

### 2.2 GENERAL RISKS

This test must be performed by qualified personnel trained in electronics theory and understand the risks and hazards of the assembly to be tested.

#### 2.3 ELECTROSTATIC DISCHARGE

ESD precautions must be followed while handling electronic assemblies.

#### 2.4 THERMAL/SHOCK HAZARDS

Precautions should be observed to avoid touching areas of the assembly that may get hot or present a shock hazard during testing.

### 3 APPAREL

- 3.1 ELECTROSTATIC SMOCK
- 3.2 ELECTROSTATIC GLOVES OR FINGER COTS
- 3.3 SAFETY GLASSES
- 3.4 GROUND ESD WRIST STRAP

### 4 EQUIPMENT

#### 4.1 POWER SUPPLIES

Power Supply #1 (PS#1): a power supply capable of supplying 5-V @ 2-A is required. While this part can handle larger voltage and current, it is not necessary for this procedure.

## 4.2 LOAD: (Constant Voltage <4.5V)

Load (BAT+ to GND): Kepco 4 quadrant Supply/Load: BOP 20-5M, DC 0 to ±20V, 0 to ±5A (or higher)

Or: A 0-20V/0-5A, >30W system DC electronic load and setting as constant voltage load mode

Load (PMID to GND; Called for in Boost Mode operation): 10 Ohm, at least 5W power resistor

#### 4.3 METERS

Six Fluke 75 multi-meters, equivalent or better.

Or: Four equivalent voltage meters and two equivalent current meters.

The current meters must be able to measure 4A current.



### 4.4 Oscilloscope

Techtronic's TDS3054 or similar.

### 4.5 COMPUTER

A computer with at least one USB port and a USB cable. The bq2419x evaluation software must be properly installed.

#### 4.6 HPA172 COMMUNICATION KIT

A HPA172 USB to I<sup>2</sup>C communication kit.

### 4.7 SOFTWARE

Unzip bq2419xEVM\_GUI.zip and double click on the "SETUP.EXE" file. Follow the installation steps. The software supports Windows XP and Window 7 operating systems.

# **5 EQUIPMENT SETUP**

- A) Set the power supply #1 for 5V DC, 1 A current limit and then turn off the supply.
- B) Connect the output of power supply #1 in series with a current meter (Multi-meter) to J1 (VBUS and GND), as shown in Figure 2.
- C) Connect a voltage meter across J1 (VIN) and J1 (GND).
- D) Turn on the electronic load, set to constant voltage mode and output to 2.5V. Turn off (disable) the load. Connect the load in series with a current meter (multimeter), ground side, to J2 (BAT+ and GND) as shown in Figure 2. Connect a voltage meter across J2 (BAT+ and GND).
- E) Connect a voltage meter across J2 (SYS and GND).
- F) Connect HPA172 USB Interface Adapter to the computer with a USB mini-cable and to J3 with the 10 pin ribbon cable. The connections are shown in Figure 1.

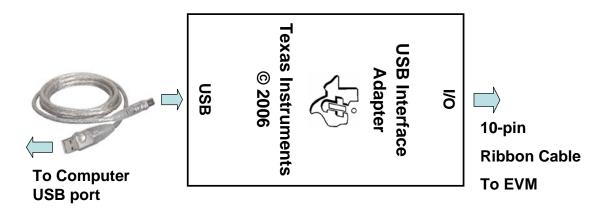


Figure 1. Connections of the HPA172 kit.



G) Install jumpers as listed below: Same for bg24195 and bg24195L

JP1: Apply Shunt: TS1 to TS2

JP2: No Shunt

JP3: Apply Shunt: PULLUP — Uses VSYS as a pull-up bias on TIDA-00036 modules

JP4: No Shunt JP5: No Shunt JP6: No Shunt

**JP7:** Apply Shunt: REGN bias for TS2 **JP8:** Apply Shunt: TS2 10k EVM pull-down

JP9: No Shunt

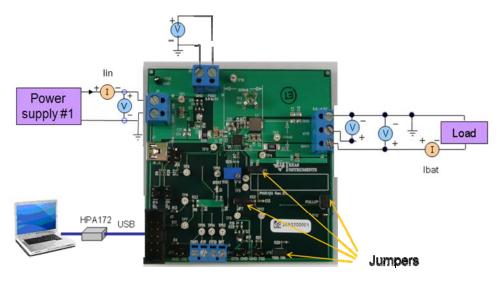


Figure 2. Original test setup for TIDA-00036 (bq2419x EVM).

H) Turn on the computer. Launch the TIDA-00036 (bq24195/195L) evaluation GUI. The main window of the GUI is shown in Figure 3.

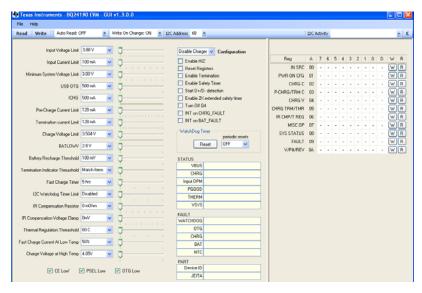


Figure 3. The main window of the GUI for TIDA-00036 module (bq24195/195L EVM).



# **6 PROCEDURE**

# 6.1 Current settings

# 6.1.1 Make sure EQUIPMENT SETUP steps are followed.

**ILIM** Setting: Set the potentiometer to its lowest value for max input current. To do this, connect an ohm-meter between point TP9 and ground. Turn the screw on the potentiometer counterclockwise until the resistance drops to its lowest point (this should be approximately 169 ohms which is the value of R7)

- 6.1.2 Launch TIDA-00036 modules (bq24195/195L EVM) GUI Application on computer, if no already done.
- 6.1.3 Turn on PS#1

Measure → V (J2(SYS), J2(GND)) = 4.10 ± 300mV

# 6.2 Charge Voltage and Current Regulation of VIN & Device ID Verification

# 6.2.1 GUI setup (all done in the GUI):

Device address: 6B



- Click Read button
- Select "Disabled" for "I2C Watchdog Timer Limit"
- Set "Input Voltage Limit" to 4.2V
- Set "Input Current Limit" to 500mA
- Set "Charge Voltage Limit" to 4.208V
- Set Fast Charge Current, "ICHG" to 500 mA
- Set "Pre-Charge Current Limit" to 256 mA
- Deselect "Enable Termination" (See Figure 4)



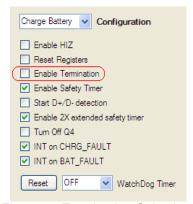


Figure 4. Termination Selection.

· Click Read button twice.

<u>Observe</u> → Everything normal at "FAULT" box.

Observe → D1 (STAT) is on.

6.2.2 Enable Load#1 from step 5D. Measure the voltage across J2 at two different points: V(J2(SYS), J2(GND)) and V(J2(BAT), J2(GND)).

Measure → V(J2(SYS), J2(GND)) = 3.5V ± 300 mV

Measure → V(J2(BAT), J2(GND)) = 2.5V ± 200mV

6.2.3 Increase the Load #1 voltage to 3.7V.

Measure → V(J2(SYS), J2(GND)) = 3.75V ± 200 mV

Measure → IBAT = 500mA ± 200mA

Measure → V(J2(BAT), J2(GND)) = 3.75V ± 200mV

6.2.4 In the software, select Fast Charge Current, "ICHG" to 1.012A.

Measure → lin = 500mA ± 200mA

6.2.5 Verify Device ID and JEITA shown in software matches table below:

Assy Number	Part Number	Device ID	JEITA
TIDA-00036	bq24195 or bq24195L	100	Disabled

6.2.6 Verify Scope Measurements (See Figure 5 – 500ns/div):

Connect Channel 1, 2, 3 as listed below and verify waveforms as shown in Figure 5.

CH1 (AC coupled 20mV/div): PMID (TP19 to GND)

CH2 (5VDC/div): SW (TP2)

CH3 (AC coupled 20mV/div): SYS (TP3 to GND)

Measure → PMID (TP19) AC Ripple < 10mV excluding high frequency spikes



<u>Measure</u> → SW Frequency (TP2) - Frequency between 1.25MHz & 1.5MHz, <u>Measure</u> → SW Duty cycle (TP2) - Duty cycle between 73 & 81%.

Measure → SYS AC Ripple (TP3 to GND) < 15mV excluding high frequency spikes

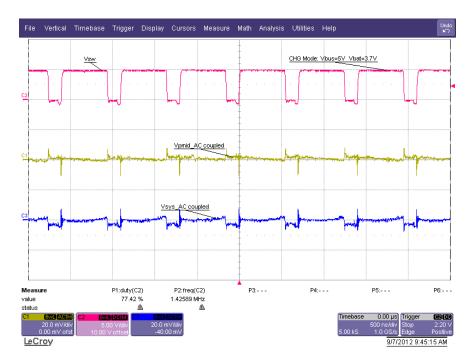


Figure 5. CHG mode ripple and duty cycle; VBUS = 5V and VBAT = 3.7V.

#### 6.2.7 Switch to Boost Mode

- a) Turn off and Disconnect Power Supply #1
- b) If the Constant voltage supply connected between BAT+ and GND, form above, is not a 4 quadrant supply (can source current) then this needs to be replaced with a power source set to 3.7VDC that can source current.
- c) c) Apply 10 ohms (5W or greater) across J5 (PMID(+) to GND(-))
- d) Uncheck the "OTG Low" box in the GUI.
- e) f) Select OTG in the "Configuration" drop down window.
- f) g) Verify PMID to GND on J5 is between 4.9V and 5.3V
- g) h) Verify scope measurement (See Figure 6).

CH1 (AC coupled 20mV/div): PMID (TP19 to GND) CH2 (5V/div): SW (TP2)

Measure → PMID (TP19 to GND) AC Ripple < 10mV excluding high frequency spikes

<u>Measure</u> → SW Frequency (TP2) - Frequency between 1.2MHz & 1.7MHz, <u>Measure</u> → SW Duty cycle (TP2) - Duty cycle between 67 & 74%.



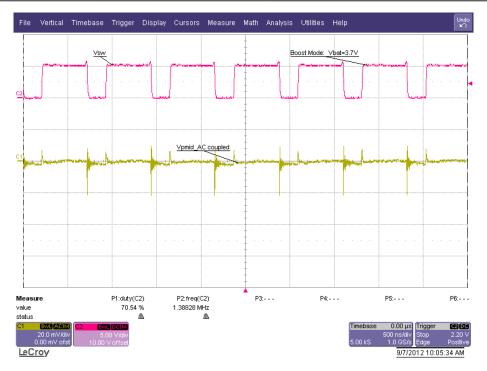


Figure 6. Boost mode Ripple and Duty Cycle; VBAT = 3.7V.

6.2.8 Turn off Power Source connected to BAT+ and GND after the test is done.

#### IMPORTANT NOTICE FOR TI REFERENCE DESIGNS

Texas Instruments Incorporated ("TI") reference designs are solely intended to assist designers ("Buyers") who are developing systems that incorporate TI semiconductor products (also referred to herein as "components"). Buyer understands and agrees that Buyer remains responsible for using its independent analysis, evaluation and judgment in designing Buyer's systems and products.

TI reference designs have been created using standard laboratory conditions and engineering practices. TI has not conducted any testing other than that specifically described in the published documentation for a particular reference design. TI may make corrections, enhancements, improvements and other changes to its reference designs.

Buyers are authorized to use TI reference designs with the TI component(s) identified in each particular reference design and to modify the reference design in the development of their end products. HOWEVER, NO OTHER LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE TO ANY OTHER TI INTELLECTUAL PROPERTY RIGHT, AND NO LICENSE TO ANY THIRD PARTY TECHNOLOGY OR INTELLECTUAL PROPERTY RIGHT, IS GRANTED HEREIN, including but not limited to any patent right, copyright, mask work right, or other intellectual property right relating to any combination, machine, or process in which TI components or services are used. Information published by TI regarding third-party products or services does not constitute a license to use such products or services, or a warranty or endorsement thereof. Use of such information may require a license from a third party, or a license from TI under the patents or other intellectual property of TI.

TI REFERENCE DESIGNS ARE PROVIDED "AS IS". TI MAKES NO WARRANTIES OR REPRESENTATIONS WITH REGARD TO THE REFERENCE DESIGNS OR USE OF THE REFERENCE DESIGNS, EXPRESS, IMPLIED OR STATUTORY, INCLUDING ACCURACY OR COMPLETENESS. TI DISCLAIMS ANY WARRANTY OF TITLE AND ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, QUIET ENJOYMENT, QUIET POSSESSION, AND NON-INFRINGEMENT OF ANY THIRD PARTY INTELLECTUAL PROPERTY RIGHTS WITH REGARD TO TI REFERENCE DESIGNS OR USE THEREOF. TI SHALL NOT BE LIABLE FOR AND SHALL NOT DEFEND OR INDEMNIFY BUYERS AGAINST ANY THIRD PARTY INFRINGEMENT CLAIM THAT RELATES TO OR IS BASED ON A COMBINATION OF COMPONENTS PROVIDED IN A TI REFERENCE DESIGN. IN NO EVENT SHALL TI BE LIABLE FOR ANY ACTUAL, SPECIAL, INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES, HOWEVER CAUSED, ON ANY THEORY OF LIABILITY AND WHETHER OR NOT TI HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, ARISING IN ANY WAY OUT OF TI REFERENCE DESIGNS OR BUYER'S USE OF TI REFERENCE DESIGNS.

TI reserves the right to make corrections, enhancements, improvements and other changes to its semiconductor products and services per JESD46, latest issue, and to discontinue any product or service per JESD48, latest issue. Buyers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All semiconductor products are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its components to the specifications applicable at the time of sale, in accordance with the warranty in TI's terms and conditions of sale of semiconductor products. Testing and other quality control techniques for TI components are used to the extent TI deems necessary to support this warranty. Except where mandated by applicable law, testing of all parameters of each component is not necessarily performed.

TI assumes no liability for applications assistance or the design of Buyers' products. Buyers are responsible for their products and applications using TI components. To minimize the risks associated with Buyers' products and applications, Buyers should provide adequate design and operating safeguards.

Reproduction of significant portions of TI information in TI data books, data sheets or reference designs is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. TI is not responsible or liable for such altered documentation. Information of third parties may be subject to additional restrictions.

Buyer acknowledges and agrees that it is solely responsible for compliance with all legal, regulatory and safety-related requirements concerning its products, and any use of TI components in its applications, notwithstanding any applications-related information or support that may be provided by TI. Buyer represents and agrees that it has all the necessary expertise to create and implement safeguards that anticipate dangerous failures, monitor failures and their consequences, lessen the likelihood of dangerous failures and take appropriate remedial actions. Buyer will fully indemnify TI and its representatives against any damages arising out of the use of any TI components in Buyer's safety-critical applications.

In some cases, TI components may be promoted specifically to facilitate safety-related applications. With such components, TI's goal is to help enable customers to design and create their own end-product solutions that meet applicable functional safety standards and requirements. Nonetheless, such components are subject to these terms.

No TI components are authorized for use in FDA Class III (or similar life-critical medical equipment) unless authorized officers of the parties have executed an agreement specifically governing such use.

Only those TI components that TI has specifically designated as military grade or "enhanced plastic" are designed and intended for use in military/aerospace applications or environments. Buyer acknowledges and agrees that any military or aerospace use of TI components that have *not* been so designated is solely at Buyer's risk, and Buyer is solely responsible for compliance with all legal and regulatory requirements in connection with such use.

TI has specifically designated certain components as meeting ISO/TS16949 requirements, mainly for automotive use. In any case of use of non-designated products, TI will not be responsible for any failure to meet ISO/TS16949.