

Design Overview

This Near Field Communication (NFC) reference design provides a firmware example for the implementation of an NFC Reader/Writer application using the TRF7970A NFC transceiver. This reference design provides a number of easy-to-use Application Programming Interfaces (APIs), which let users quickly implement NFC Reader/Writer functionality. The API documentation, hardware, and example C code provided lets designers to develop NFC Reader/Writer applications with an MSP430™/MSP432 or easily ported to another MCU of choice.

Design Resources

TIDM-NFC-RW	Tool Folder Containing Design Files
TRF7970A	Product Folder
TRF7964A	Product Folder
MSP430F5529	Product Folder
MSP432P401R	Product Folder
TRF7970A BoosterPack	Tools Folder
TRF7970A Target Board	Tools Folder
MSP430F5529 LaunchPad	Tools Folder
MSP430F5529 Experimenters Board	Tools Folder
MSP432P401R LaunchPad	Tools Folder




[ASK Our E2E Experts](#)
[WEBENCH® Calculator Tools](#)

Design Features

- Able to Read and Write NFC Type 2, 3, 4A, 4B, and 5 Tag Platforms
- Provides Examples of How to Properly Read and Write NDEF-Formatted RTDs for Each Supported NFC Tag Platform
- Includes an Easy to Use GUI to Select Between Individual NFC Modes
- Offers a Flexible Firmware Structure That Allows for Configurable NDEF Applications
- Offers Builds for MSP-EXP430F5529, MSP-EXP430F5529LP, and MSP-EXP432P401R
- Tested for Existing NFC-Enabled Device Interoperability and Against NFC Forum Test Suite.
- Includes Firmware (With GUI), Schematics, and User's Guide

Featured Applications

- Smart Grid Prepayment Infrastructure
- Set-Top Box and Multimedia Configuration
- Automotive Infotainment
- Access Control and Ticketing

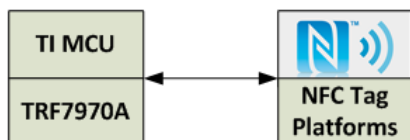

An IMPORTANT NOTICE at the end of this TI reference design addresses authorized use, intellectual property matters and other important disclaimers and information.

MSP430, LaunchPad, BoosterPack, EnergyTrace are trademarks of Texas Instruments.
 ARM, Cortex are registered trademarks of ARM Limited.

1 System Description

The TRF7970A NFC transceiver supports three modes:

- Reader/Writer
- Card Emulation
- Peer-to-Peer

This design focuses on how to use the TRF7970A in Reader/Writer mode. This mode allows an NFC-enabled system to activate and read or write NFC tag platforms. For the TRF7970A, the following tag platforms can be read.

- Type 2 (T2T)
- Type 3 (T3T)
- Type 4A or B (T4T)
- ISO 15693 (T5T)

NFC transceivers that support Reader/Writer mode typically poll to check if a tag or NFC peer is present every 500 ms. This time is known as the period time, which includes the time the transceiver is polling (searching for a tag) plus the time the transceiver is waiting to be activated with the receivers turned on (if it is emulating a tag or is in Peer-to-Peer Target mode). In [Figure 1](#), the transceiver is first polling for Active A and F technology (Active Peer-to-Peer). After it polls for passive A technology (ISO 14443A-3), passive B (ISO 14443B-3), passive F (ISO 18092), and then passive V (ISO 15693).

The system in this design builds on and includes two previous TI Designs (see the following links) and is the third installment of the 3-part series of the NFCLink (stand-alone) offering from TI.

- NFCLink (stand-alone) P2P: <http://www.ti.com/tool/TIDM-NFC-P2P>
- NFCLink (stand-alone) Card Emulation: <http://www.ti.com/tool/TIDM-NFC-CE>

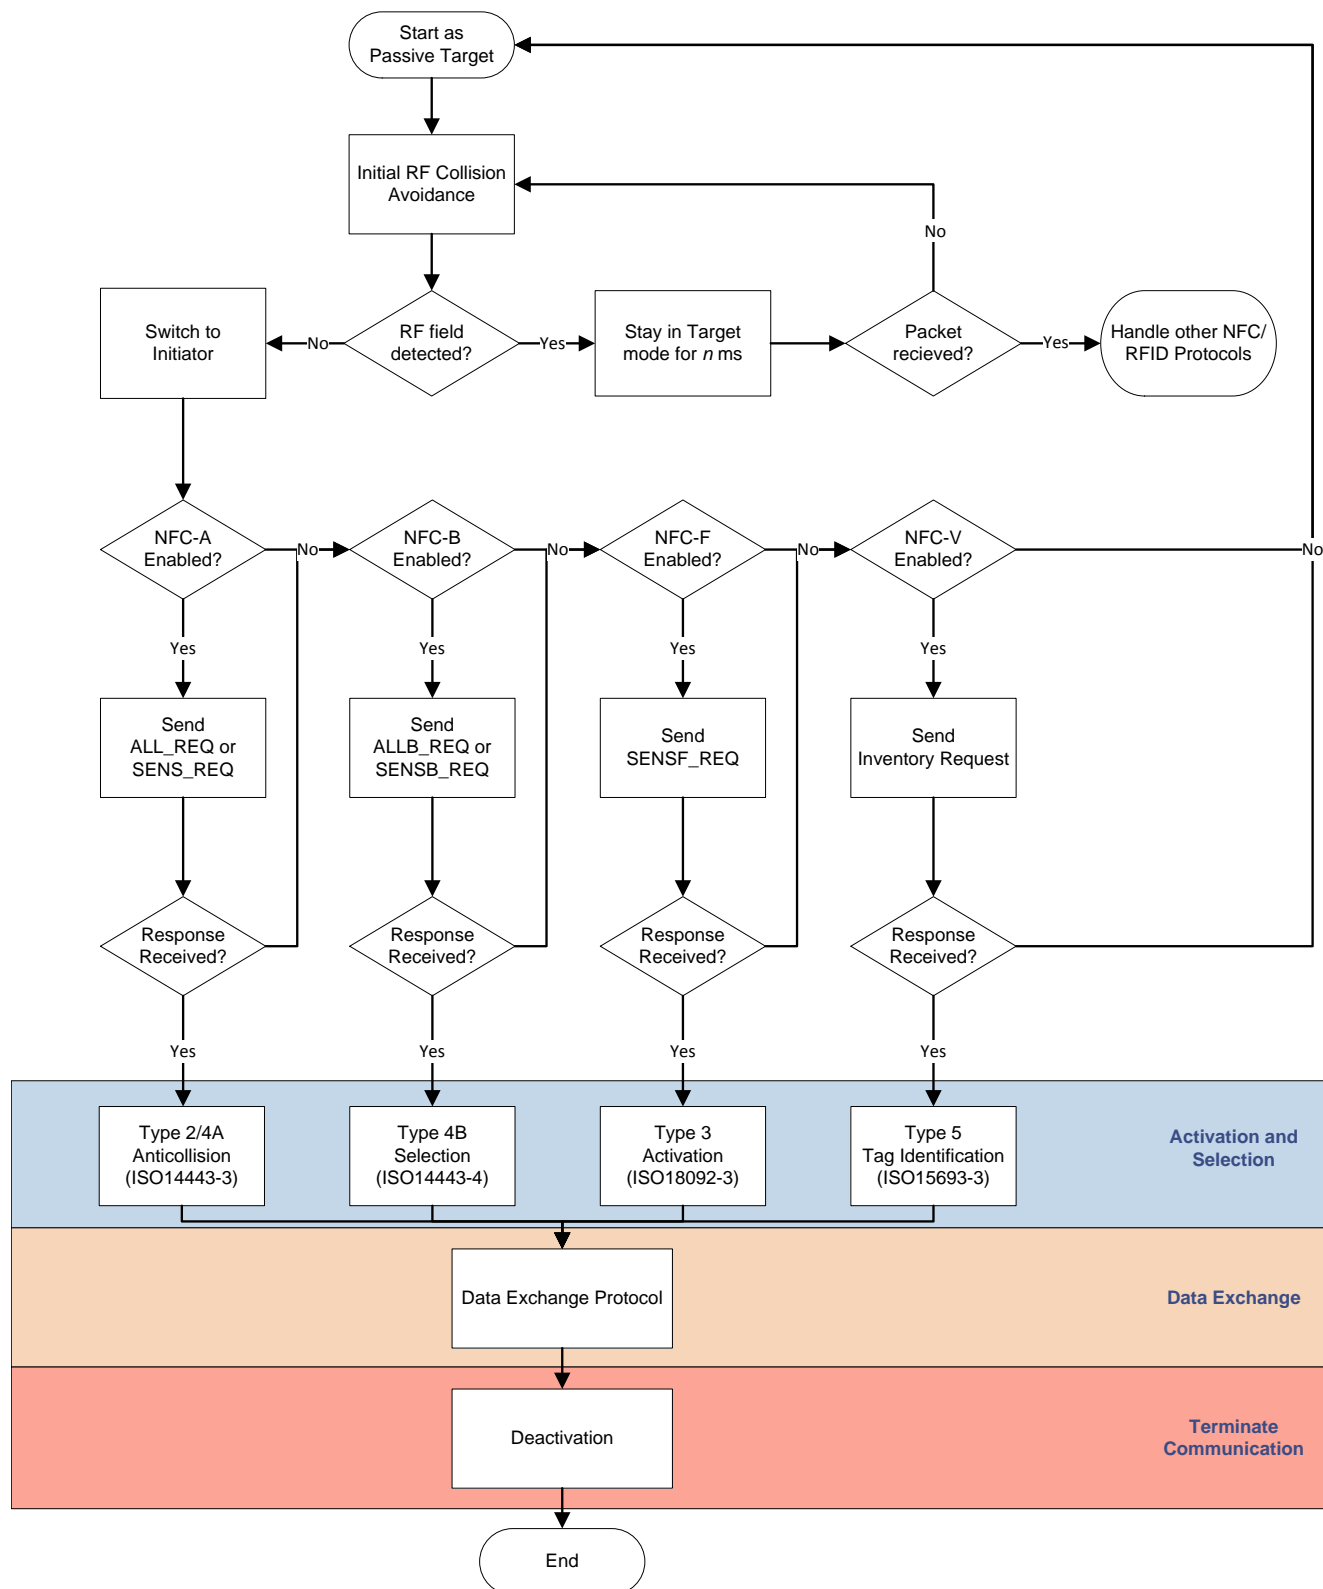


Figure 1. : TIDM-NFC-RW System Flow Diagram

1.1 NFC/HF RFID Transceiver

1.1.1 TRF7970A

The TRF7970A device is an integrated analog front end and data-framing device for a 13.56-MHz Near Field Communication (NFC) or HF RFID system. Built-in programming options make the device suitable for a wide range of applications for proximity and vicinity identification systems.

The device can perform in one of three modes:

- NFC or HF RFID reader
- NFC peer
- Card emulation mode

Built-in, user-configurable programming options suit the device for a wide range of applications. In this reference design, the TRF7970A device is configured by the firmware automatically for each protocol and then used for reading or writing the NFC tag platforms presented into the vicinity or proximity of the resonant coil antenna connected to the TRF7970A.

The TRF7964A is also a pin-for-pin compatible device, which can drop into this reference design directly. The TRF7964A is used only for the reference design discussed in this guide (Reader/Writer mode).

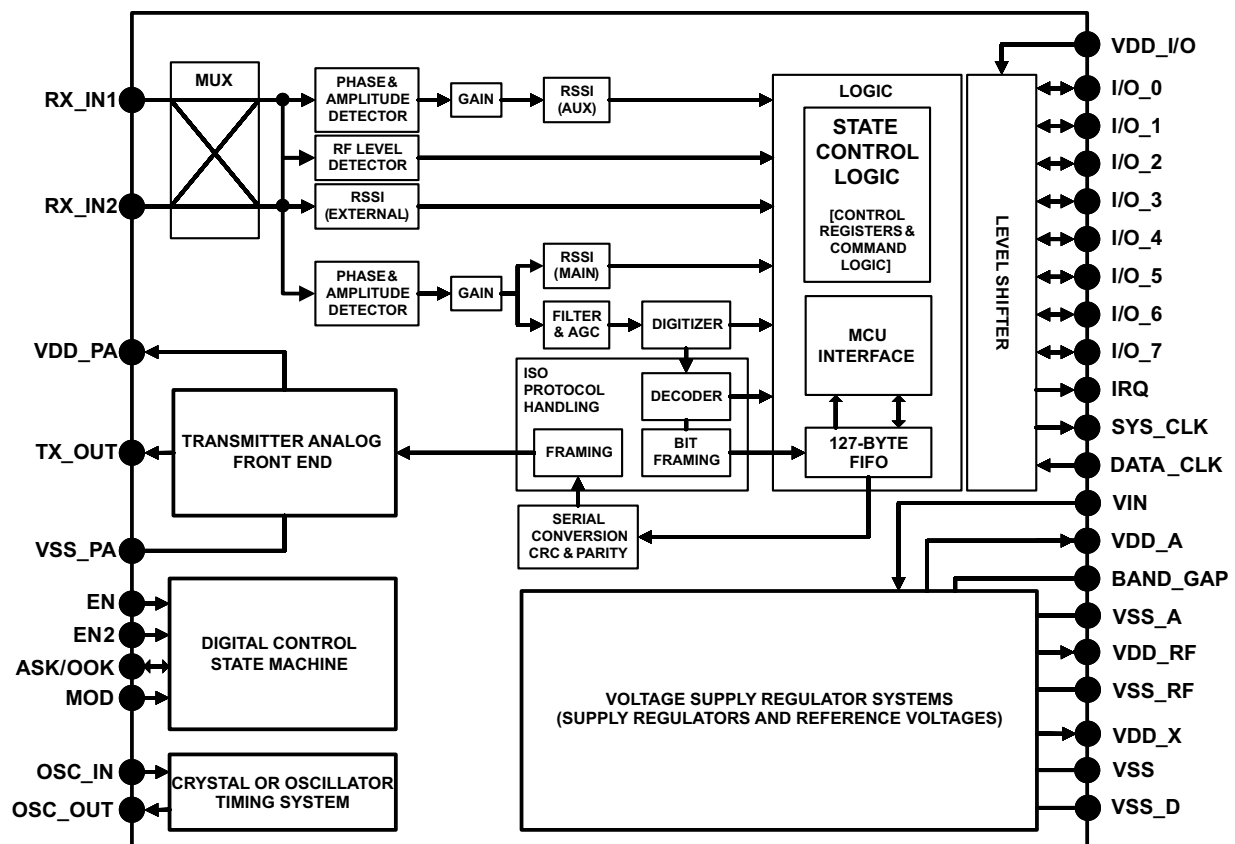


Figure 2. TRF7970A Block Diagram

1.2 Microcontroller Units (MCUs)

1.2.1 MSP430F5529

The MSP430F5xx family features a 16-bit microcontroller to operate the NFC firmware stack, using the eUSCI_B0 SPI peripheral to interface with the TRF7970A. [Figure 3](#) shows the MSP430F5xx block diagram.

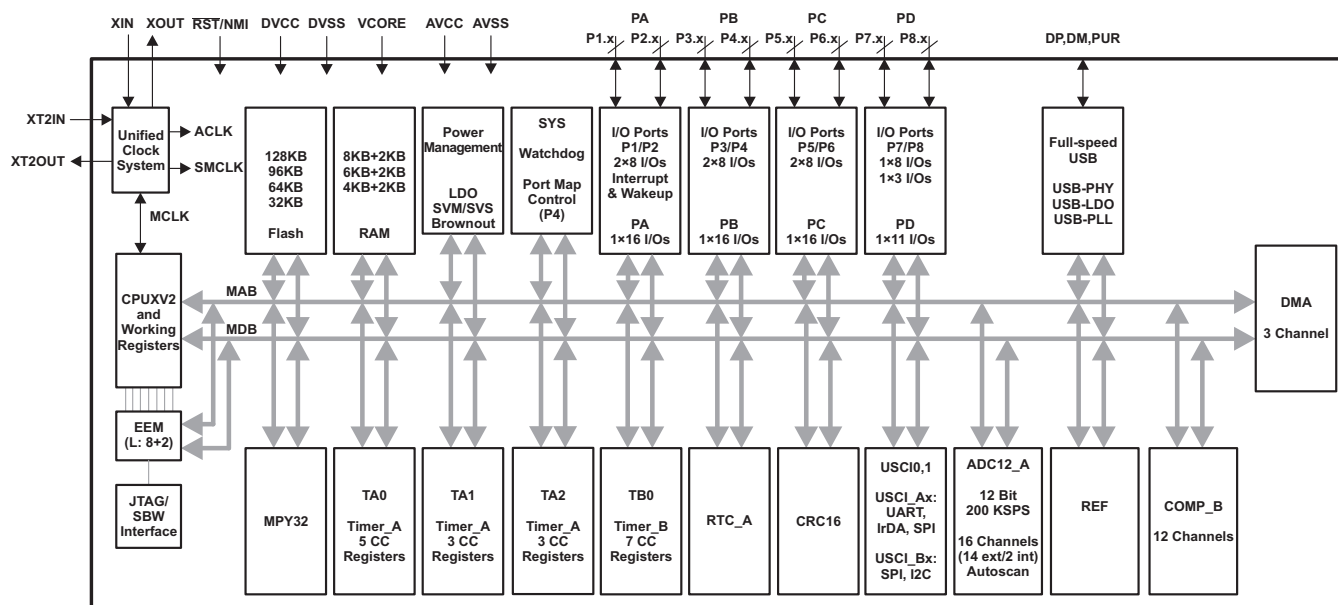


Figure 3. MSP430F5xx Block Diagram

1.2.2 MSP432P401M

The MSP432P401x family features the ARM® Cortex®-M4 processor to operate the NFC firmware stack. This 32-bit MCU also uses eUSCI_B0 SPI peripheral to interface with the TRF7970A. [Figure 4](#) shows the MSP432 block diagram.

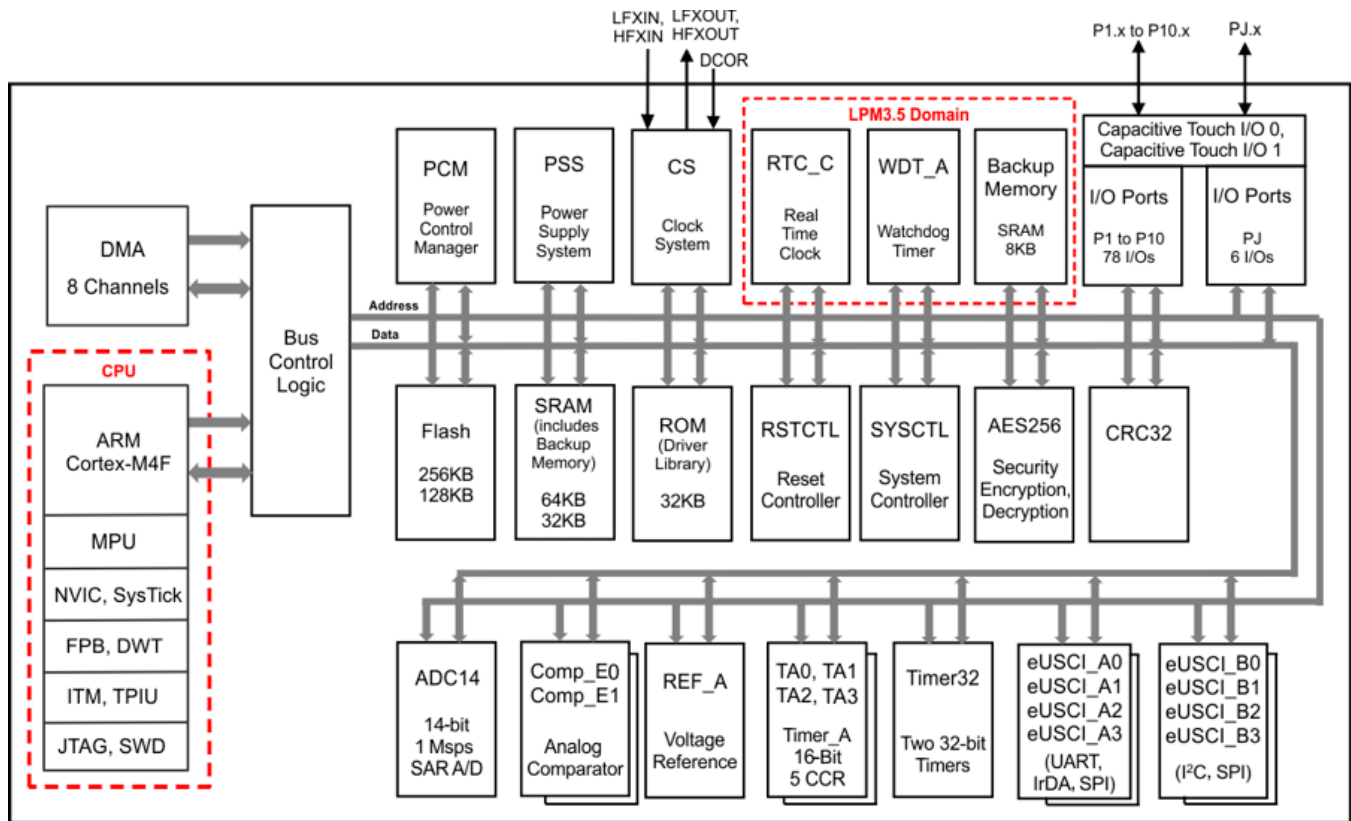


Figure 4. MSP432 Block Diagram

1.3 Boost Converter

1.3.1 TPS61222DCKT

The TPS61222DCKT is a high-performance and high-efficiency boost converter used on the TRF7970ATB plug-in module to take in 3.3-V DC from the MSP-EXP430F5529 board and create 5-V DC. This is used for VIN potential to the TRF7970A, which allows the transceiver to be operated at full power out (200 mW). The -DCKT variant of the device is used to keep the bill of materials of the module to a minimum. [Figure 5](#) shows the TPS61222DCKT functional block diagram.

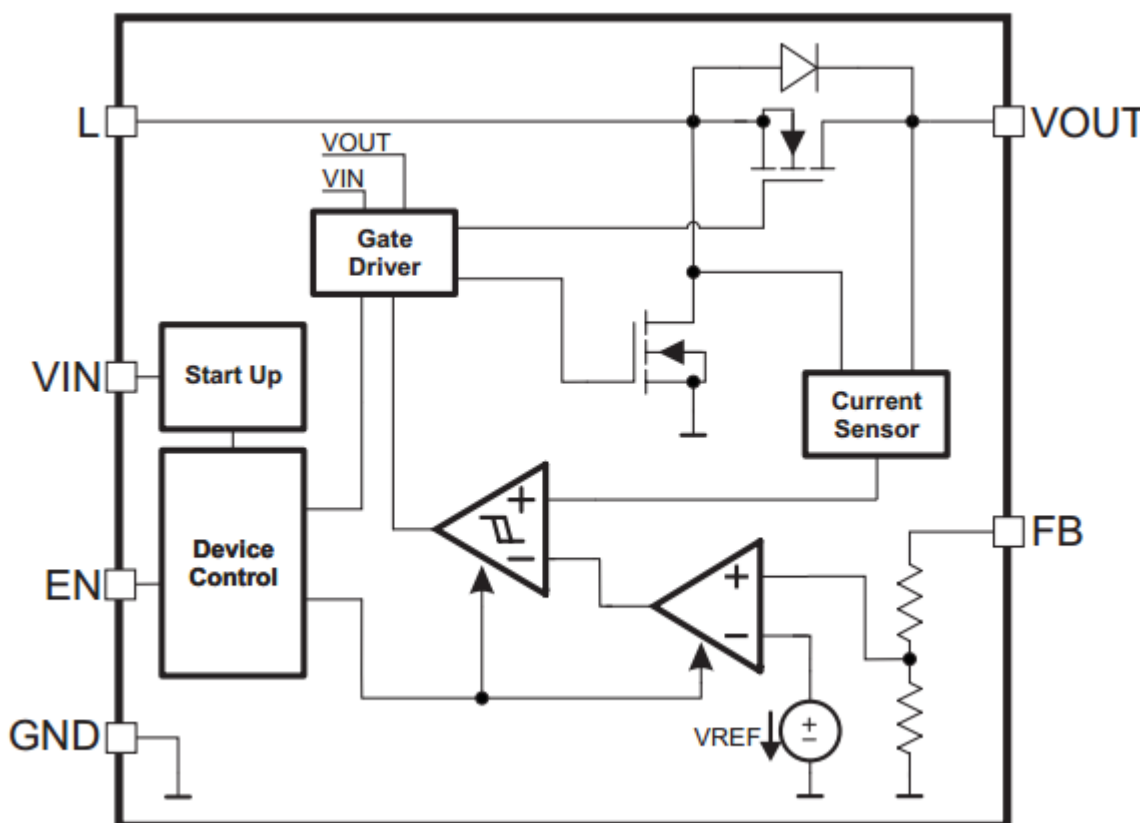


Figure 5. TPS61222DCKT Functional Block Diagram (Fixed Output Version)

2 System Block Diagrams

[Figure 6](#) and [Figure 7](#) show the system hardware block diagram and system firmware layers including PHY (TRF7970A), respectively.

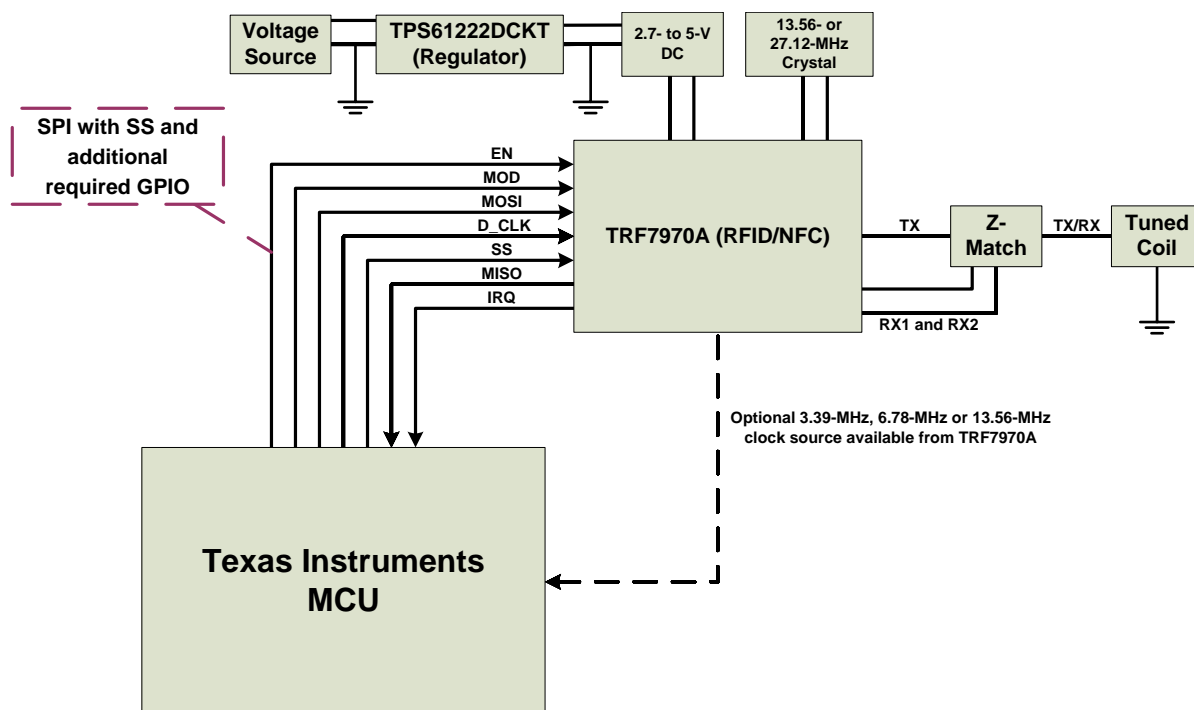


Figure 6. System Hardware Block Diagram

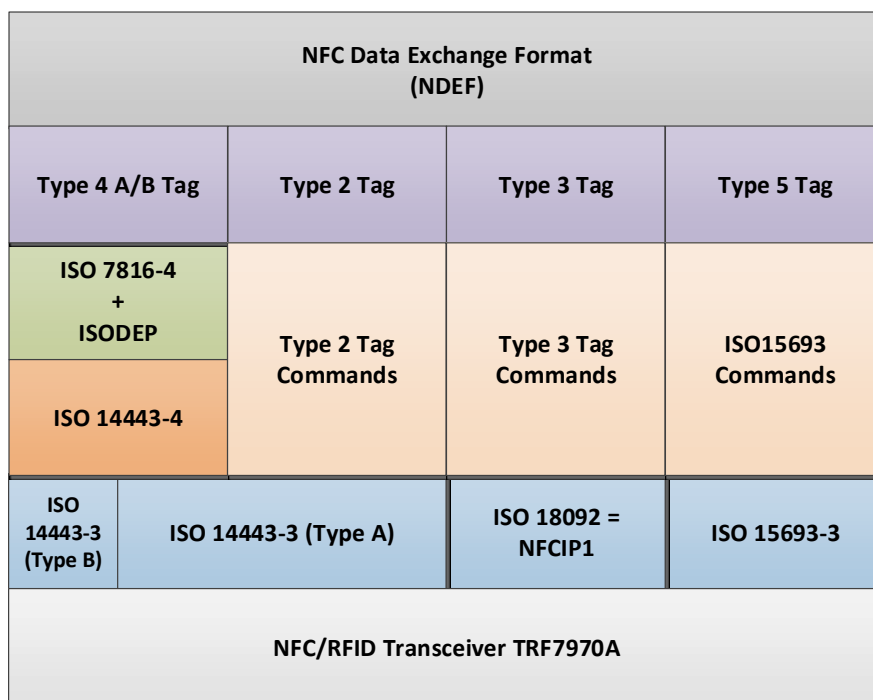


Figure 7. System Firmware Layers, Including PHY (TRF7970A)

3 Theory of Operation

3.1 Operational Overview

The current Reader/Writer demo on the MSP430F5529 device has two modes:

- A stand-alone mode
- A host mode which requires a system (PC typically) to run the TI NFC Tool GUI

The stand-alone mode can be configured for specific bit rates for each supported tag technology:

- Type 2/4A @ 106/212/424/848 kbps (data rate used depends on if tag supports)
- Type 3 @ 212/424 kbps
- Type 4B @ 106/212/424/848 kbps (data rate used depends on if tag supports)
- Type 5 @ 26.48 kbps

The order in which the firmware polls for the different tag technologies is NFC-A (Type 2/4A), NFC-B (Type 4B), NFC-F (Type 3), and NFC-V (Type 5). If no tags are detected, the polling circles back to NFC-A (Type 2/4A) (see [Figure 27](#) for the switching mechanism while in standalone mode). Polling commands for NFC-A and NFC-B must be sent at 106 kbps, and then the bit rate can be increased after anticollision is completed. For more information, see [Figure 8](#).

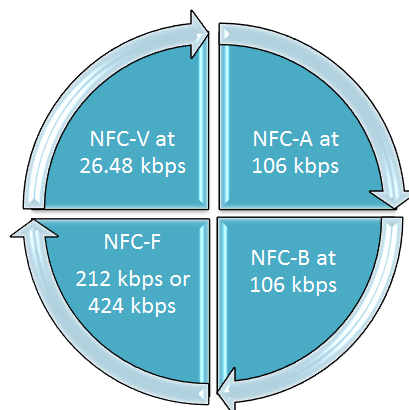


Figure 8. Reader/Writer Polling Mechanism

The second mode requires a host (PC) to run the TI NFC Tool GUI and then connect to either the MSP430F5529 Experimenter's Board or LaunchPad™ through the USB CDC (see [Figure 28](#)), or the MSP432P401 LaunchPad through the back channel UART interface (see [Figure 29](#)). The GUI lets the user select which modes to enable or disable. When a connection is established with an NFC-enabled device, the GUI switches to the Reader/Writer tab that lets the user view the tag data and send a customized Text or URI RTD for NDEF-formatted tags.

3.2 MSP430F5529-Based System

The MSP430F5529-based systems are using a built-in USB feature of the MCU to communicate with the host, SPI module, and GPIOs to communicate with the TRF7970A and GPIOs to control the LEDs onboard the BoosterPack™ and the LaunchPad used by this reference design. For more information, see [Figure 9](#).

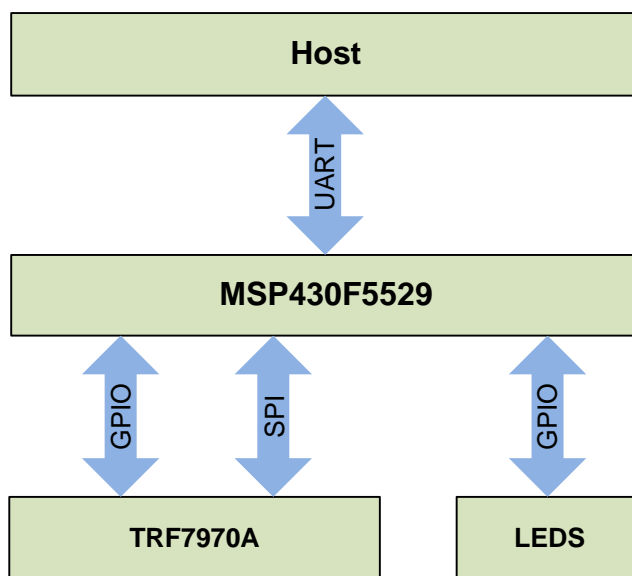


Figure 9. Reader/Writer Demo System Block Diagram for MSP430F5529

3.3 MSP432P401-Based System

The MSP432P401-based systems are using a built-in UART feature of the MCU to communicate with the host, SPI module, and GPIOs to communicate with the TRF7970A and GPIOs to control the LEDs onboard the BoosterPack and the LaunchPad used by this reference design. For more information, see [Figure 10](#).

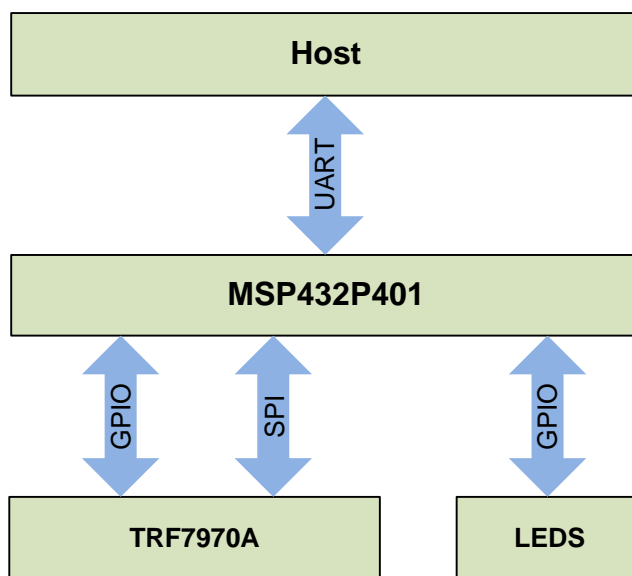


Figure 10. Reader/Writer Demo System Block Diagram for MSP432P401

4 Getting Started Hardware

4.1 LaunchPad/BoosterPack Configurations

4.1.1 MSP-EXP430F5529LP + DLP-7970ABP

The MSP-EXP430F5529LP LaunchPad is an easy-to-use evaluation module for the MSP430F5529 USB microcontroller. The EVM contains everything needed to start development, including onboard emulation for programming and debugging, as well as onboard buttons and LEDs for quickly adding a simple user interface. Rapid prototyping is easy, thanks to 40-pin access headers and a wide range of BoosterPack plug-in modules. This enables technologies such as wireless, display drivers, temperature sensing, and much more.

The DLP Design NFC/RFID BoosterPack (DLP-7970ABP) is an add-on board designed to fit all of TI's MCU LaunchPads. This BoosterPack lets the software application developer get familiar with the functionalities of TRF7970A Multi-Protocol Fully Integrated 13.56-MHz NFC/HF RFID IC on their TI embedded microcontroller platform of choice without designing the RF section.



Figure 11. MSP-EXP430F5529LP + DLP-7970ABP Configuration

See the TI store bundle at <https://store.ti.com/nfclink-bndl.aspx>.

4.1.2 MSP-EXP432P401R + DLP-7970ABP

The MSP432P401R LaunchPad enables you to develop high-performance applications that benefit from low-power operation. The device features the MSP432P401R, which includes a 48-MHz ARM-Cortex M4F processor, 95- μ A/MHz active power and 850-nA RTC operation, 14-bit 1MSPS differential SAR ADC and AES256 accelerator. This LaunchPad includes an on-board emulator with EnergyTrace™+ Technology, which means projects can be programmed and debugged without the need for additional tools, while also measuring total system energy consumption

DLP-7970ABP is also used with this LaunchPad, as previously mentioned; the DLP-7970ABP is a part of the LaunchPad/BoosterPack eco-system. For more information, see [Figure 12](#).

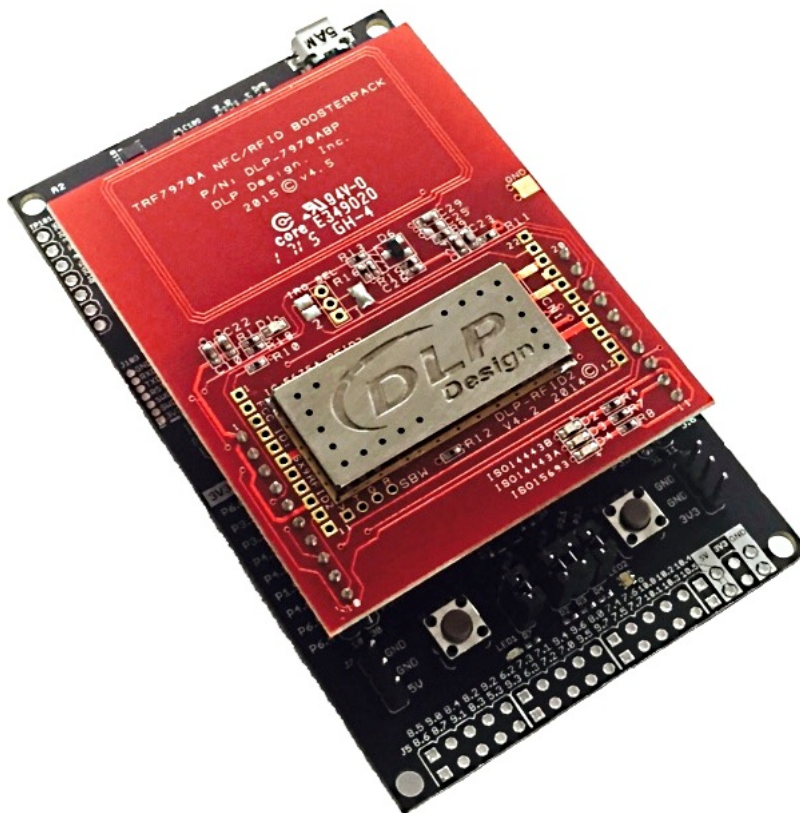


Figure 12. MSP-EXP432P401RLP + DLP-7970ABP Configuration

See the TI store bundle at <https://store.ti.com/NFCLINK-BNDL-MSP432.aspx>.

4.2 Experimenter's Board and Target Board Configuration

4.2.1 MSP-EXP430F5529 + TRF7970ATB

The MSP430F5529 Experimenter's Board (MSP-EXP430F5529) is a development platform for the MSP430F5529 device, from the latest generation of MSP430™ devices with integrated USB. The board is compatible with many TI low-power RF wireless evaluation modules such as the TRF7970ATB module. The Experimenter Board helps designers quickly learn and develop using the new F55xx MCUs, which provide the lowest active power consumption of the industry, integrated USB, and more memory and leading integration for other applications, such as energy harvesting, wireless sensing, and automatic metering infrastructure (AMI).

The TRF7970ATB Evaluation Module helps the software application developer become familiar with the functionalities of TRF7970A Multi-Protocol Fully Integrated 13.56-MHz NFC/HF RFID IC with the freedom to develop with any TI MCU. The MSP-EXP430F5529 Experimenter's Board is an example of a development platform. Alternatively, use any other TI embedded microcontroller platform with the EM socket headers populated. The TRF7970ATB is hardwired for SPI communications, supports slave select, TRF7970A Direct Mode 2 (default), Direct Mode 1, and Direct Mode 0 operations. You can also access and gain full control over the TRF7970A EN2 and EN lines, allowing for design and development of ultralow-power, high-frequency (HF) RFID/NFC systems. The module has an onboard boost converter ([TPS61222DCKT](#)) that boosts 3.3 VDC to 5 VDC out to TRF7970A IC for 23-dBm (full transmitter power out) operations. For more information, see [Figure 13](#).

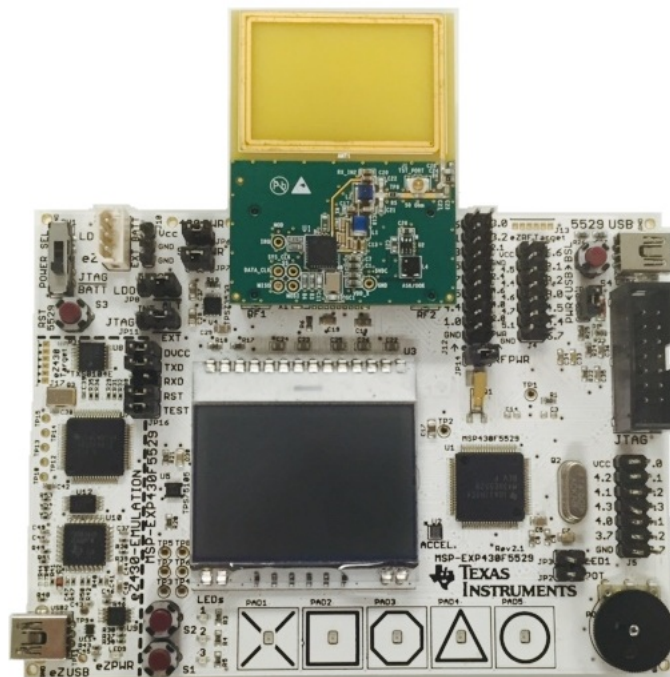


Figure 13. MSP-EXP430F5529 + TRF7970ATB Configuration

See the TI store bundle at <https://store.ti.com/NFCLink-Evaluation-Kit-P4617.aspx>.

5 Out-of-the-Box Experience

This section covers the steps to load and run the TI NFC Tool Reader/Writer demo with the MSP-EXP430F5529 and DLP-7970ABP. Use these steps for the other hardware platforms.

1. Download the installer from <http://www.ti.com/lit/zip/sloa227>.
2. Extract the installer.
3. Open the installer.
4. Connect the DLP-7970ABP to the MSP430F5529 LaunchPad (see [Figure 14](#)).

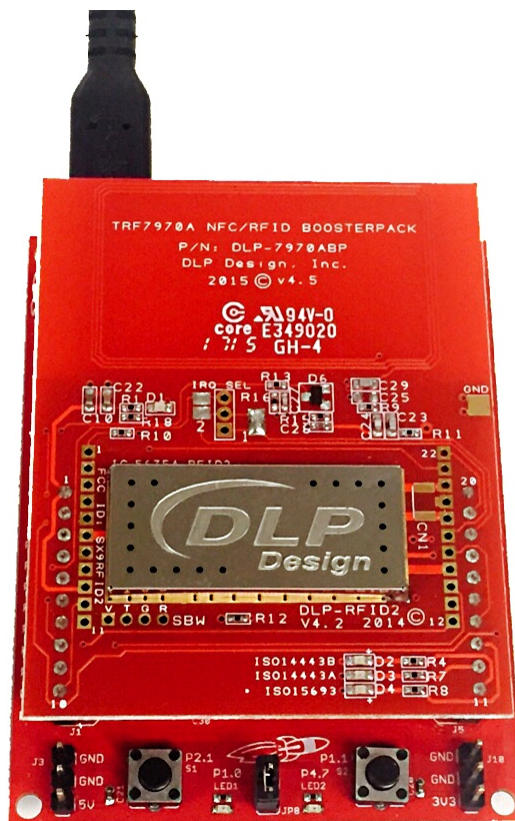





Figure 14. Hardware Configuration (MSP-EXP430F5529LP + DLP-7970ABP)

5. Open Code Composer Studio.
6. Import the Reader/Writer project from the location where the installer placed the project (for example, the default location is: C:\ti\msp430\TRF7970A_RW_1.02.03\examples\boards\MSP-EXP430F5529LP for the other hardware configurations back up one to ...boards).

7. Click  (this button compiles the code and downloads it to the MSP430).
8. Click  when the project is loaded (this executes the code).
9. Click  when the code is running.

NOTE: If CCS is unavailable, use Uniflash (http://processors.wiki.ti.com/index.php/Category:CCS_UniFlash) to load the compiled code project into the target MCU board.

10. Run Uniflash when it is installed.

11. Navigate to File→New Configuration (see [Figure 15](#)).

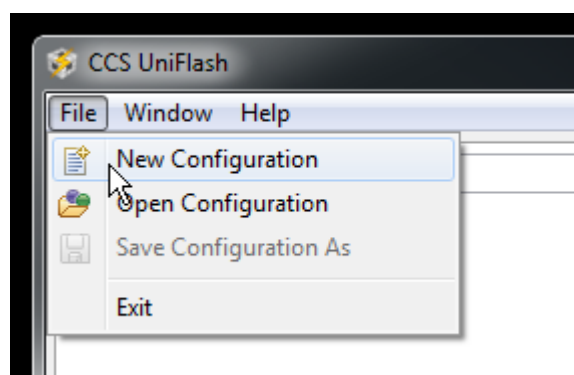


Figure 15. UniFlash New Configuration Drop-down Menu

12. Choose TI MSP430 USB1 and MSP430F5529 (or other target MCUs).
13. Click OK (see [Figure 16](#)).

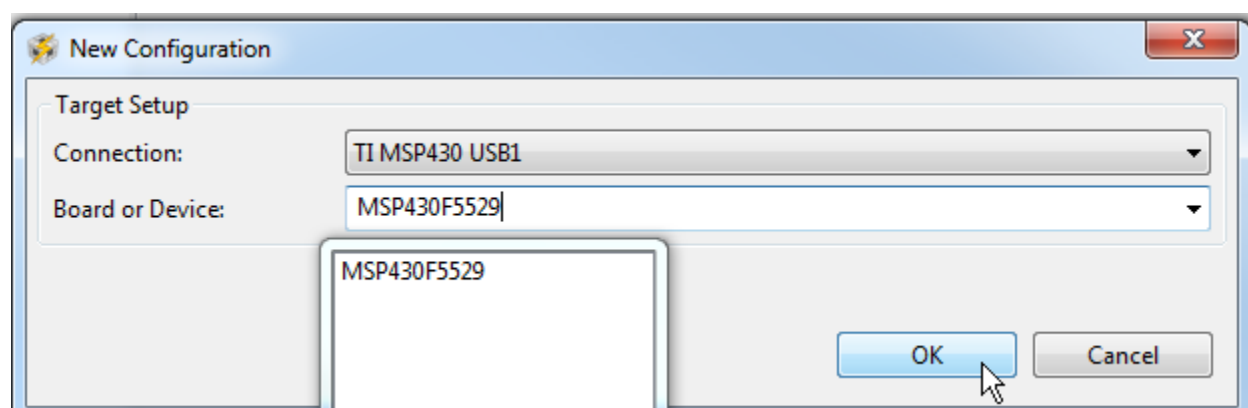


Figure 16. UniFlash Target Setup Menu

NOTE: If UniFlash requests to update the emulator, update it.

14. Choose Load Program from the Program drop-down menu (see [Figure 17](#)).

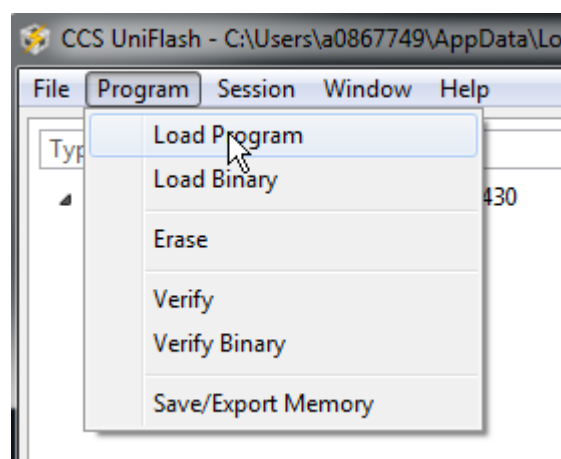


Figure 17. UniFlash Program Dropdown Menu

15. Navigate to the path for Target Binary File (in this case for MSP430F5529 on LaunchPad).

16. Click OK (see [Figure 18](#)).

NOTE: The installer uses the following default location:
C:\ti\msp430\TRF7970A_RW_1.02.03\examples\boards\MSP-
EXP430F5529LP\F5529LP_TRF7970A_ALL_NFC_MODES\Debug

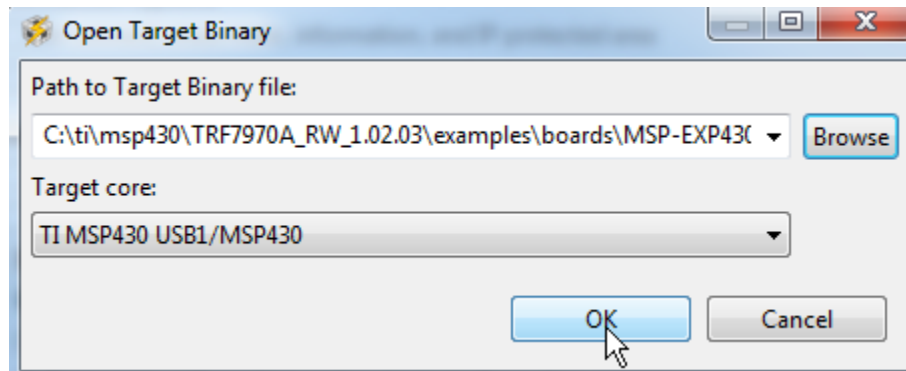


Figure 18. Path to Target Binary File

NOTE: The UniFlash tool loads the program into the MCU flash.

17. Exit the program.
18. Remove the USB connector.
19. Replace the USB connector.
20. Choose from the following modes:
 - For the basic Stand-alone Reader mode, do as follows:
 - (a) Present any supported NFC/HF RFID tag to the DLP-7970ABP antenna.
 - (b) Observe that D2 (blue LED, silkscreened ISO 14443B) on DLP-7970ABP is lighted while reading any supported NFC/HF RFID tag.
 - For advanced Stand-alone Reader mode, use the NFC TI Tool GUI as follows:
 - Option 1
 - (a) Open the NFC TI Tool GUI.

NOTE: By default, the installer places the NFC TI Tool GUI in a folder named C:\ti\msp430\TRF7970A_RW_1.02.03\tools\TI NFC Tool\TI NFC Tool\bin\Debug. This folder is in a folder named Texas Instruments on the Programs file list. See [Figure 19](#).

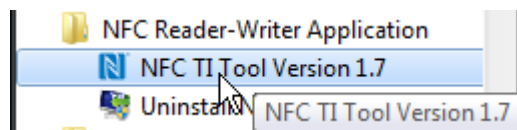


Figure 19. NFC TI Tool v1.7 Executable

- (b) Select the COM Port from drop-down menu.

- (c) Click Connect (see [Figure 20](#)).

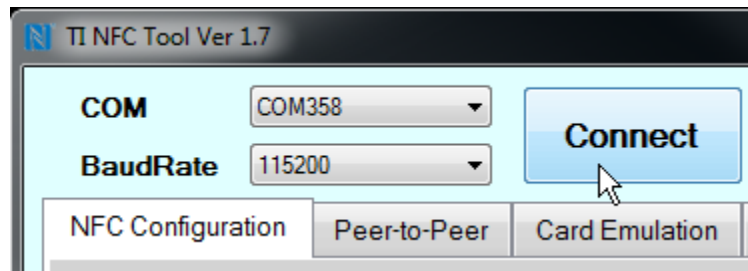


Figure 20. Manual COM Port Selection

- Option 2
 - (a) Select Hardware platform from drop-down menu.
 - (b) Click Auto Connect (see [Figure 21](#)).

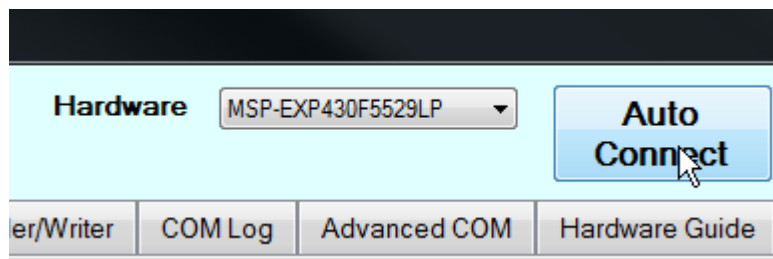


Figure 21. Automatic COM Port Selection

NOTE: When Hardware platform and GUI are connected, the bottom-left corner of the screen shows this status and the firmware version loads. See [Figure 22](#).

 


Figure 22. Connection Status With Firmware Version

- (c) Select the Reader/Writer Protocol modes.

- (d) Click Start RW (see [Figure 23](#) where all modes are selected).

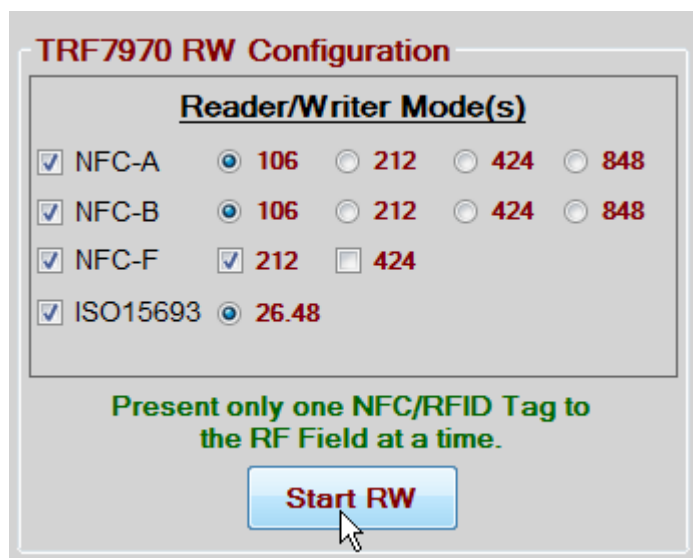


Figure 23. Reader/Writer Protocol Mode Selection

- (e) Present any NDEF-formatted NFC to the DLP-7970A BoosterPack Antenna (see [Figure 24](#)).

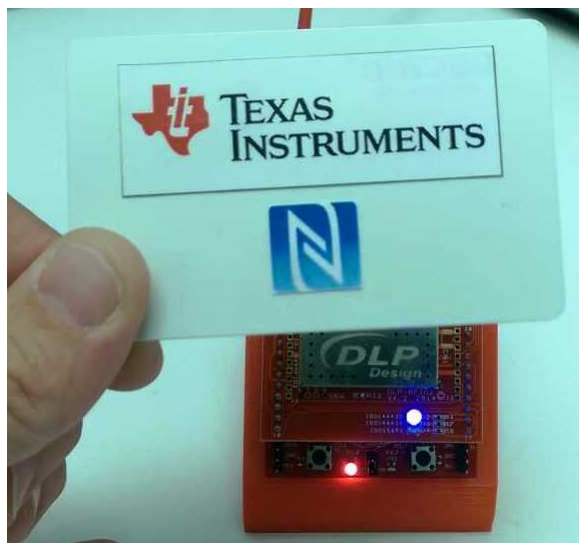


Figure 24. NFC Type 5 Tag Platform Presented to Hardware Platform Antenna

NOTE: Reading Tag Data: Tag data is output into the Tag Content pane in the Reader/Writer tab of the GUI. NDEF messages that are text or URI RTDs are automatically parsed. All other messages display in raw hex. Tag Type, tag response data rate, technology, RSSI value and UID, PUPi, or ID2 are displayed on upper left-hand side of the Reader/Writer tab window. See [Figure 25](#).



Figure 25. Reading NDEF Content of NFC Type 5 Tag Platform (URI RTD)

- (f) Select either the Text or the URI tab in the Tag Write pane within the Reader/Writer tab of the GUI.
- (g) Type a message.
- (h) Click Write.

NOTE: If the write was successful, a message appears in the Tag Content pane.

- (i) Remove the tag from the field.

(j) Present the tag to read the new NDEF message (see [Figure 26](#) and [Figure 27](#)).

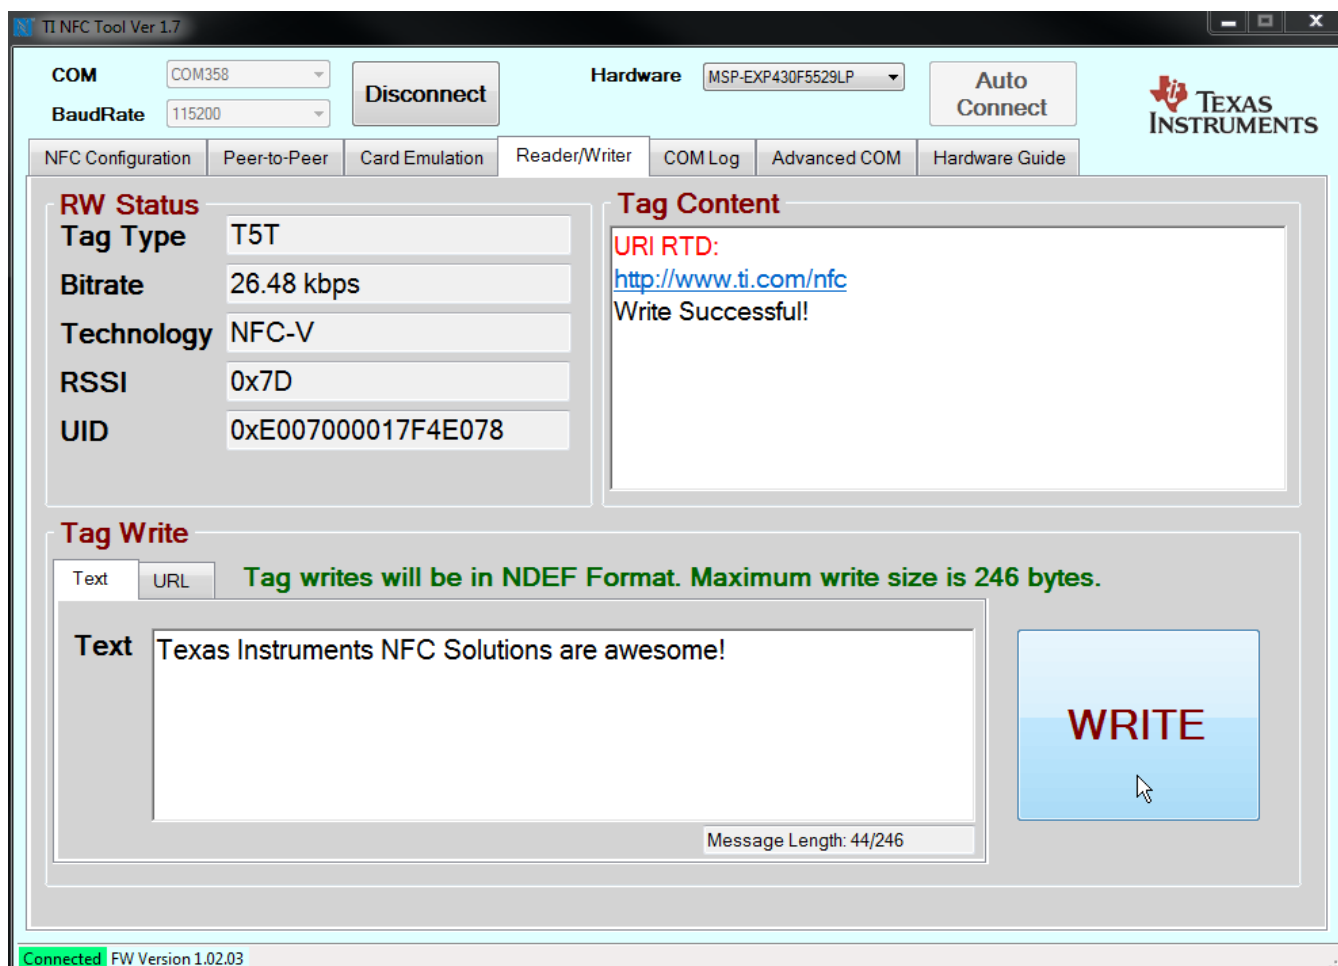


Figure 26. Writing New NDEF Message and RTD Type (Text RTD)

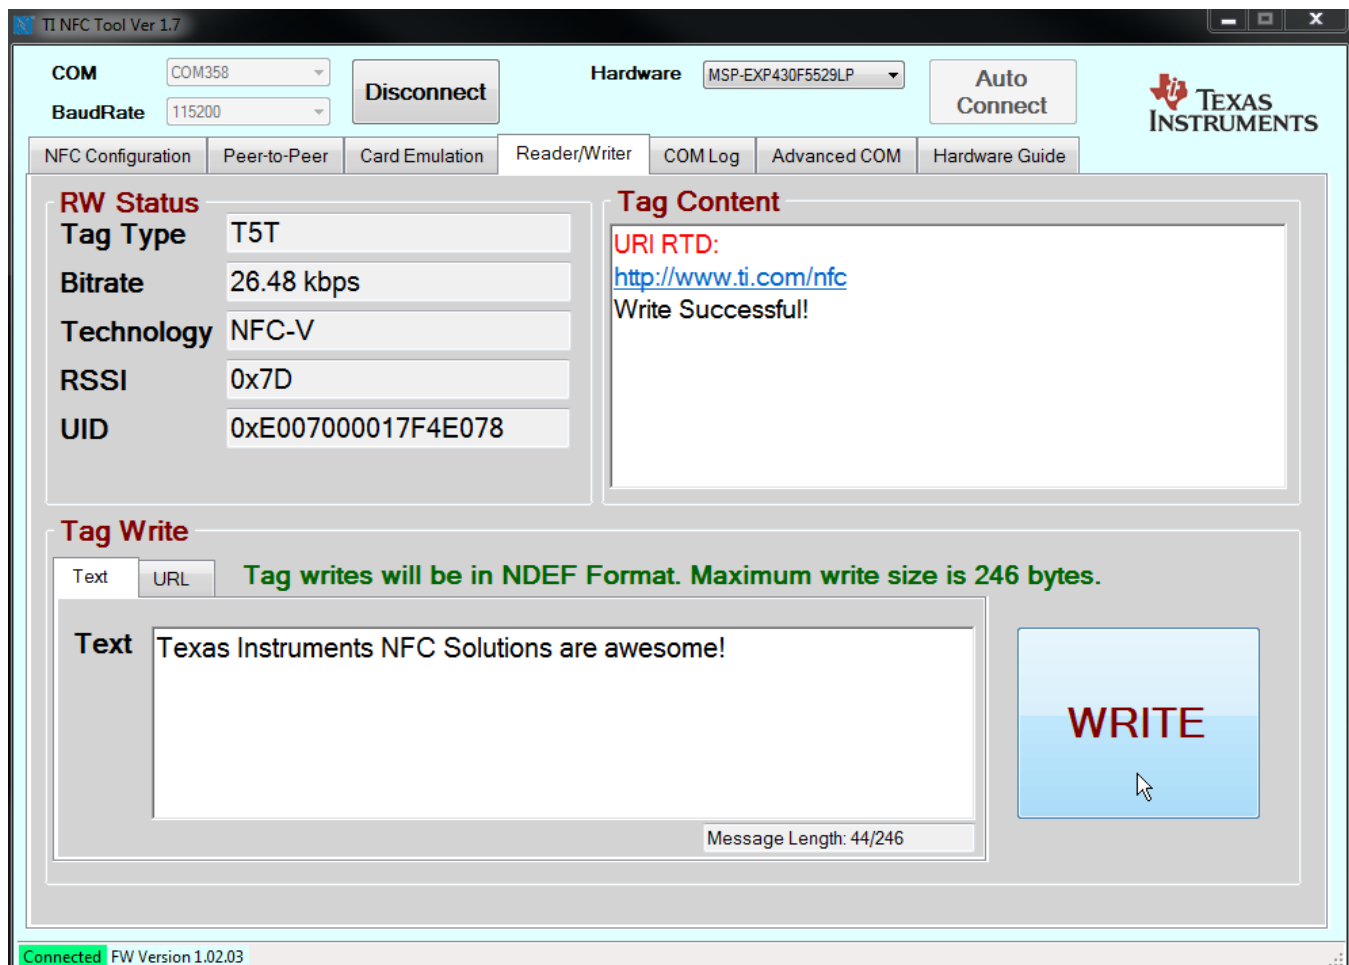


Figure 27. Reading the New NDEF Message

NOTE: When you press Disconnect, the Reader/Writer modes that are enabled are retained and the system operate as it does in standalone mode.

- (k) Press the RST button or power cycle the USB connection to reset the board and restore the default program (see [Figure 28](#)).

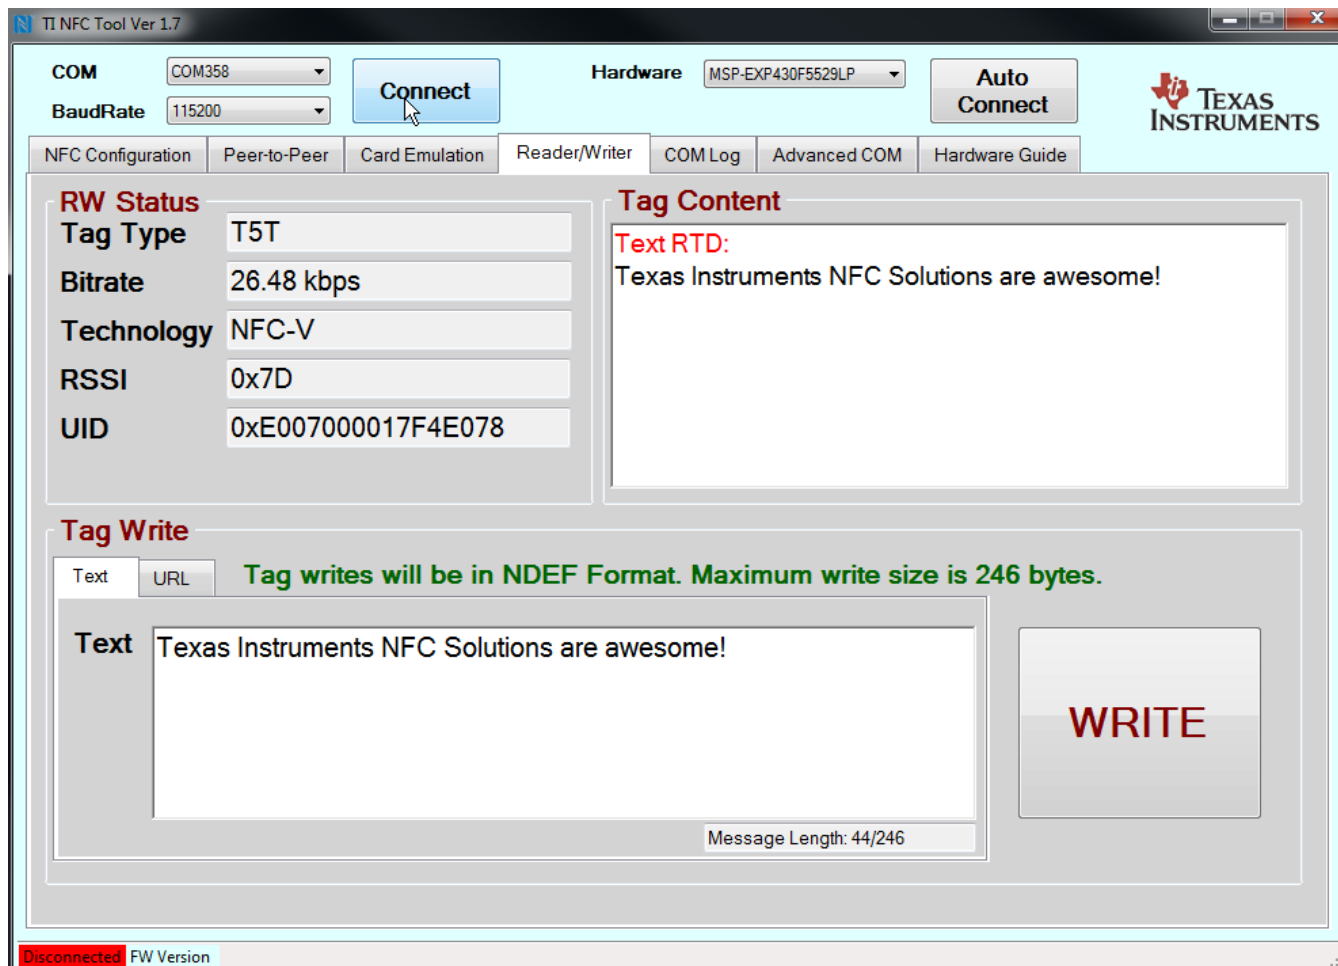


Figure 28. GUI Disconnected from NFC Hardware Platform

6 Getting Started With the NFCLink (Stand-alone) Tool Firmware

6.1 Introduction

This section explains the APIs in the NFC/RFID layer (see [Figure 29](#)) that initializes and handles the Reader/Writer communication. This section also covers how to implement a Reader/Writer application that can send and receive NDEF message to and from an NFC-enabled device.

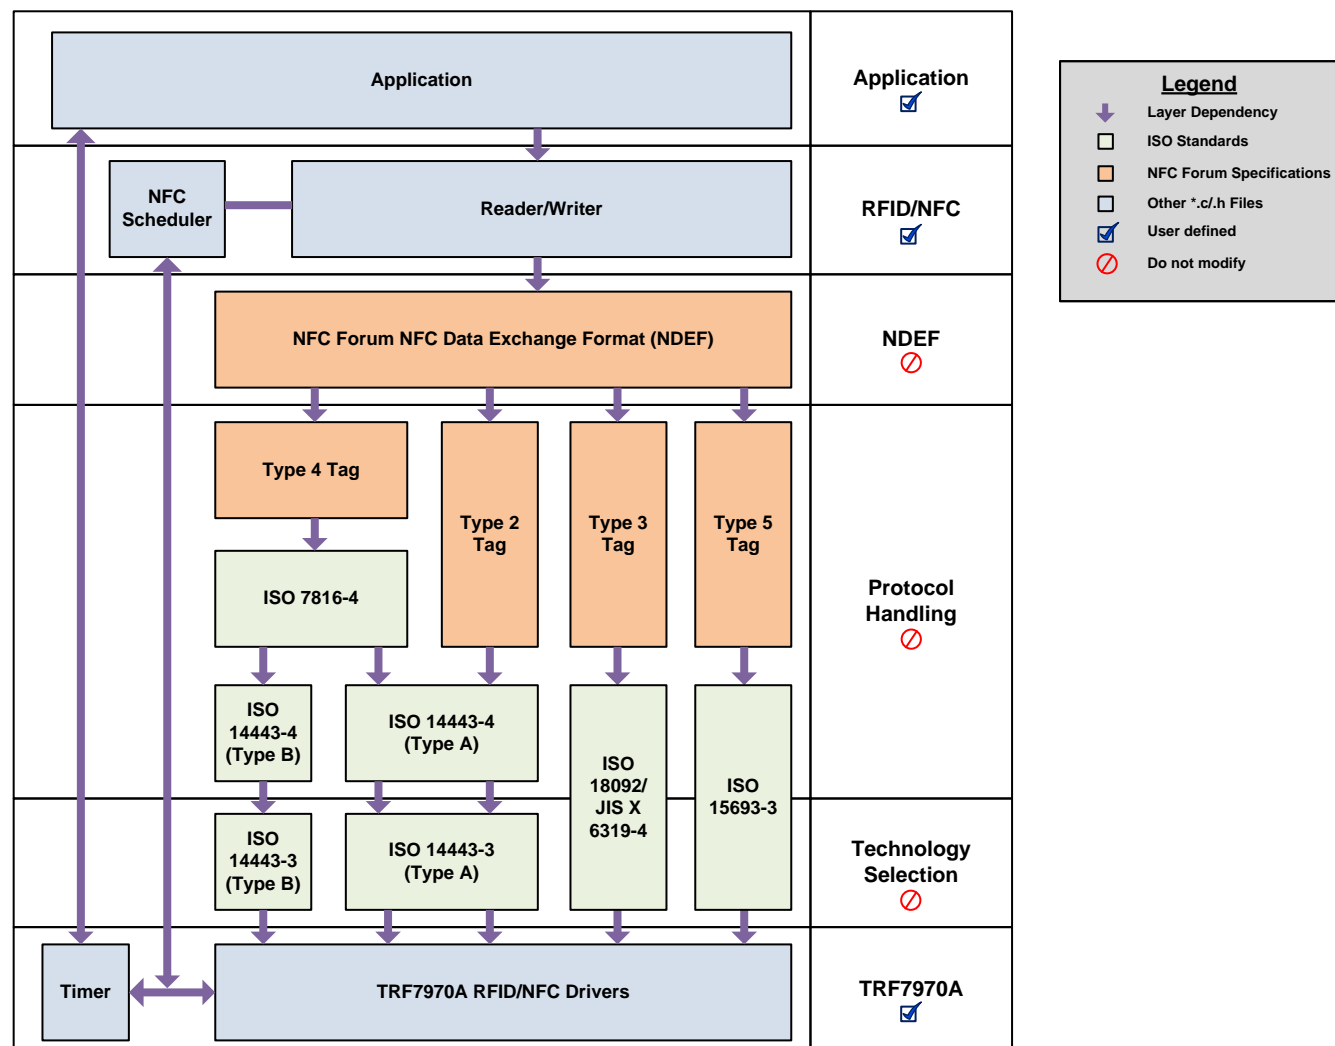


Figure 29. NFCLink (Standalone) R/W NFC Stack Architecture

6.2 Using and Implementing the Reader/Writer Sample Application

This section explains how to implement a Reader/Writer sample application that uses the S1 and S2 buttons on the MSP430F5529 Experimenter's Board to send different NDEF messages to an NFC-enabled device. [Table 1](#) and [Table 2](#) list the connections between the MSP430F5529 and the TRF7970A for the different MSP430F5529 evaluation platforms. [Table 3](#) lists the connections between the MSP432P401R and the TRF7970A for the MSP430P401R LaunchPad.

Table 1. DLP-7970ABP BoosterPack + MSP-EXP430F5529LP Hardware Connections

DLP-7970ABP Pins	MSP430F5529 LaunchPad Pins
TRF7970A EN1	P4.1
TRF7970A EN2	N/A
TRF7970A IRQ	P2.2 ⁽¹⁾
MOSI	P3.0
MISO	P3.1
CLK	P3.2
Slave Select	P4.2
I/O_2	P6.6 ⁽²⁾
I/O_3	P2.0 ⁽²⁾
I/O_5	P1.6 ⁽²⁾

⁽¹⁾ IRQ is defaulted to P3.0 for DLP-7970ABP V4.5 and newer ([SLOA226](#)).

⁽²⁾ Pin is only needed for using Special Direct Mode.

Table 2. TRF7970ATB + MSP-EXP430F5529 Experimenter's Board Hardware Connections

TRF7970ATB Pins	MSP430F5529 EXP Board Pins
TRF7970A EN1	P2.3
TRF7970A EN2	N/A
TRF7970A IRQ	P2.0 ⁽¹⁾
MOSI	P3.0
MISO	P3.1
CLK	P3.2
Slave Select	P2.6
MOD	P2.1
ASK/OOK	P4.7

⁽¹⁾ Requires a jumper between P2.0 and P4.0 on the Experimenter's Board.

Table 3. DLP-7970ABP + MSP-EXP432P401R LaunchPad Hardware Connections

DLP-7970ABP Pins	MSP432P401R LaunchPad Pins
TRF7970A EN1	P6.2
TRF7970A EN2	N/A
TRF7970A IRQ	P3.0 ⁽¹⁾
MOSI	P1.6
MISO	P1.7
CLK	P1.5
Slave Select	P6.5
I/O_2	P4.3 ⁽²⁾
I/O_3	P2.5 ⁽²⁾
I/O_5	P4.1 ⁽²⁾

⁽¹⁾ IRQ defaults to P3.0 for DLP-7970ABP V4.5 and newer ([SLOA226](#)).

⁽²⁾ Pin is needed only for using Special Direct Mode.

6.3 Low-Level Initialization

For the low-level initialization, set the main clock frequency of the MSP430F5529 to 25 MHz to initialize the MCU in MCU_init(). The hardware connections of the TRF7970A and the SPI module of the MSP430F5529 (SPI clock running at 2 MHz) is initialized in TRF79x0_Init(). The NFC_init must then be called to initialize all variables within the NFC stack. When the NFC stack is initialized, calling the NFC_configuration function that sets up the NFC stack to enable the TRF7970A for the desired modes of communication to configure the stack. You can customize the enabled NFC modes by either modifying the function within the firmware or by using the PC GUI interface. See the following MCU and TRF7970A initialization code snippet for an example of how to initialize the TRF7970A in the main(void) program of a C project.

```
#include "msp430.h"
#include "nfc_controller.h"
#include "ndef_image.h"
#include "tag_header.h"

uint8_t g_ui8SerialBuffer[265];

t_sNfcRWMode g_sRWSupportedModes;
t_sNfcRWCommBitrate g_sRWSupportedBitrates;
t_sIsoDEP_RWSetup g_sRWSetupOptions;
uint8_t g_ui8IsoDepInitiatorDID;

uint8_t g_ui8TxBuffer[256];
uint8_t g_ui8TxLength;

void main(void)
{
    tNfcState eTempNFCState;
    tNfcState eCurrentNFCState;
    char pcBytesReceivedString[5];

    // Reader/Writer Variables
    t_sNfcRWMode sRWMode;
    t_sNfcRWCommBitrate sRWBitrate;

    // Initialize MCU
    MCU_init();

    // Enable interrupts globally
    __enable_interrupt();

    // Initialize USB Communication
    Serial_init();

    // Initialize TRF7970
    TRF79x0_init();

#ifdef MSP430F5529_EXP_BOARD_ENABLED
    Buttons_init(BUTTON_ALL);
    Buttons_interruptEnable(BUTTON_ALL);
#endif

    TRF79x0_idleMode();

    // Initialize the NFC Controller
    NFC_init();

    // This function will configure all the settings for each protocol
    NFC_configuration();

    // Initialize the RW T2T, T3T, T4T and T5 state machines
    T2T_init(g_ui8TxBuffer,256);
    T3T_init(g_ui8TxBuffer,256);
```

```
T4T_init(g_ui8TxBuffer,256);
T5T_init(g_ui8TxBuffer,256);
```

6.4 Reader/Writer NFC Stack Configuration

Set the bits for each Reader/Writer mode with the sRWSupportedModes variable in the NFC_configuration function to initialize the Reader/Writer NFC stack. For each NFC mode, customize which bit rates are supported by the firmware. For the Reader/Writer Stack Configuration code, the sRWSupportedModes variable enables ISO 14443A/NFC-A with bit rates of 106 kbps and 848 kbps selected and ISO 15693 with a bit rate of 26.48 kbps selected.

For NFC-A and NFC-B, use the 106-kbps bit rate even if you desire higher bit rate because the tags can be selected only with 106-kbps communication. When the tag selection is complete, the firmware increases the bit rate provided if the higher bit rate is supported by the tag.

```
// Enable Reader Writer Supported Modes
g_sRWSupportedModes.bits.bNfcA = 1;
g_sRWSupportedModes.bits.bNfcB = 0;
g_sRWSupportedModes.bits.bNfcF = 0;
g_sRWSupportedModes.bits.bISO15693 = 1;

// NFC-A Bit rates
g_sRWSupportedBitrates.bits.bNfcA_106kbps = 1;    // Must be enabled if bNfcA is set
g_sRWSupportedBitrates.bits.bNfcA_212kbps = 0;
g_sRWSupportedBitrates.bits.bNfcA_424kbps = 0;
g_sRWSupportedBitrates.bits.bNfcA_848kbps = 1;

// NFC-B Bit rates
g_sRWSupportedBitrates.bits.bNfcB_106kbps = 0;    // Must be enabled if bNfcB is set
g_sRWSupportedBitrates.bits.bNfcB_212kbps = 0;
g_sRWSupportedBitrates.bits.bNfcB_424kbps = 0;
g_sRWSupportedBitrates.bits.bNfcB_848kbps = 0;

// NFC-F Bit rates
g_sRWSupportedBitrates.bits.bNfcF_212kbps = 0;
g_sRWSupportedBitrates.bits.bNfcF_424kbps = 0;

// ISO15693 Bit rates
g_sRWSupportedBitrates.bits.bISO15693_6_7kbps = 0;    // Not supported
g_sRWSupportedBitrates.bits.bISO15693_26_48kbps = 1;
```

6.5 Activation

After configuration, the NFC_run function is called to run the NFC stack that polls for the enabled technologies and then goes through activation and selection for the first tag from which it receives a reply. When the tag is properly activated and selected, the application calls the state machines required to read the data from the tag.

6.6 Reading and Writing Tags

Four state machines are available for reading and writing tags:

- T2T_stateMachine
- T3T_stateMachine
- T4T_stateMachine
- T5T_stateMachine

Because Type 4A and Type 4B tags use the same memory structure, the same process can be used to read and write either T4TA or T4TB platforms after activation and selection.

When a state machine is called, it reads a tag of that technology by default. The state machine checks for NDEF content on the tag. If the state machine finds an NDEF message, it reads the message. If no NDEF content is found, the state machine reads the raw data from the tag. The firmware outputs the received data to the USB interface to display the data on the TI NFC Tool GUI.

If you must access the read data for an application-specific purpose, you can copy the data read from the tag by finding the correct read within the state machine. TI designed each state machine to output-received tag data to the USB interface. You can find the most recently received data at any `Serial_printBuffer` function call.

To keep the memory sizes at reasonable levels, the amount of data stored from reading tags at any time is limited. At the top of each state machine is a declaration for buffer labeled as `g_pui8TXTRxBuffer`, where the X represents the tag type number. When a tag is read, the state machine goes into an idle state. During this state, the state machine can enter a write state to write new data onto the tag. This behavior can be modified.

When the tag state machine has finished reading and writing the tag, the machine exits and returns to the main application code. No further polling, reads, or writes occur until the tag is removed from the RF field. When the tag is removed, the reader reinitializes the state machines to reset them to resume polling for each enabled technology.

7 Reader/Writer Interoperability Results

This section describes the results of the interoperability between the existing TRF7970A Reader/Writer stack and the list of NFC/RFID tags referenced in the *NFC/HF RFID Reader/Writer* application report ([SLOA227](#)). Use the legend in [Table 4](#) for the results in [Table 5](#).

Table 4. Legend for NFC/RFID Tag Support

Legend	
Supported	✓
Not supported	✗

[Table 5](#) contains the results from the tests to validate the interoperability of the Reader/Writer firmware stack with various existing tag technology types and NFC devices currently on the market.

Table 5. NFC/RFID Tags Currently Supported by Reader/Writer Mode

NFC/RFID Tags	Read	Write
Type 1	✗	✗
Type 2	✓	✓
Type 3	✓	✓
Type 4A	✓	✓
Type 4B	✓	✓
RF430CL33xH	✓	✓
Type 5	✓	✓
RF430FRL15xH	✓	✓
Tag-It HF-I Standard	✓	✓
Tag-It HF-I Pro	✓	✓
Tag-It HF-I Plus	✓	✓

8 Design Files

8.1 Schematics

To download the schematics for each board, see the design files at <http://www.ti.com/tool/TIDM-NFC-RW>.

8.2 Bill of Materials

To download the bill of materials (BOM), see the design files at <http://www.ti.com/tool/TIDM-NFC-RW>.

8.3 Software Files

To download the software files, see the design files at <http://www.ti.com/tool/TIDM-NFC-RW> and <http://www.ti.com/lit/zip/sloa227>.

9 References

1. TRF7970A data sheet ([SLOS743](#))
2. NFC/HF RFID Reader/Writer application report ([SLOA227](#))
3. MSP430F5529 data sheet ([SLAS590](#))
4. MSP432P401 data sheet ([SLAS826](#))
5. ISO/IEC 18092/ECMA-340 (NFCIP – 1) (<http://www.ecma-international.org>)
6. ISO/IEC 21481/ECMA-352 (NFCIP – 2) (<http://www.ecma-international.org>)
7. ISO/IEC 7816-4:2005 (E) ([ISO7816-4](#))
8. JIS X 6319-4 (<http://www.webstore.jsa.or.jp/>)
9. ISO/IEC 14443-3:2009 (E) ([ISO14443-3](#))
10. ISO/IEC 14443-4:2008 (E) ([ISO14443-4](#))
11. ISO/IEC 15693-2:2006 (E) ([ISO15693-2](#))
12. ISO/IEC 15693-3:2009 (E) ([ISO15693-3](#))
13. NFCForum-TS-DigitalProtocol-1.0 (Digital Protocol) (<http://www.nfc-forum.org>)
14. NFCForum-TS-Activity-1.0 (Activity Protocol) (<http://www.nfc-forum.org>)
15. NFCForum-TS-RTD_1.0 (NFC Record Type Definition [RTD]) (<http://www.nfc-forum.org>)
16. NFCForum-TS-RTD_Text_1.0 (Text Record Type Definition) (<http://www.nfc-forum.org>)
17. NFCForum-TS-RTD_URI_1.0 (URI Record Type Definition) (<http://www.nfc-forum.org>)
18. NFCForum-TS-NDEF_1.0 (NFC Data Exchange Format [NDEF]) (<http://www.nfc-forum.org>)
19. NFC Forum T2TOP (Type 2 Tag Operation) (<http://www.nfc-forum.org>)
20. NFC Forum T3TOP (Type 3 Tag Operation) (<http://www.nfc-forum.org>)
21. NFC Forum T4TOP (Type 4 Tag Operation) (<http://www.nfc-forum.org>)
22. NFC Forum Logo (<http://nfc-forum.org/our-work/nfc-branding/n-mark/the-n-mark-license/>)
23. TI NFC/E2E Community (https://e2e.ti.com/support/wireless_connectivity/f/667)

10 Terminology

ALL_REQ— NFC-A Polling command, equivalent to ISO 14443-3 short frame command WupA (0x52)

ALLB_REQ— NFC-B Polling command, equivalent to ISO 14443-3 command WupB

APDU— Application Protocol Data Unit, used in command-response pairs to exchange I (information), R (receive ready) or S (supervisory) blocks

ATTRIB— PICC Selection Command, Type B

ATQA— Answer To ReQuest A, ISO 14443-3 term, equivalent to NFC term SENS_RES

- ATQB**— Answer To ReQuest B, ISO 14443-3 term, equivalent to NFC term SENSB_RES
- CC**— Capability Container, contains management data and is stored inside a read-only EF file. This EF is inside the NDEF tag application. Default (or basic) file ID for this file (for NFC) is 0xE103. See NFC Type 4 Tag Operation Specification and ISO/IEC 7816-4 for more information.
- CE**— Card Emulation, one of the three modes offered by NFC devices. In this optional mode of NFC operation, an NFC Forum device is considered as a card emulation platform only when it is emulating a Type 3, Type 4A, or Type 4B Tag Platform. Emulation of any other cards or tags is beyond the scope of the NFC Forum Brand Promise.
- DEP**— Data Exchange Protocol, an abstracted operational layer which is using either ISO or NFC protocols to exchange data. Thus, two terms can be created with this acronym: ISO-DEP and NFC-DEP. In the context of this document, after activation and selection of the emulated card and before deactivation, ISO-DEP is used exclusively to exchange data between Reader/Writer (PCD) and Tag Platform (PICC).
- EF**— Elementary File, a set of data objects, records or units sharing the same file identifier and the same security attributes
- File Identifier**— Two-byte data element used to address a file
- fc**— Carrier frequency, in the context of NFC/HF RFID, is 13.56 MHz, ± 7 kHz. This is the fundamental transmit frequency of the Reader/Writer (also called PCD).
- Initiator**— Generator of the RF field and source of the beginning of the NFCIP-1 communication
- MIME**— Multipurpose Internet Mail Extensions
- Modulation Index, m**— Signal amplitude ratio of $\frac{\text{peak} - \text{minimum}}{\text{peak} + \text{minimum}}$ or $\frac{1 - b}{1 + b}$, where b is the ratio between the modulated amplitude and the initial signal amplitude. The index m, is defined per protocol type, for both downlink and uplink and is generally expressed as a percentage (for example, Type A uses m = 100%, Type B uses m = 8 to 14%).
- NDEF**— NFC Data Exchange Format
- NFC**— Near Field Communication
- PCB**— Protocol Control Byte, used for conveying information required to control data transmission of blocks during the exchange of command-response APDU pairs. Bit coding of this byte and usage rules are found in ISO/IEC FDIS 14443-4.
- PCD**— Proximity Coupling Device (also commonly referred to as Reader/Writer)
- PICC**— Proximity Integrated Circuit Card (also commonly referred to as tag, tag platform, or transponder)
- PUPI**— Pseudo Unique PICC Identifier (randomly generated or static number returned by PICC as part of the response to REQB, WUPB, ALLB_REQ or SENSB_REQ)
- RTD**— Record Type Definition
- SAK**— Select Acknowledge (from ISO 14443-3); in NFC terms this is also called SEL_RES
- SDD_RES**— Equivalent to ISO 14443-3 response to SDD_REQ, and is complete NFCID1 CLn + BCC (if cascade level 1 [single size UID] or indicates NFCID1 is incomplete in the response and further cascade levels must be completed to obtain complete NFCID1 + BCC.
- SDD_REQ**— Equivalent to ISO 14443-3 Type A anticollision sequence. Comprised of SEL_CMD, SEL_PAR, and n data bits coded based on cascade level specified by SEL_CMD and calculated by value of SEL_PAR
- SEL_RES**— Equivalent to ISO 14443-3 SAK response
- SENS_REQ**— NFC-A Polling command, equivalent to ISO 14443-3 short frame command REQ_A (0x26)

SENS_RES— NFC-A Polling Response, equivalent to ISO 14443-3 ATQA

SENSB_REQ— NFC-B Polling command, equivalent to ISO 14443-3 command REQ_B

SENSB_RES— NFC-B Polling command response, equivalent to ISO 14443-3 ATQB

SENSF_REQ— NFC-F Polling command

SENSF_RES— NFC-F Polling response

Single Device Detection (SDD)— Algorithm used by the Reader/Writer to detect one of several targets in its RF field (Type A anticollision, from ISO/IEC 14443-3)

T2T— Type 2 Tag

T3T— Type 3 Tag

T4T— Type 4 Tag

T5T— Type 5 Tag

Tag— See Tag Platform

Tag Platform— Responds to Reader/Writer (PCD) commands by using load modulation scheme (passive operation) Throughout the document the use the terms *tag(s)*, *tag platform(s)*, and *transponder(s)* all have the same meaning.

TLV— Type Length Value

Transponder— See Tag Platform

UID— Unique IDentifier

VICC— Vicinity Integrated Circuit Card

11 About the Authors

ERICK MACIAS is an applications engineer at TI working on the NFC/RFID applications team. His efforts are focused on an embedded firmware and software design. For more than 4 years, Erick has designed and developed reference designs, customer-specific dedicated solutions, and extensive training material for NFC/HF RFID products using the extensive portfolio of TI microcontroller and processor platforms. Additionally, Erick provides in-depth customer-focused support through field sales and applications teams and the E2E Forum. Erick holds a BS in Computer Engineering from the University of Florida and is also pursuing his MS in same discipline.

RALPH JACOBI is an applications engineer at TI working on the NFC/RFID applications team, focused on embedded firmware and application software as it relates to digital and analog hardware. Ralph holds a BS in Electrical Engineering from the University of Florida. He is an Eagle Scout and past president of the Eta Kappa Nu, Epsilon Sigma Chapter. Ralph has been at TI since 2014.

JOSH WYATT is currently the NFC/RFID applications manager at TI. His early background was in airborne, long-range, high-power active and passive detection and tracking systems, radios, magnetic and inertial navigation, computers, and cryptographic instruments. Since 1997, he has been working with ground-based LF, HF, and UHF RFID, contactless payment, and NFC systems. Josh has been at TI since 2002.

IMPORTANT NOTICE FOR TI REFERENCE DESIGNS

Texas Instruments Incorporated ("TI") reference designs are solely intended to assist designers ("Buyers") who are developing systems that incorporate TI semiconductor products (also referred to herein as "components"). Buyer understands and agrees that Buyer remains responsible for using its independent analysis, evaluation and judgment in designing Buyer's systems and products.

TI reference designs have been created using standard laboratory conditions and engineering practices. **TI has not conducted any testing other than that specifically described in the published documentation for a particular reference design.** TI may make corrections, enhancements, improvements and other changes to its reference designs.

Buyers are authorized to use TI reference designs with the TI component(s) identified in each particular reference design and to modify the reference design in the development of their end products. HOWEVER, NO OTHER LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE TO ANY OTHER TI INTELLECTUAL PROPERTY RIGHT, AND NO LICENSE TO ANY THIRD PARTY TECHNOLOGY OR INTELLECTUAL PROPERTY RIGHT, IS GRANTED HEREIN, including but not limited to any patent right, copyright, mask work right, or other intellectual property right relating to any combination, machine, or process in which TI components or services are used. Information published by TI regarding third-party products or services does not constitute a license to use such products or services, or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

TI REFERENCE DESIGNS ARE PROVIDED "AS IS". TI MAKES NO WARRANTIES OR REPRESENTATIONS WITH REGARD TO THE REFERENCE DESIGNS OR USE OF THE REFERENCE DESIGNS, EXPRESS, IMPLIED OR STATUTORY, INCLUDING ACCURACY OR COMPLETENESS. TI DISCLAIMS ANY WARRANTY OF TITLE AND ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, QUIET ENJOYMENT, QUIET POSSESSION, AND NON-INFRINGEMENT OF ANY THIRD PARTY INTELLECTUAL PROPERTY RIGHTS WITH REGARD TO TI REFERENCE DESIGNS OR USE THEREOF. TI SHALL NOT BE LIABLE FOR AND SHALL NOT DEFEND OR INDEMNIFY BUYERS AGAINST ANY THIRD PARTY INFRINGEMENT CLAIM THAT RELATES TO OR IS BASED ON A COMBINATION OF COMPONENTS PROVIDED IN A TI REFERENCE DESIGN. IN NO EVENT SHALL TI BE LIABLE FOR ANY ACTUAL, SPECIAL, INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES, HOWEVER CAUSED, ON ANY THEORY OF LIABILITY AND WHETHER OR NOT TI HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, ARISING IN ANY WAY OUT OF TI REFERENCE DESIGNS OR BUYER'S USE OF TI REFERENCE DESIGNS.

TI reserves the right to make corrections, enhancements, improvements and other changes to its semiconductor products and services per JESD46, latest issue, and to discontinue any product or service per JESD48, latest issue. Buyers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All semiconductor products are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its components to the specifications applicable at the time of sale, in accordance with the warranty in TI's terms and conditions of sale of semiconductor products. Testing and other quality control techniques for TI components are used to the extent TI deems necessary to support this warranty. Except where mandated by applicable law, testing of all parameters of each component is not necessarily performed.

TI assumes no liability for applications assistance or the design of Buyers' products. Buyers are responsible for their products and applications using TI components. To minimize the risks associated with Buyers' products and applications, Buyers should provide adequate design and operating safeguards.

Reproduction of significant portions of TI information in TI data books, data sheets or reference designs is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. TI is not responsible or liable for such altered documentation. Information of third parties may be subject to additional restrictions.

Buyer acknowledges and agrees that it is solely responsible for compliance with all legal, regulatory and safety-related requirements concerning its products, and any use of TI components in its applications, notwithstanding any applications-related information or support that may be provided by TI. Buyer represents and agrees that it has all the necessary expertise to create and implement safeguards that anticipate dangerous failures, monitor failures and their consequences, lessen the likelihood of dangerous failures and take appropriate remedial actions. Buyer will fully indemnify TI and its representatives against any damages arising out of the use of any TI components in Buyer's safety-critical applications.

In some cases, TI components may be promoted specifically to facilitate safety-related applications. With such components, TI's goal is to help enable customers to design and create their own end-product solutions that meet applicable functional safety standards and requirements. Nonetheless, such components are subject to these terms.

No TI components are authorized for use in FDA Class III (or similar life-critical medical equipment) unless authorized officers of the parties have executed an agreement specifically governing such use.

Only those TI components that TI has specifically designated as military grade or "enhanced plastic" are designed and intended for use in military/aerospace applications or environments. Buyer acknowledges and agrees that any military or aerospace use of TI components that have **not** been so designated is solely at Buyer's risk, and Buyer is solely responsible for compliance with all legal and regulatory requirements in connection with such use.

TI has specifically designated certain components as meeting ISO/TS16949 requirements, mainly for automotive use. In any case of use of non-designated products, TI will not be responsible for any failure to meet ISO/TS16949.