



MCP251XFD CAN FD Motherboard User's Guide

Note the following details of the code protection feature on Microchip devices:

- Microchip products meet the specification contained in their particular Microchip Data Sheet.
- Microchip believes that its family of products is one of the most secure families of its kind on the market today, when used in the intended manner and under normal conditions.
- There are dishonest and possibly illegal methods used to breach the code protection feature. All of these methods, to our knowledge, require using the Microchip products in a manner outside the operating specifications contained in Microchip's Data Sheets. Most likely, the person doing so is engaged in theft of intellectual property.
- Microchip is willing to work with the customer who is concerned about the integrity of their code.
- Neither Microchip nor any other semiconductor manufacturer can guarantee the security of their code. Code protection does not mean that we are guaranteeing the product as "unbreakable."

Code protection is constantly evolving. We at Microchip are committed to continuously improving the code protection features of our products. Attempts to break Microchip's code protection feature may be a violation of the Digital Millennium Copyright Act. If such acts allow unauthorized access to your software or other copyrighted work, you may have a right to sue for relief under that Act.

Information contained in this publication regarding device applications and the like is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that your application meets with your specifications. MICROCHIP MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION, INCLUDING BUT NOT LIMITED TO ITS CONDITION, QUALITY, PERFORMANCE, MERCHANTABILITY OR FITNESS FOR PURPOSE. Microchip disclaims all liability arising from this information and its use. Use of Microchip devices in life support and/or safety applications is entirely at the buyer's risk, and the buyer agrees to defend, indemnify and hold harmless Microchip from any and all damages, claims, suits, or expenses resulting from such use. No licenses are conveyed, implicitly or otherwise, under any Microchip intellectual property rights unless otherwise stated.

Microchip received ISO/TS-16949:2009 certification for its worldwide headquarters, design and wafer fabrication facilities in Chandler and Tempe, Arizona; Gresham, Oregon and design centers in California and India. The Company's quality system processes and procedures are for its PIC® MCUs and dsPIC® DSCs, KEELoQ® code hopping devices, Serial EEPROMs, microperipherals, nonvolatile memory and analog products. In addition, Microchip's quality system for the design and manufacture of development systems is ISO 9001:2000 certified.

QUALITY MANAGEMENT SYSTEM
CERTIFIED BY DNV
== ISO/TS 16949 ==

Trademarks

The Microchip name and logo, the Microchip logo, AnyRate, AVR, AVR logo, AVR Freaks, BeaconThings, BitCloud, CryptoMemory, CryptoRF, dsPIC, FlashFlex, flexPWR, Helder, JukeBlox, KEELoQ, KEELoQ logo, Klear, LANCheck, LINK MD, maxStylus, maxTouch, MediaLB, megaAVR, MOST, MOST logo, MPLAB, OptoLyzr, PIC, picoPower, PICSTART, PIC32 logo, Prochip Designer, QTouch, RightTouch, SAM-BA, SpyNIC, SST, SST Logo, SuperFlash, tinyAVR, UNI/O, and XMEGA are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

ClockWorks, The Embedded Control Solutions Company, EtherSynch, Hyper Speed Control, HyperLight Load, IntelliMOS, mTouch, Precision Edge, and Quiet-Wire are registered trademarks of Microchip Technology Incorporated in the U.S.A.

Adjacent Key Suppression, AKS, Analog-for-the-Digital Age, Any Capacitor, AnyIn, AnyOut, BodyCom, chipKIT, chipKIT logo, CodeGuard, CryptoAuthentication, CryptoCompanion, CryptoController, dsPICDEM, dsPICDEM.net, Dynamic Average Matching, DAM, ECAN, EtherGREEN, In-Circuit Serial Programming, ICSP, Inter-Chip Connectivity, JitterBlocker, KlearNet, KlearNet logo, Mindi, MiWi, motorBench, MPASM, MPF, MPLAB Certified logo, MPLIB, MPLINK, MultiTRAK, NetDetach, Omniscient Code Generation, PICDEM, PICDEM.net, PICKit, PICtail, PureSilicon, QMatrix, RightTouch logo, REAL ICE, Ripple Blocker, SAM-ICE, Serial Quad I/O, SMART-I.S., SQI, SuperSwitcher, SuperSwitcher II, Total Endurance, TSHARC, USBCheck, VariSense, ViewSpan, WiperLock, Wireless DNA, and ZENA are trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

SQTP is a service mark of Microchip Technology Incorporated in the U.S.A.

Silicon Storage Technology is a registered trademark of Microchip Technology Inc. in other countries.

GestIC is a registered trademark of Microchip Technology Germany II GmbH & Co. KG, a subsidiary of Microchip Technology Inc., in other countries.

All other trademarks mentioned herein are property of their respective companies.

© 2017, Microchip Technology Incorporated, All Rights Reserved.
ISBN: 978-1-5224-1578-7

Object of Declaration: MCP251XFD CAN FD Motherboard

EU Declaration of Conformity

This declaration of conformity is issued by the manufacturer.

 
The development/evaluation tool is designed to be used for research and development in a laboratory environment. This development/evaluation tool is not a Finished Appliance, nor is it intended for incorporation into Finished Appliances that are made commercially available as single functional units to end users under EU EMC Directive 2004/108/EC and as supported by the European Commission's Guide for the EMC Directive 2004/108/EC (8th February 2010).

This development/evaluation tool complies with EU RoHS2 Directive 2011/65/EU.

This development/evaluation tool, when incorporating wireless and radio-telecom functionality, is in compliance with the essential requirement and other relevant provisions of the R&TTE Directive 1999/5/EC and the FCC rules as stated in the declaration of conformity provided in the module datasheet and the module product page available at www.microchip.com.

For information regarding the exclusive, limited warranties applicable to Microchip products, please see Microchip's standard terms and conditions of sale, which are printed on our sales documentation and available at www.microchip.com.

Signed for and on behalf of Microchip Technology Inc. at Chandler, Arizona, USA.



Rodger Richey
Director of Development Tools



Date

NOTES:



MCP251XFD CAN FD MOTHERBOARD USER'S GUIDE

Table of Contents

Preface	7
Introduction.....	7
Document Layout	7
Conventions Used in this Guide	8
Warranty Registration.....	8
Recommended Reading.....	9
The Microchip Website	9
Product Change Notification Service.....	9
Customer Support	9
Document Revision History	9
Chapter 1. MCP251xFD CAN FD Motherboard	
1.1 Introduction	11
1.2 Recommended Items to Implement a CAN FD Node	11
1.3 Kit Contents	11
1.4 MCP251XFD CAN FD Motherboard Features	12
1.5 MCP2517FD click Board Features	13
Chapter 2. Hardware	
2.1 Hardware Features	15
2.2 Power Sources	16
2.3 Resistor Jumper Setting on MCP2517FD click Board	16
2.4 Connecting the Board	17
2.5 Operation	17
Chapter 3. Software	
3.1 Introduction	19
3.2 Software Overview	19
Appendix A. Schematics and Layout	
A.1 Introduction	21
A.2 Schematics - Power Supply	22
A.3 Schematics - Microcontroller	23
A.4 Board – Top View	24
A.5 Board – Bottom View	25
A.6 Board – Top Silk	26
A.7 Board – Top Copper and Silk	27
A.8 Board – Top Copper	28

MCP251XFD CAN FD Motherboard User’s Guide

- A.9 Board – Bottom Copper 29
- A.10 Board – Bottom Copper and Silk 30
- A.11 Board – Bottom Silk 31
- Appendix B. Bill of Materials (BOM)33**
- Appendix C. MCP2517FD click Board Schematics**
 - C.1 Introduction 35
 - C.2 Schematics - MCP2517FD click Board 36
 - C.3 Board – Top View 37
 - C.4 Board – Bottom View 38
- Worldwide Sales and Service39**



MCP251XFD CAN FD MOTHERBOARD USER'S GUIDE

Preface

NOTICE TO CUSTOMERS

All documentation becomes dated, and this manual is no exception. Microchip tools and documentation are constantly evolving to meet customer needs, so some actual dialogs and/or tool descriptions may differ from those in this document. Please refer to our website (www.microchip.com) to obtain the latest documentation available.

Documents are identified with a “DS” number. This number is located on the bottom of each page, in front of the page number. The numbering convention for the DS number is “DSXXXXXXA”, where “XXXXXX” is the document number and “A” is the revision level of the document.

For the most up-to-date information on development tools, see the MPLAB® IDE online help. Select the Help menu, and then Topics to open a list of available online help files.

INTRODUCTION

This chapter contains general information that will be useful to know before using the MCP251XFD CAN FD Motherboard. Items discussed in this chapter include:

- [Document Layout](#)
- [Conventions Used in this Guide](#)
- [Recommended Reading](#)
- [The Microchip Website](#)
- [Customer Support](#)
- [Document Revision History](#)

DOCUMENT LAYOUT

This document describes how to use the MCP251XFD CAN FD Motherboard as a demonstration board to evaluate the MCP2517FD device. The manual layout is as follows:

- **Chapter 1. “MCP251XFD CAN FD Motherboard”** – Provides important information about the MCP251XFD CAN FD Motherboard.
- **Chapter 2. “Hardware”** – Includes a detailed description of the demo board and instructions on how to use it.
- **Chapter 3. “Software”** – Helps getting started on firmware development.
- **Appendix A. “Schematics and Layout”** – Schematics and layout diagrams of the MCP251XFD CAN FD Motherboard.
- **Appendix B. “Bill of Materials (BOM)”** – Lists the parts used to build the MCP251XFD CAN FD Motherboard.
- **Appendix C. “MCP2517FD click Board Schematics”** – Schematics and layout diagrams of the MCP2517FD click Board.

MCP251XFD CAN FD Motherboard User's Guide

CONVENTIONS USED IN THIS GUIDE

This manual uses the following documentation conventions:

DOCUMENTATION CONVENTIONS

Description	Represents	Examples
Arial font:		
Italic characters	Referenced books	<i>MPLAB® IDE User's Guide</i>
	Emphasized text	...is the <i>only</i> compiler...
Initial caps	A window	the Output window
	A dialog	the Settings dialog
	A menu selection	select Enable Programmer
Quotes	A field name in a window or dialog	"Save project before build"
Underlined, italic text with right angle bracket	A menu path	<u><i>File>Save</i></u>
Bold characters	A dialog button	Click OK
	A tab	Click the Power tab
N'Rnnnn	A number in verilog format, where N is the total number of digits, R is the radix and n is a digit.	4'b0010, 2'hF1
Text in angle brackets < >	A key on the keyboard	Press <Enter>, <F1>
Courier New font:		
Plain Courier New	Sample source code	#define START
	Filenames	autoexec.bat
	File paths	c:\mcc18\h
	Keywords	_asm, _endasm, static
	Command-line options	-Opa+, -Opa-
	Bit values	0, 1
	Constants	0xFF, 'A'
Italic Courier New	A variable argument	<i>file.o</i> , where <i>file</i> can be any valid filename
Square brackets []	Optional arguments	mcc18 [options] <i>file</i> [options]
Curly brackets and pipe character: { }	Choice of mutually exclusive arguments; an OR selection	errorlevel {0 1}
Ellipses...	Replaces repeated text	var_name [, var_name...]
	Represents code supplied by user	void main (void) { ... }

RECOMMENDED READING

This user's guide describes how to use MCP251XFD CAN FD Motherboard. The following Microchip documents are available and recommended as supplemental reference resources:

- **MCP2517FD Data Sheet - “External CAN FD Controller with SPI Interface” (DS20005688)**

This data sheet provides detailed information regarding the MCP2517FD device.

- **MCP2517FD FRM - “MCP2517FD Family Reference Manual” (DS2005678)**

This FRM provides even more detailed information regarding the MCP2517FD.

THE MICROCHIP WEBSITE

Microchip provides on-line support via our website at www.microchip.com. This website is used as a means to make files and information easily available to customers. Accessible by using your favorite Internet browser, the website contains the following information:

- **Product Support** – Data sheets and errata, application notes and sample programs, design resources, user's guides and hardware support documents, latest software releases and archived software
- **General Technical Support** – Frequently Asked Questions (FAQs), technical support requests, on-line discussion groups, Microchip consultant program member listing
- **Business of Microchip** – Product selector and ordering guides, latest Microchip press releases, listing of seminars and events, listings of Microchip sales offices, distributors and factory representatives

CUSTOMER SUPPORT

Users of Microchip products can receive assistance through several channels:

- Distributor or Representative
- Local Sales Office
- Field Application Engineer (FAE)
- Technical Support

Customers should contact their distributor, representative or field application engineer (FAE) for support. Local sales offices are also available to help customers. A listing of sales offices and locations is included in the back of this document.

Technical support is available through the website at: <http://support.microchip.com>.

DOCUMENT REVISION HISTORY

Revision A (September 2017)

- Initial release of this document.

MCP251XFD CAN FD Motherboard User's Guide

NOTES:



MCP251XFD CAN FD MOTHERBOARD USER'S GUIDE

Chapter 1. MCP251XFD CAN FD Motherboard

1.1 INTRODUCTION

The MCP251XFD CAN FD Motherboard provides a simple, low-cost board to evaluate the MCP2517FD family of devices. The board features one mikroBUS™ socket to accommodate the MCP2517FD click Board.

The MCP251XFD CAN FD Motherboard together with the MCP2517FD click Board can be used to implement a CAN FD node.

The MCP251XFD CAN FD Motherboard contains a PIC32MX470F512H microcontroller with a Service Provider Interface (SPI) peripheral. The microcontroller controls the MCP2517FD via the SPI interface.

A firmware Application Program Interface (API) is available for rapid application development, which is written in C programming language for MPLAB Harmony Integrated Software Framework. It can be easily ported to other microcontrollers.

1.2 RECOMMENDED ITEMS TO IMPLEMENT A CAN FD NODE

In order to implement a CAN FD node using the MCP2517FD, the following items are recommended:

- MCP251XFD CAN FD Motherboard (ADM00576)
- MCP2517FD click Board (**NOT** included)
- Mini-USB Cable (**NOT** included)

1.3 KIT CONTENTS

The MCP251XFD CAN FD Motherboard kit includes:

- MCP251XFD CAN FD Motherboard (ADM00576)
- Information Sheet

MCP251XFD CAN FD Motherboard User's Guide

1.4 MCP251XFD CAN FD MOTHERBOARD FEATURES

Figure 1-1 illustrates the main features of the MCP251XFD CAN FD Motherboard:

1. PIC32MX470F512H microcontroller
2. mikroBUS socket
3. Debug headers for monitoring the MCP2517FD I/O
4. DSC1121 8 MHz MEMS Clock Generator
5. USB connector to supply regulated +5V DC to the LDO and mikroBUS socket
6. Test loops to supply regulated +5V DC to the LDO and mikroBUS socket
7. Jumper to select between USB and test loop power source
8. 3.3V LDO to supply microcontroller and mikroBUS socket, and power indicator LEDs
9. Push button switches for user-defined inputs
10. Eight indicator LEDs
11. Microcontroller Reset push button
12. Six-pin interface for the PICkit™ 3 Programmer/Debugger

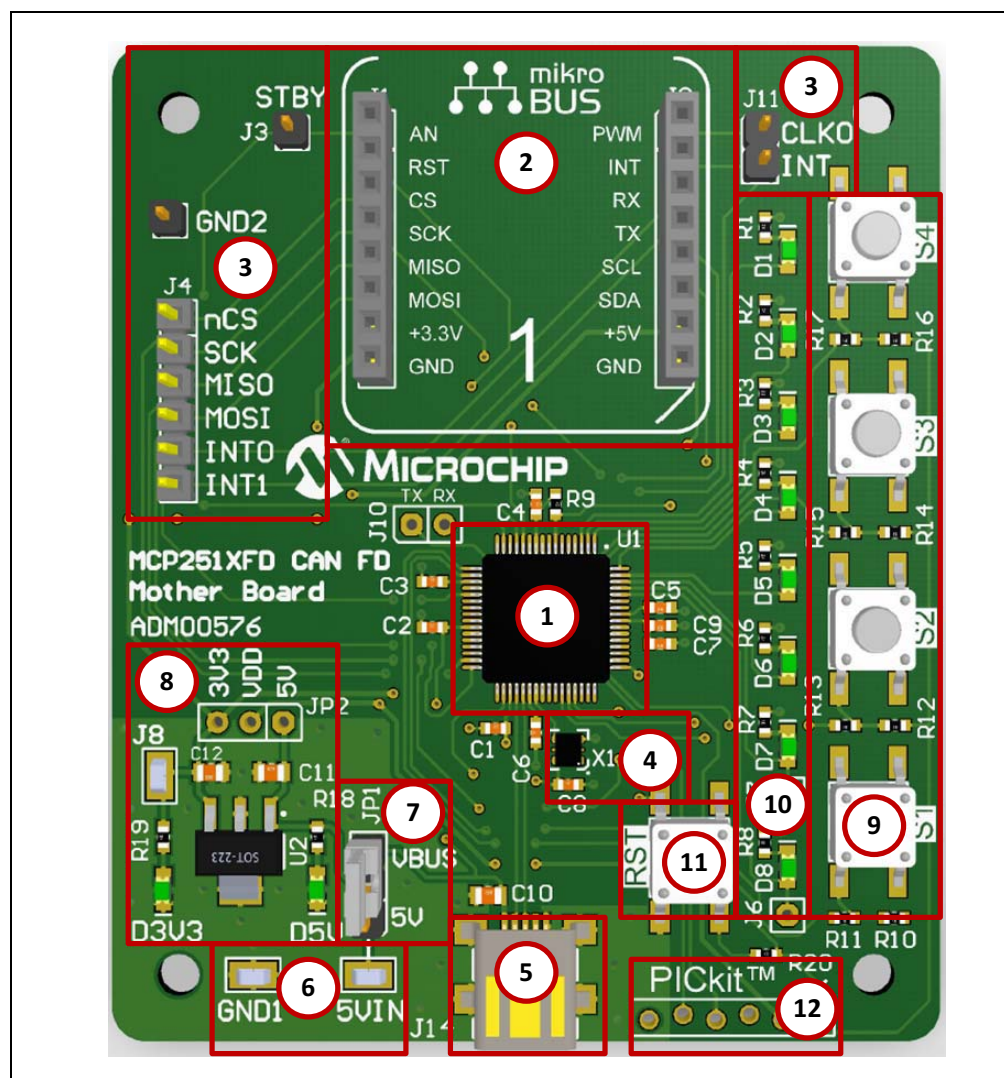


FIGURE 1-1: MCP251XFD CAN FD Motherboard.

1.5 MCP2517FD CLICK BOARD FEATURES

The MCP2517FD click Board contains the MCP2517FD and a CAN FD transceiver. The board can be connected to the CAN FD bus using a DB9 connector. The click board is available for purchase from <https://shop.mikroe.com/mcp2517fd-click>.

Figure 1-2 illustrates the main features of the MCP2517FD click Board:

1. MCP2517FD CAN FD Controller with SPI Interface
2. ATA6563 CAN FD Transceiver
3. DSC2311 20/40 MHz Dual MEMS Clock Generator
4. ESD protection and termination
5. DB9 CAN connector
6. mikroBUS click connector with MCP2517FD specific I/O pin assignment

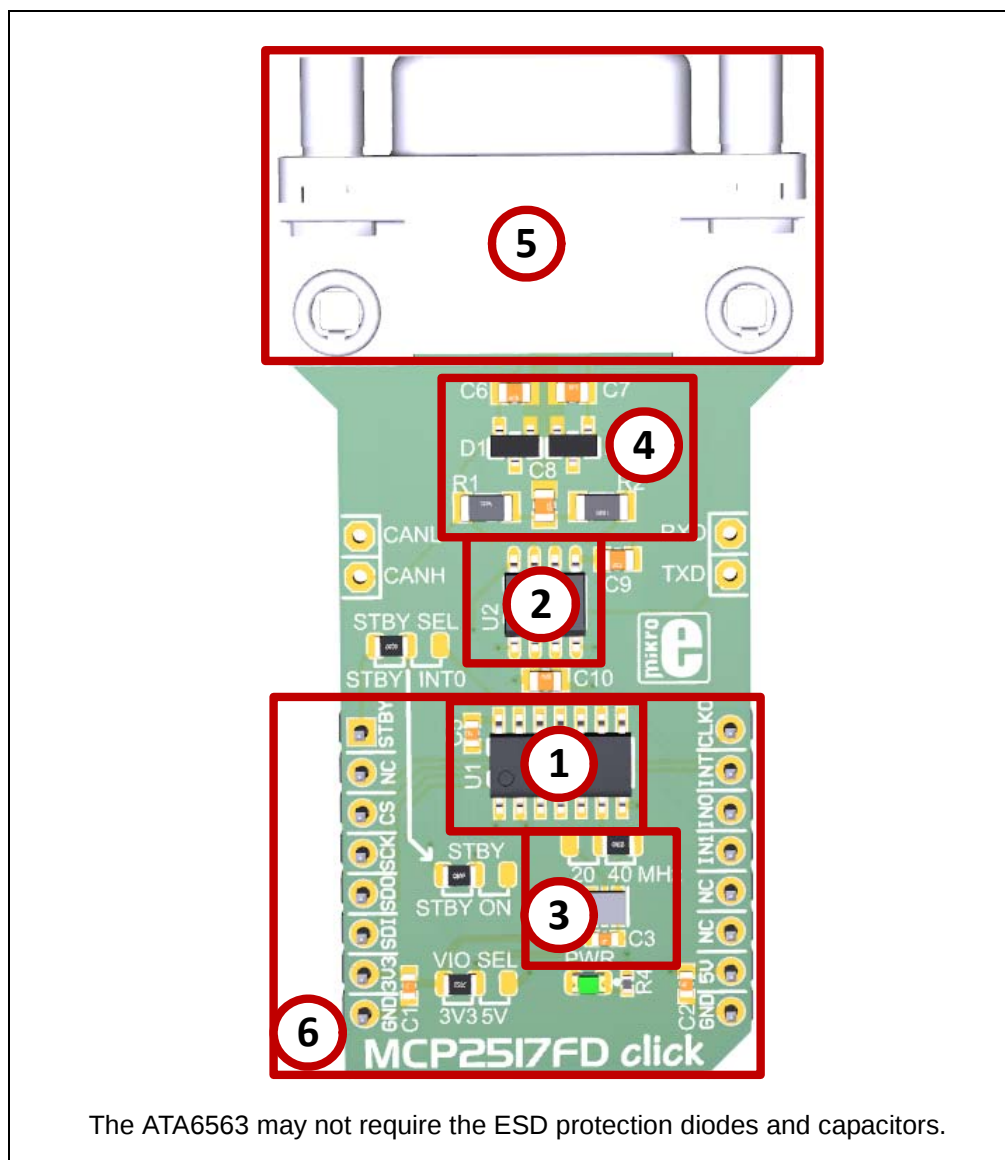


FIGURE 1-2: MCP2517FD click Board.

MCP251XFD CAN FD Motherboard User's Guide

NOTES:

Chapter 2. Hardware

2.1 HARDWARE FEATURES

2.1.1 Microcontroller

The MCP251XFD CAN FD Motherboard accommodates a PIC32MX470F512H microcontroller with a 120 MHz/150 DMIPS MIPS32® M4K® core. The microcontroller controls the MCP2517FD via the SPI interface. The interrupt pins of the MCP2517FD are connected to the microcontroller input pins. The microcontroller can control the standby pin of the CAN FD transceiver on the MCP2517FD click Board using the STBY output.

2.1.2 Clock Generator

The MCP251XFD CAN FD Motherboard uses the DSC1121, which is a Microchip MEMS clock generator, as the default clock source into the microcontroller. The DSC1121 on this board has been programmed to generate an output frequency of 8 MHz and is offered in a small 2.5 x 2.0 mm package.

2.1.3 Switches

Five push button switches provide the following functions:

- S1: Active-low switch
- S2: Active-low switch
- S3: Active-low switch
- S4: Active-low switch
- RST (S5): Active-low MCLR switch to hard reset the microcontroller

When Idle, the switches are pulled high; when pressed, they are grounded.

2.1.4 LEDs

Eight LEDs (D1 through D8) are available. Set the corresponding microcontroller output pins high to light the LEDs.

2.1.5 PICkit™ 3 In-Circuit Debugger connector

Connector J11 provides the footprint for a 6-pin PICkit™ 3 interface.

2.1.6 MikroBUS interface

[Figure 2-1](#) shows the signal assignment to the mikroBUS connector. The MCP251XFD CAN FD Motherboard is targeted to be used with the MCP2517FD click Board, but it could also be used with a variety of other click boards.

MCP251XFD CAN FD Motherboard User's Guide

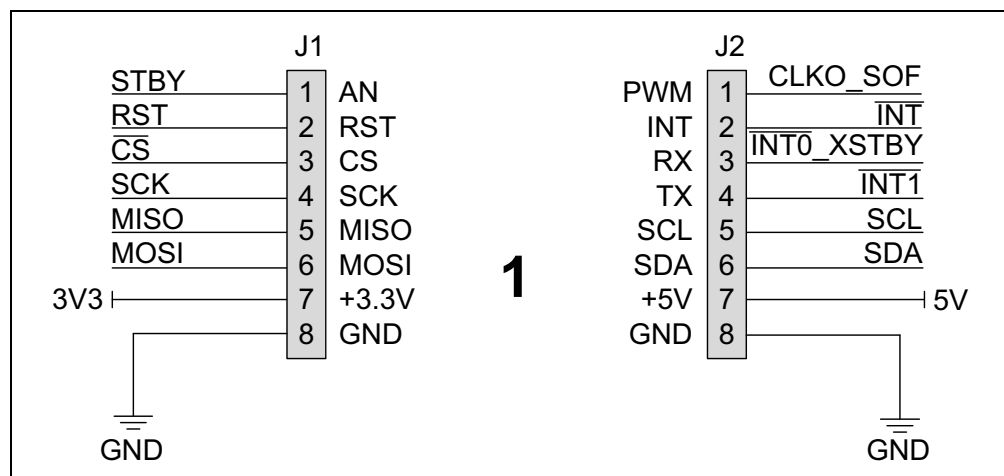


FIGURE 2-1: mikroBUS Interface

2.2 POWER SOURCES

The MCP251XFD CAN FD Motherboard must be powered using a +5V DC regulated power source. The user has two options to connect the power:

- USB connector (J14), or
- Test loops: 5VIN and GND1.

The jumper (JP1) is used to select between the power sources, see [Table 2-1](#).

TABLE 2-1: POWER SOURCE JUMPERS

Index	Description	Default Configuration
JP1	• Powers-up the MCP251XFD CAN FD Motherboard from USB or an external 5V power supply between 5VIN and GND1. • Short-circuit pins 2 and 3 (top and middle) to select VBUS, or pins 1 and 2 (middle and bottom) to select the external power supply.	VBUS
JP2 ⁽¹⁾	Could be used to select 5V VDD for a different microcontroller. U1 is a 3.3V microcontroller.	
Note 1: Jumper JP3 is not populated, however, it is short-circuited on the bottom layer (back) of the board. The trace can be cut in order to disconnect it.		

2.3 RESISTOR JUMPER SETTING ON MCP2517FD CLICK BOARD

[Table 2-2](#) briefly describes the functions of all the board's resistor jumpers.

TABLE 2-2: JUMPER DESCRIPTIONS

Index	Description	Default Configuration
VIO_SEL	Selects 3.3V or 5V for VIO of the CAN FD transceiver.	3.3V
20/40 MHz	The OSC1 of the MCP2517FD can be connected to the 20 or 40 MHz clock output of U3.	40 MHz
STBY	The STBY pin of the CAN FD transceiver can be grounded (transceiver always in Normal mode); or controlled by the microcontroller or MCP2517FD.	Grounded (Normal mode)
STBY_SEL	Selects between the STBY output of the microcontroller or the INT0/XSTBY pin of the MCP2517FD.	Microcontroller (STBY header)

2.4 CONNECTING THE BOARD

Figure 2-2 illustrates an example CAN FD network. The MCP2517FD click Board is plugged into the MCP251XFD CAN FD Motherboard. A CAN FD tool from K2L is connected to the MCP2517FD click Board using twisted pair wires.

The demonstration board is powered using a Mini-USB cable. Alternatively, the board can be powered using a 5V power supply connected between 5VIN and GND1.

There are two terminations on the CAN bus:

- Two 60 Ohm resistors in series on the MCP2517FD click Board.
- A 120 Ohm termination resistor at the connector of the K2L OptoLyzer® MOCCA FD tool.

2.5 OPERATION

The user can write firmware for the MCU in order to create a custom CAN FD node. Check the MCP2517FD product page for the firmware API and for code examples.

The RST button can be used to reset the MCU. Switches S1-S4 can be used to trigger the transmission of CAN FD messages to the CAN FD tool. LEDs D1-D8 can be controlled by the CAN FD tool using CAN FD messages.

All I/O pins of the MCP2517FD are easily accessible through pin headers.

The differential CAN bus signals, CAN_H and CAN_L, are accessible on the MCP2517FD click Board, or on the DB9 connector: CAN_H on pin 7, and CAN_L on pin 2.



FIGURE 2-2: Connecting the MCP251XFD CAN FD Motherboard.

MCP251XFD CAN FD Motherboard User's Guide

NOTES:



MCP251XFD CAN FD MOTHERBOARD USER'S GUIDE

Chapter 3. Software

3.1 INTRODUCTION

The MCP251xFD CAN FD Motherboard can be used with MPLAB X Integrated Development Environment (IDE), which is available free on Microchip's website at www.microchip.com. This software is used for programming and debugging the PIC32MX470F512H on the MCP251xFD CAN FD Motherboard.

3.2 SOFTWARE OVERVIEW

The PICKit™ 3 through MPLAB X, is a low-voltage in-circuit debugger, as well as a low-voltage programmer, for the PIC32MX470F512H. In-circuit debugging allows the user to run, examine and modify programs for the microcontroller embedded in the board hardware. This facilitates the debugging of firmware and hardware concurrently. Use the in-circuit debugger with MPLAB X IDE to run, stop and single-step through programs; breakpoints can be set and the microcontroller can be reset. When the microcontroller stops, the contents of the registers are available for examination and modification.

MCP251XFD CAN FD Motherboard User's Guide

NOTES:



MCP251XFD CAN FD MOTHERBOARD USER'S GUIDE

Appendix A. Schematics and Layout


A.1 INTRODUCTION

This appendix contains the following schematics and layout of the MCP251XFD CAN FD Motherboard:

- Schematics - Power Supply
- Schematics - Microcontroller
- Board – Top View
- Board – Bottom View
- Board – Top Silk
- Board – Top Copper and Silk
- Board – Top Copper
- Board – Bottom Copper
- Board – Bottom Copper and Silk
- Board – Bottom Silk


[illegible]

A.3 SCHEMATICS - MICROCONTROLLER

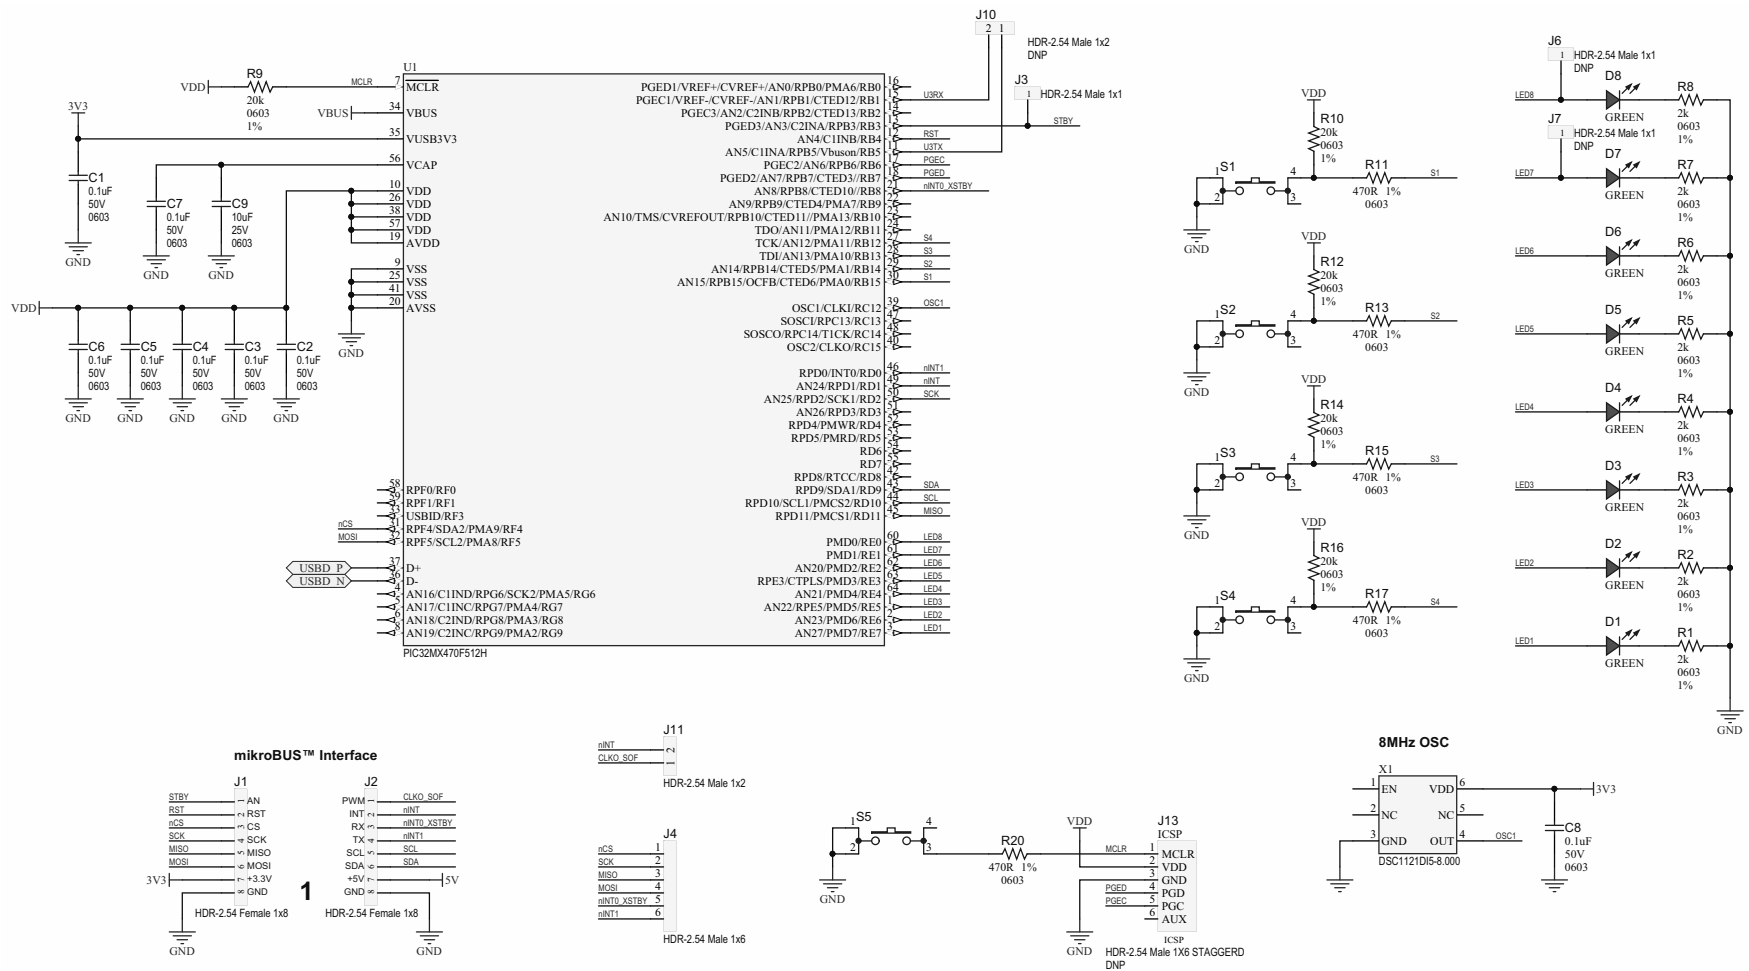


MCP251XFD CAN FD Motherboard User's Guide

A.4 BOARD – TOP VIEW

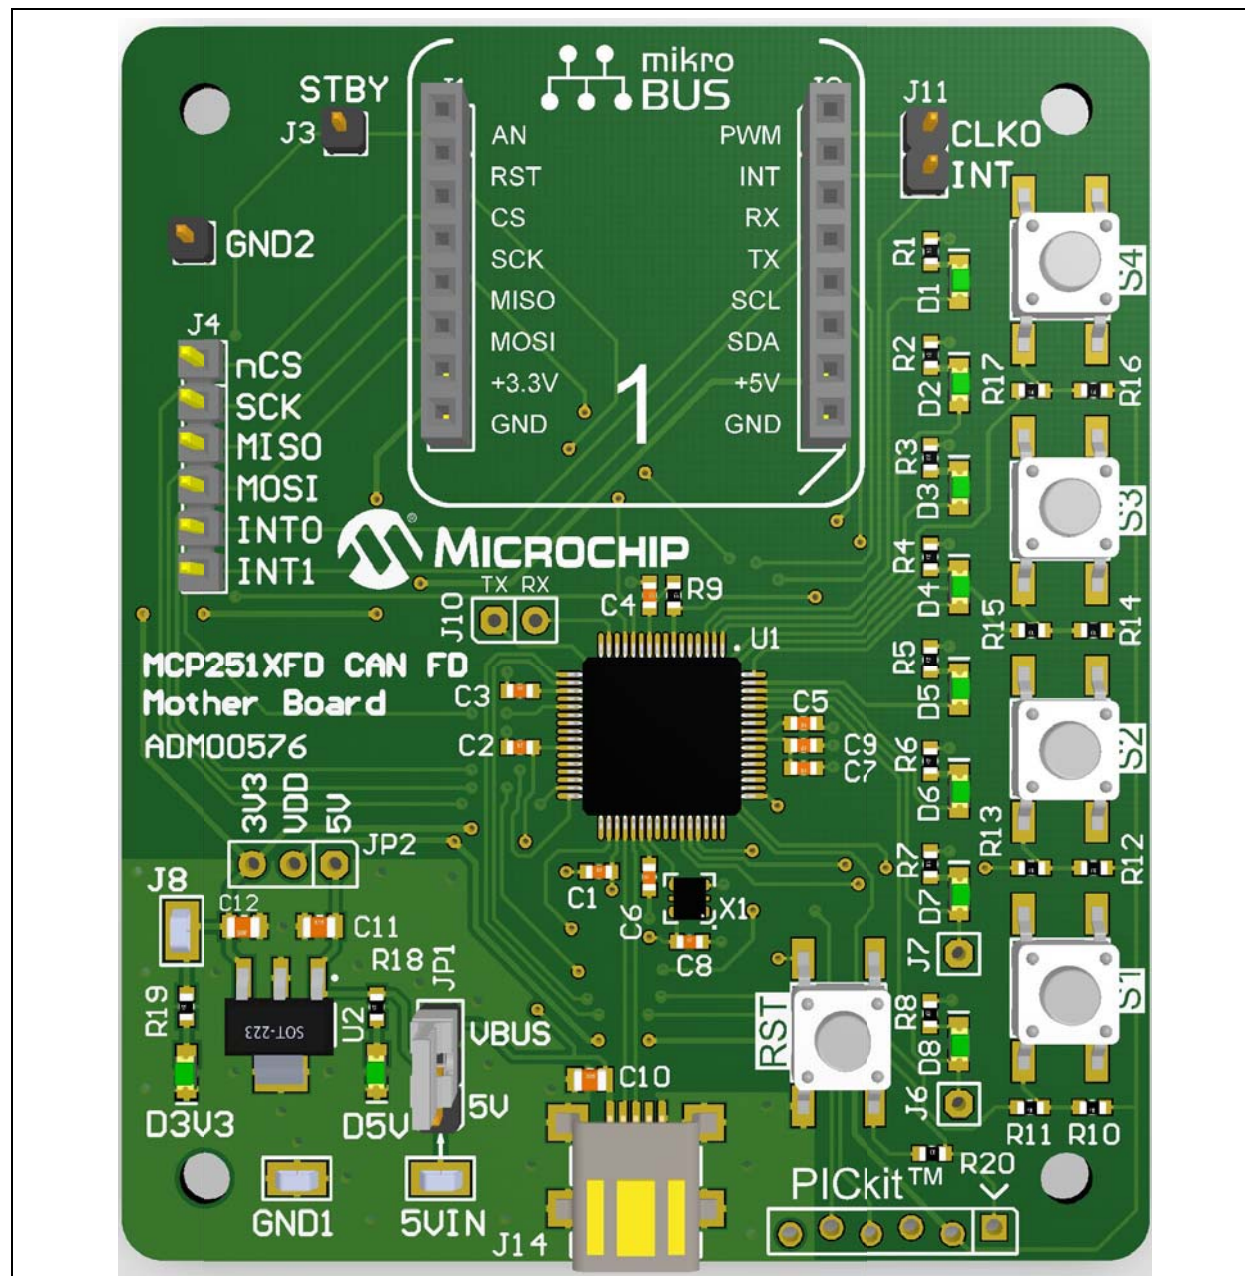


A.5 BOARD – BOTTOM VIEW

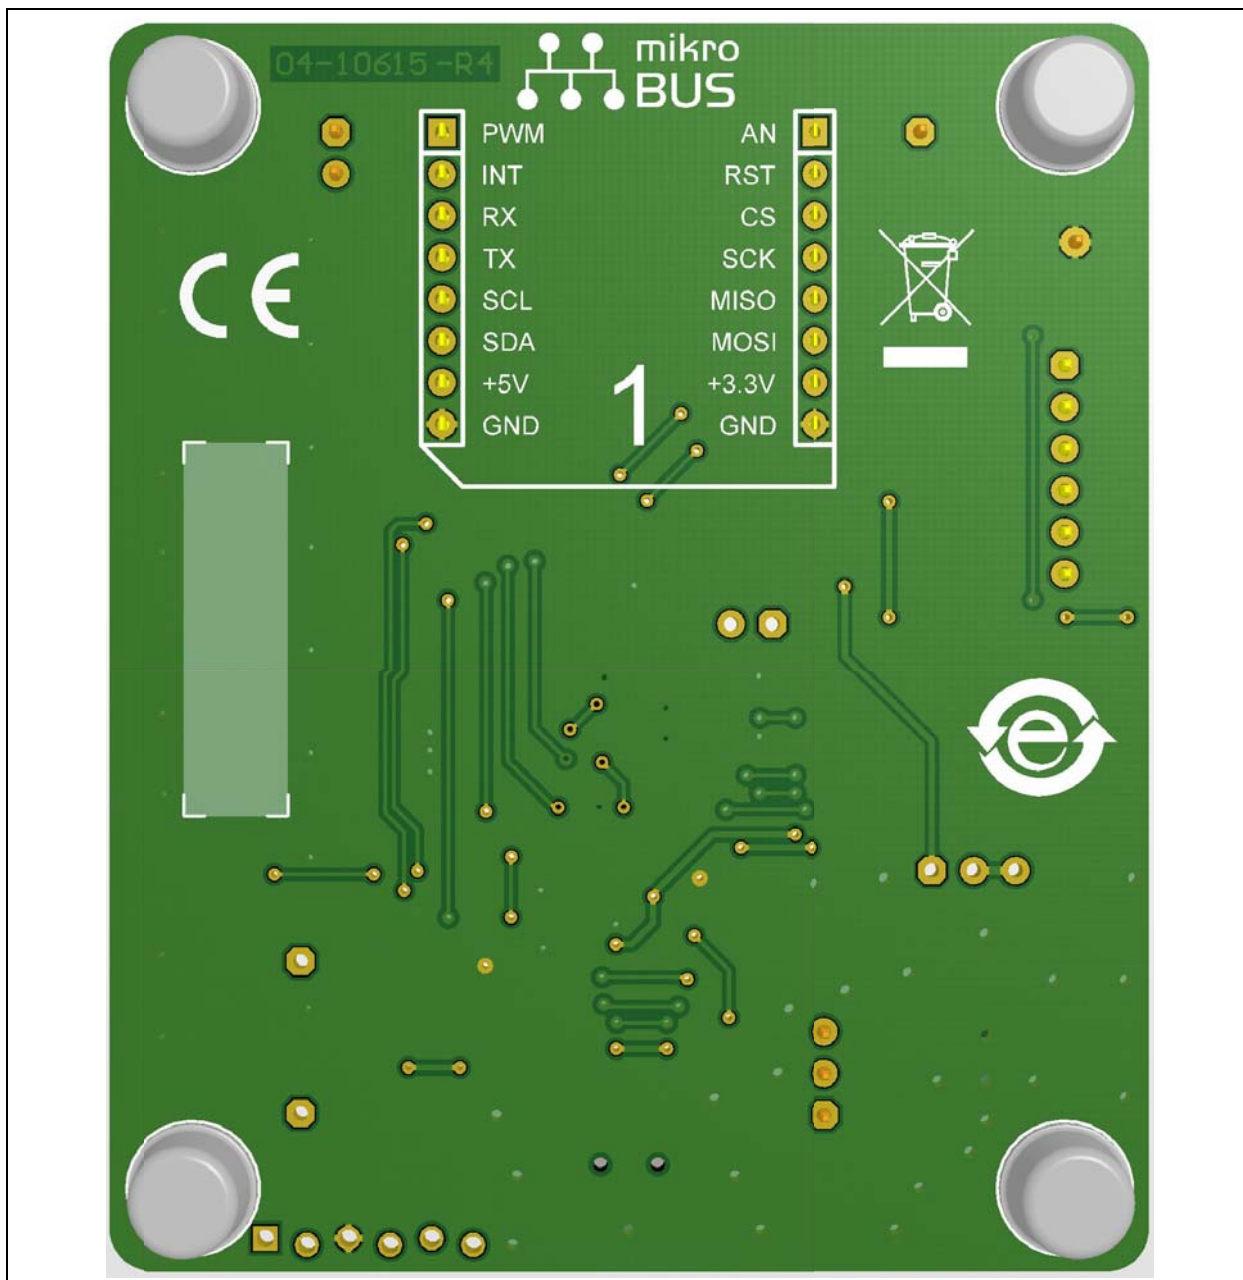


MCP251XFD CAN FD Motherboard User's Guide


A.6 BOARD – TOP SILK

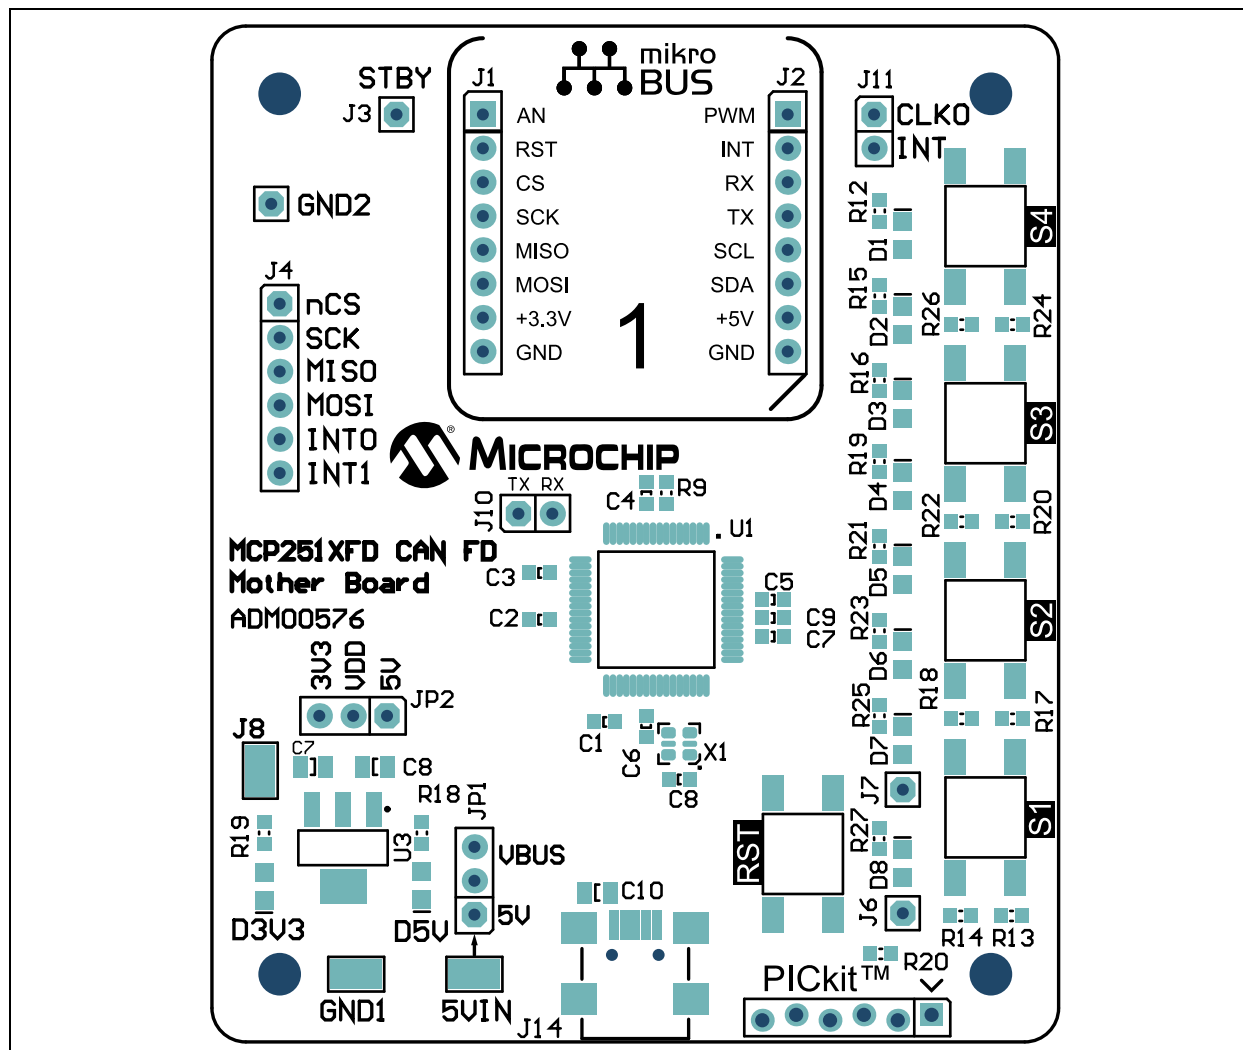


A.7 BOARD – TOP COPPER AND SILK

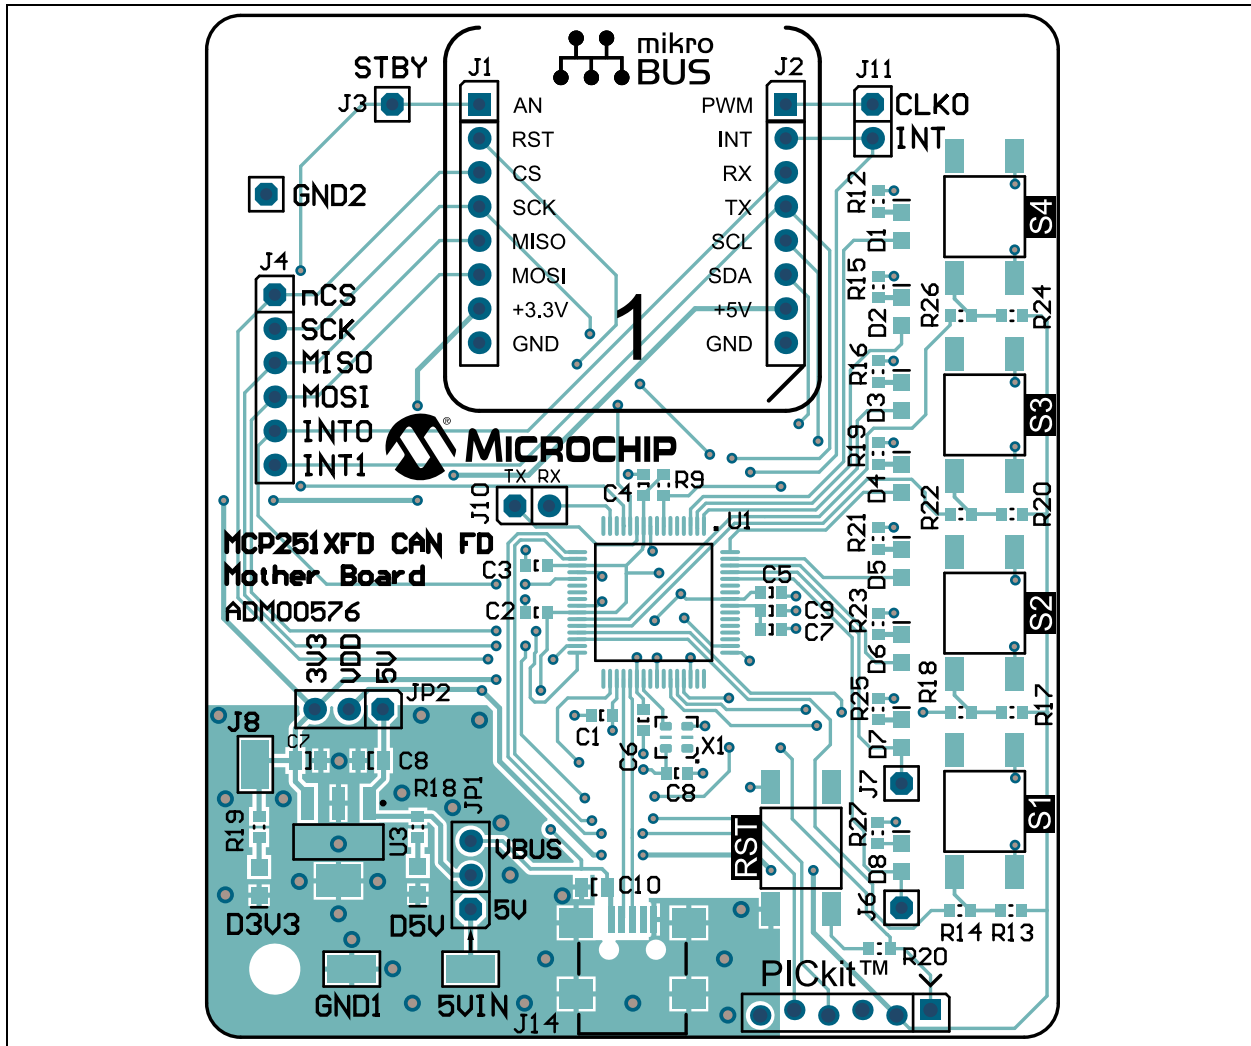

A.8 BOARD – TOP COPPER

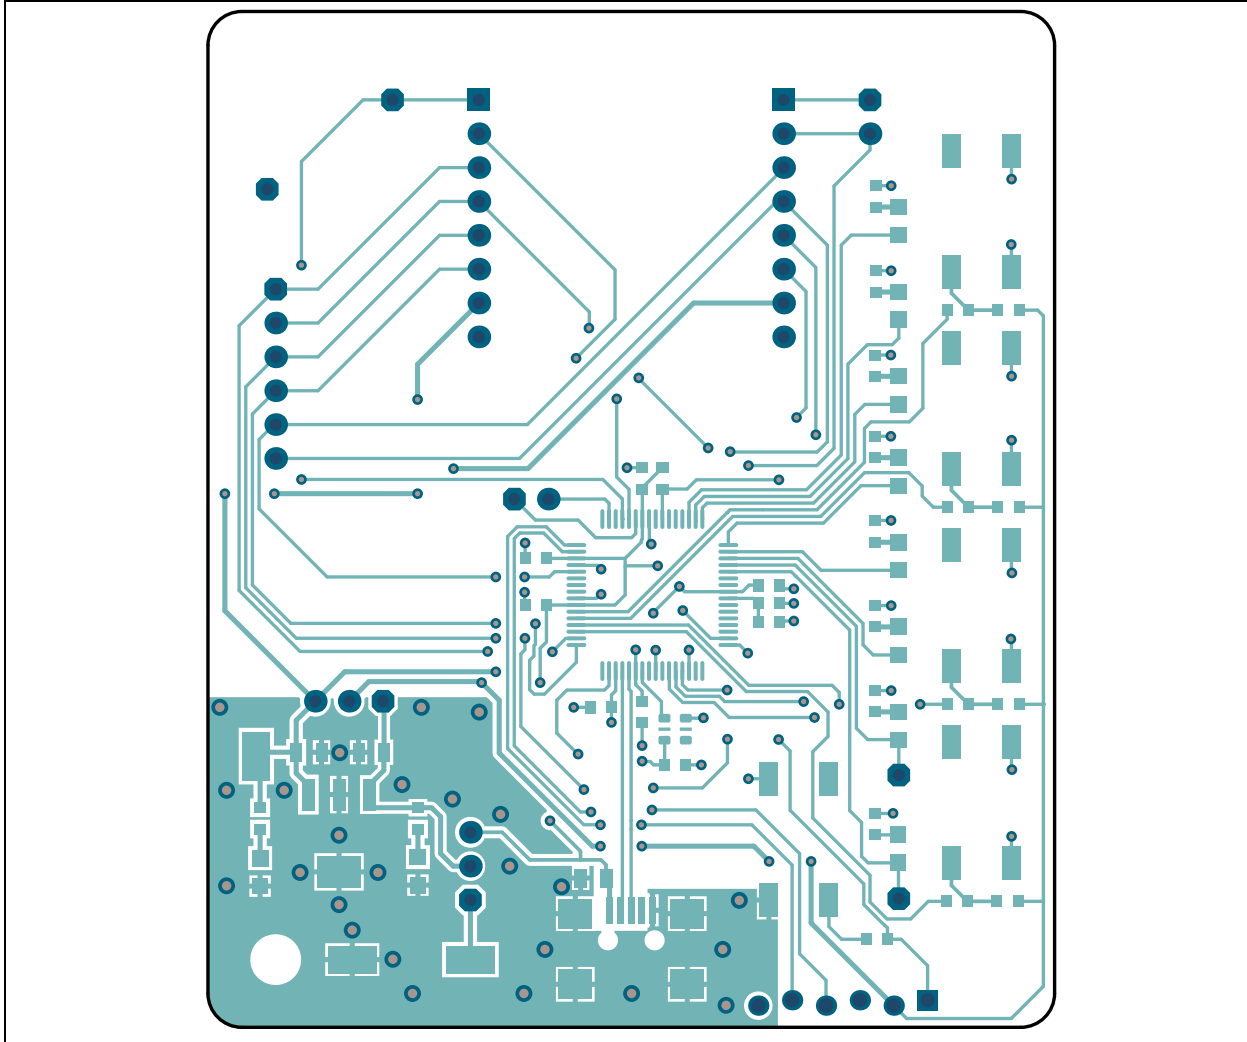


A.9 BOARD – BOTTOM COPPER

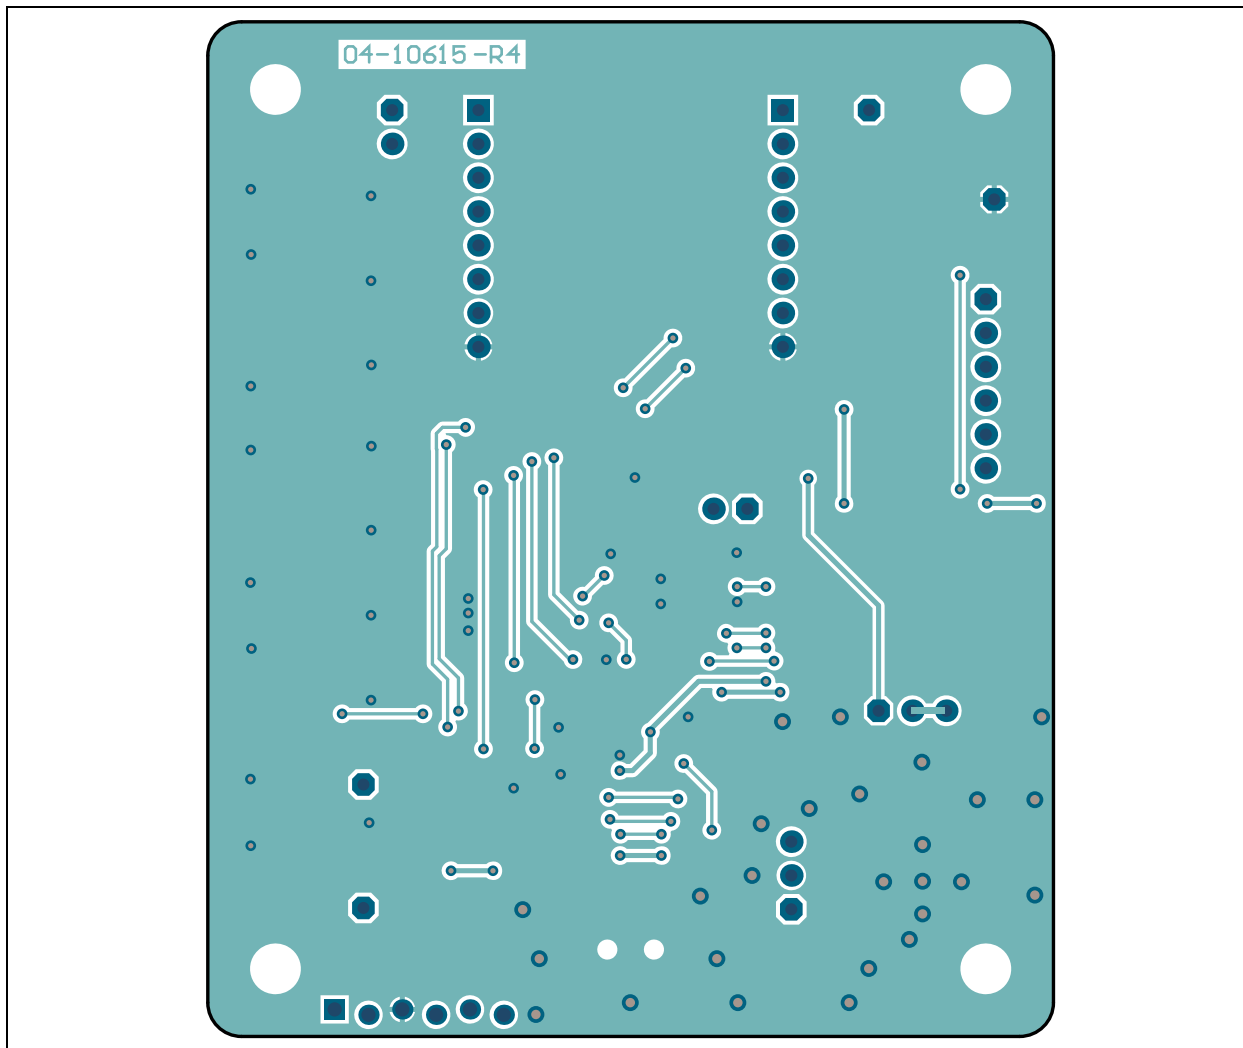


MCP251XFD CAN FD Motherboard User's Guide

A.10 BOARD – BOTTOM COPPER AND SILK

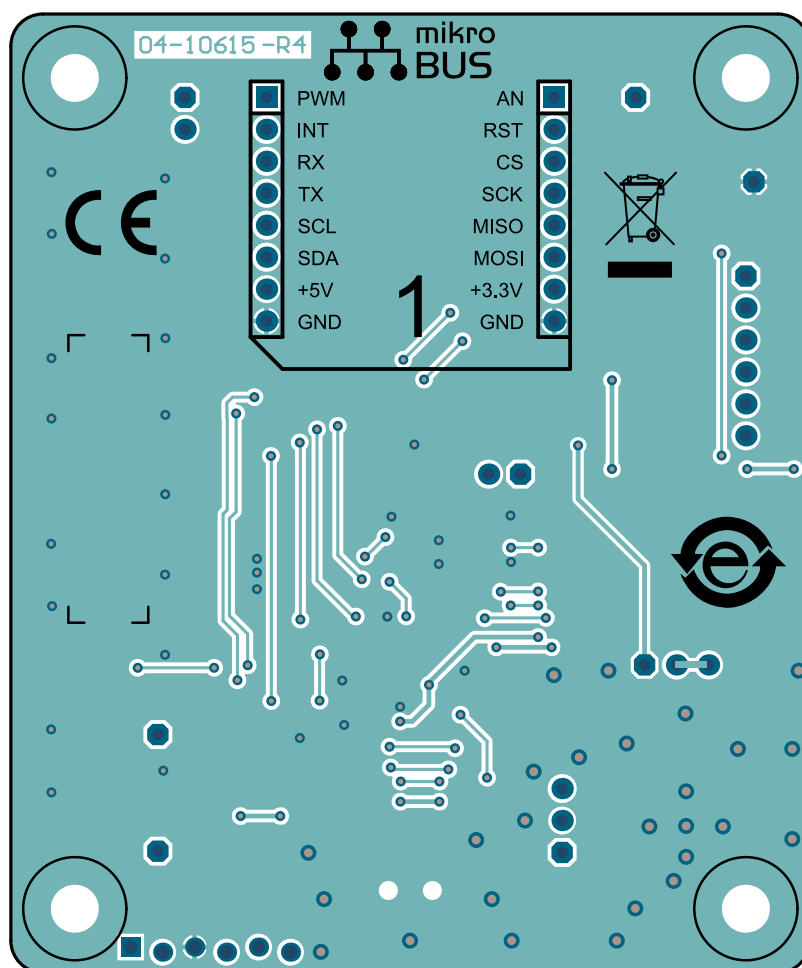

A.11 BOARD – BOTTOM SILK

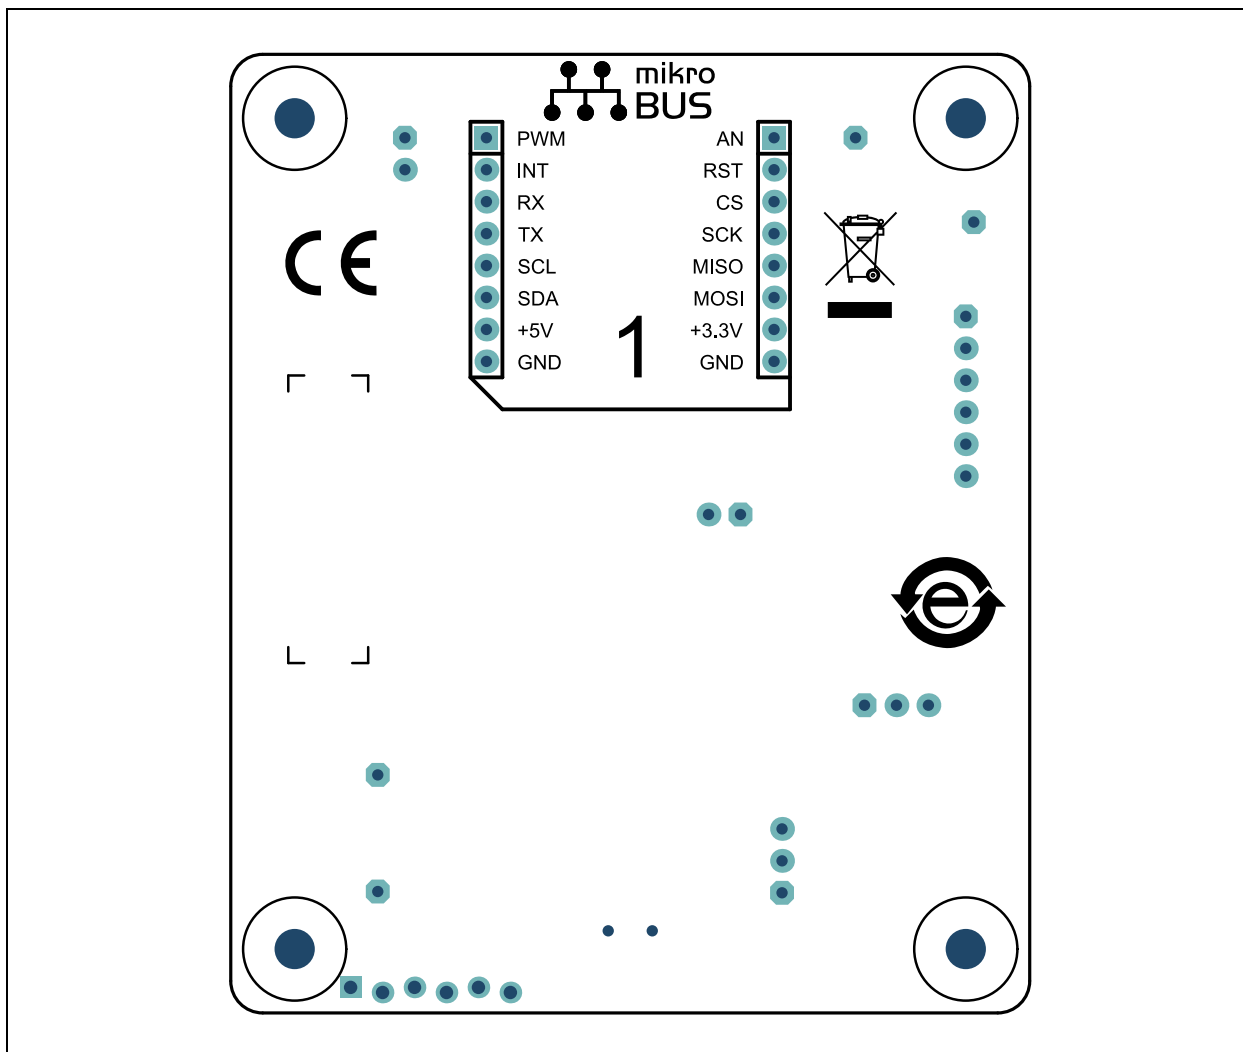

MCP251XFD CAN FD Motherboard User's Guide

NOTES:



MCP251XFD CAN FD MOTHERBOARD USER'S GUIDE

Appendix B. Bill of Materials (BOM)

TABLE B-1: BILL OF MATERIALS (BOM) ⁽¹⁾

Qty.	Reference	Description	Manufacturer	Part Number
8	C1, C2, C3, C4, C5, C6, C7, C8	Cap. cer. 0.1 uF 50V 10% X7R SMD 0603	Murata Electronics®	GRM188R71H104KA93D
1	C9	Cap. cer. 10 UF 25V 20% X5R SMD 0603	Murata Electronics®	GRM188R61E106MA73D
2	C10, C11	Cap. cer. 22 uF 16V 10% X5R SMD 0805	TDK Corporation	C2012X5R1C226K
1	C12	Cap. cer. 4.7 uF 10V 10% X5R SMD 0805	Panasonic® - ECG	ECJ-GVB1A475M
10	D1, D2, D3, D4, D5, D6, D7, D8, D9, D10	LED 0805 green 525 NM 400 MCD 20 MA	QT-Brightek Corporation	QBLP631-IG
2	J1, J2	Conn. hdr.-2.54 female 1x8 tin TH. vert.	Sullins Connector Solutions	PPTC081LFBN-RC
1	J3	Conn. hdr.-2.54 male 1x1 gold 5.84 MH TH. vert.	TE Connectivity Alcoswitch	5-146280-1
1	J4	Conn. hdr.-2.54 male 1x6 tin 5.84 MH TH. vert.	Sullins Connector Solutions	PEC06SAAN
3	J5, J8, J9	Conn. TP loop tin SMD	Harwin Plc.	S1751-46R
1	J11	Conn. hdr.-2.54 male 1x2 tin 5.84 MH TH. vert.	Sullins Connector Solutions	PREC002SAAN-RC
1	J12	Conn. hdr. breakaway .100 40 pos. vert.	TE Connectivity, Ltd.	4-103239-0
1	J14	Conn. USB mini-B female SMD R/A	Hirose Electric Co. Ltd.	UX60-MB-5ST
1	JP1	Conn. hdr.-2.54 male 1x3 tin 5.84 MH TH. vert.	Samtec, Inc.	TSW-103-07-T-S
10	R1, R2, R3, R4, R5, R6, R7, R8, R18, R19	Resistor TKF 2k 1% 1/10W SMD 0603	Stackpole Electronics, Inc.	RMCF0603FT2K00
5	R9, R10, R12, R14, R16	Resistor TKF 20k 1% 1/10W SMD 0603	Yageo Corporation	9C06031A2002FKHFT
5	R11, R13, R15, R17, R20	Resistor TKF 470R 1% 1/10W SMD 0603	Yageo Corporation	RC0603FR-07470RL
5	S1, S2, S3, S4, S5	Switch tact. spst. 12V 50 mA TL3301NF160QG/TR SMD	E-Switch®, Inc.	TL3301NF260QG/TR
1	U1	PIC32MX470F512H	Microchip Technology Inc.	PIC32MX470F512H-120/PT
1	U2	Microchip Analog LDO 3.3V MCP1826S-3302E/DB SOT-223-3	Microchip Technology Inc.	MCP1826S-3302E/DB

Note 1: The components listed in this Bill of Materials are representative of the PCB assembly. The released BOM used in manufacturing uses all RoHS-compliant components.

MCP251XFD CAN FD Motherboard User's Guide

TABLE B-1: BILL OF MATERIALS (BOM) (CONTINUED)⁽¹⁾

Qty.	Reference	Description	Manufacturer	Part Number
1	X1	Microchip Analog Oscillator 8 MHz DSC1121DI5-8.000 L2.5W2H0.85	Microchip Technology Inc.	DSC1121DI5-8.000

Note 1: The components listed in this Bill of Materials are representative of the PCB assembly. The released BOM used in manufacturing uses all RoHS-compliant components.



MCP251XFD CAN FD MOTHERBOARD USER'S GUIDE


Appendix C. MCP2517FD click Board Schematics

C.1 INTRODUCTION


This appendix contains the schematics and layout of the MCP2517FD click Board:

- Schematics - MCP2517FD click Board
- Board – Top View
- Board – Bottom View


C.2 SCHEMATICS - MCP2517FD CLICK BOARD

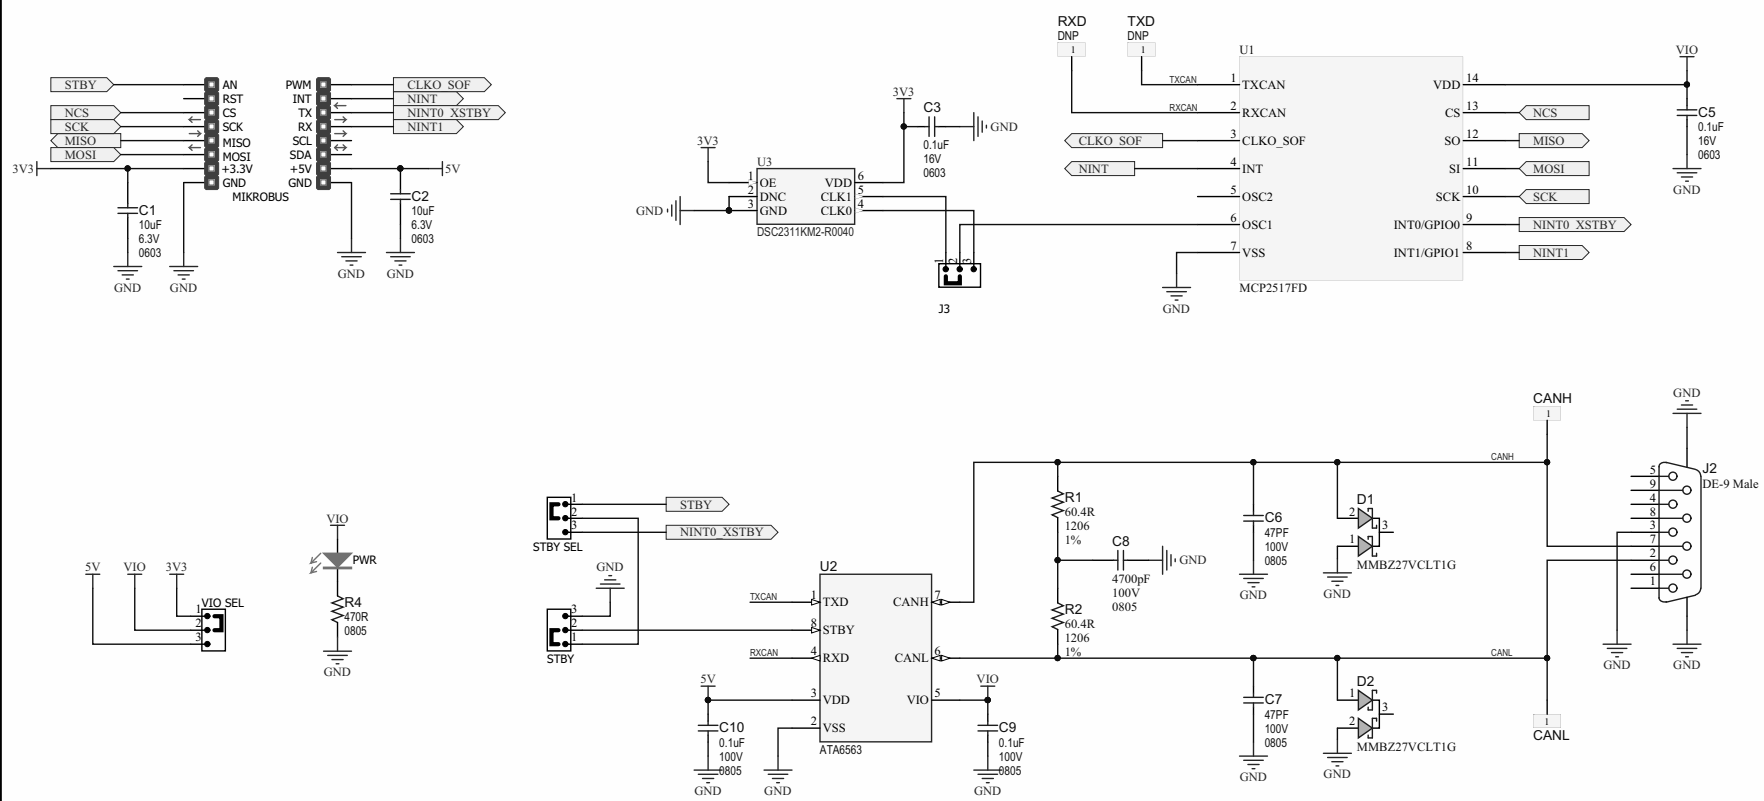

C.3 BOARD – TOP VIEW

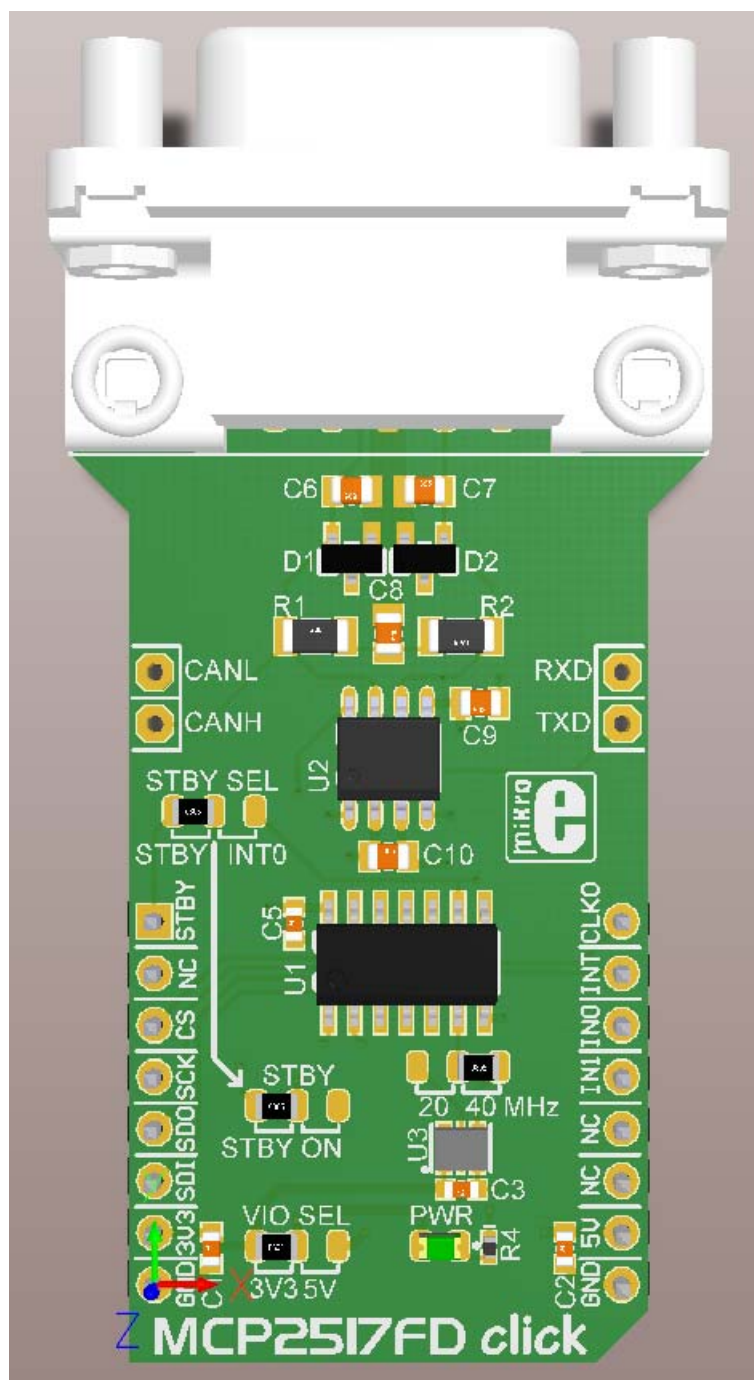

C.4 BOARD – BOTTOM VIEW

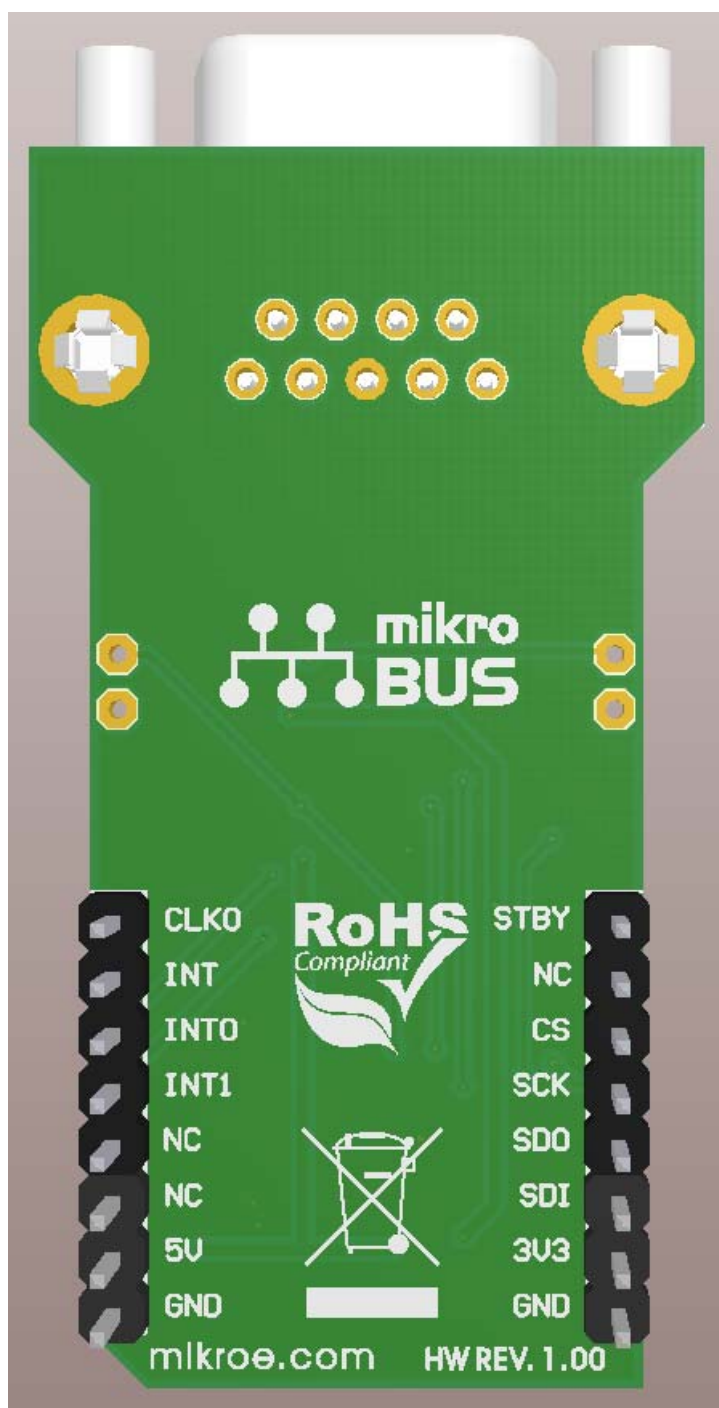

Worldwide Sales and Service

AMERICAS

Corporate Office
 2355 West Chandler Blvd.
 Chandler, AZ 85224-6199
 Tel: 480-792-7200
 Fax: 480-792-7277
 Technical Support:
<http://www.microchip.com/support>
 Web Address:
www.microchip.com

Atlanta
 Duluth, GA
 Tel: 678-957-9614
 Fax: 678-957-1455

Austin, TX
 Tel: 512-257-3370

Boston
 Westborough, MA
 Tel: 774-760-0087
 Fax: 774-760-0088

Chicago
 Itasca, IL
 Tel: 630-285-0071
 Fax: 630-285-0075

Dallas
 Addison, TX
 Tel: 972-818-7423
 Fax: 972-818-2924

Detroit
 Novi, MI
 Tel: 248-848-4000

Houston, TX
 Tel: 281-894-5983

Indianapolis
 Noblesville, IN
 Tel: 317-773-8323
 Fax: 317-773-5453
 Tel: 317-536-2380

Los Angeles
 Mission Viejo, CA
 Tel: 949-462-9523
 Fax: 949-462-9608
 Tel: 951-273-7800

Raleigh, NC
 Tel: 919-844-7510

New York, NY
 Tel: 631-435-6000

San Jose, CA
 Tel: 408-735-9110
 Tel: 408-436-4270

Canada - Toronto
 Tel: 905-695-1980
 Fax: 905-695-2078

ASIA/PACIFIC

Asia Pacific Office
 Suites 3707-14, 37th Floor
 Tower 6, The Gateway
 Harbour City, Kowloon

Hong Kong
 Tel: 852-2943-5100
 Fax: 852-2401-3431

Australia - Sydney
 Tel: 61-2-9868-6733
 Fax: 61-2-9868-6755

China - Beijing
 Tel: 86-10-8569-7000
 Fax: 86-10-8528-2104

China - Chengdu
 Tel: 86-28-8665-5511
 Fax: 86-28-8665-7889

China - Chongqing
 Tel: 86-23-8980-9588
 Fax: 86-23-8980-9500

China - Dongguan
 Tel: 86-769-8702-9880

China - Guangzhou
 Tel: 86-20-8755-8029

China - Hangzhou
 Tel: 86-571-8792-8115
 Fax: 86-571-8792-8116

China - Hong Kong SAR
 Tel: 852-2943-5100
 Fax: 852-2401-3431

China - Nanjing
 Tel: 86-25-8473-2460
 Fax: 86-25-8473-2470

China - Qingdao
 Tel: 86-532-8502-7355
 Fax: 86-532-8502-7205

China - Shanghai
 Tel: 86-21-3326-8000
 Fax: 86-21-3326-8021

China - Shenyang
 Tel: 86-24-2334-2829
 Fax: 86-24-2334-2393

China - Shenzhen
 Tel: 86-755-8864-2200
 Fax: 86-755-8203-1760

China - Wuhan
 Tel: 86-27-5980-5300
 Fax: 86-27-5980-5118

China - Xian
 Tel: 86-29-8833-7252
 Fax: 86-29-8833-7256

ASIA/PACIFIC

China - Xiamen
 Tel: 86-592-2388138
 Fax: 86-592-2388130

China - Zhuhai
 Tel: 86-756-3210040
 Fax: 86-756-3210049

India - Bangalore
 Tel: 91-80-3090-4444
 Fax: 91-80-3090-4123

India - New Delhi
 Tel: 91-11-4160-8631
 Fax: 91-11-4160-8632

India - Pune
 Tel: 91-20-3019-1500

Japan - Osaka
 Tel: 81-6-6152-7160
 Fax: 81-6-6152-9310

Japan - Tokyo
 Tel: 81-3-6880-3770
 Fax: 81-3-6880-3771

Korea - Daegu
 Tel: 82-53-744-4301
 Fax: 82-53-744-4302

Korea - Seoul
 Tel: 82-2-554-7200
 Fax: 82-2-558-5932 or
 82-2-558-5934

Malaysia - Kuala Lumpur
 Tel: 60-3-6201-9857
 Fax: 60-3-6201-9859

Malaysia - Penang
 Tel: 60-4-227-8870
 Fax: 60-4-227-4068

Philippines - Manila
 Tel: 63-2-634-9065
 Fax: 63-2-634-9069

Singapore
 Tel: 65-6334-8870
 Fax: 65-6334-8850

Taiwan - Hsin Chu
 Tel: 886-3-5778-366
 Fax: 886-3-5770-955

Taiwan - Kaohsiung
 Tel: 886-7-213-7830

Taiwan - Taipei
 Tel: 886-2-2508-8600
 Fax: 886-2-2508-0102

Thailand - Bangkok
 Tel: 66-2-694-1351
 Fax: 66-2-694-1350

EUROPE

Austria - Wels
 Tel: 43-7242-2244-39
 Fax: 43-7242-2244-393

Denmark - Copenhagen
 Tel: 45-4450-2828
 Fax: 45-4485-2829

Finland - Espoo
 Tel: 358-9-4520-820

France - Paris
 Tel: 33-1-69-53-63-20
 Fax: 33-1-69-30-90-79

France - Saint Cloud
 Tel: 33-1-30-60-70-00

Germany - Garching
 Tel: 49-8931-9700

Germany - Haan
 Tel: 49-2129-3766400

Germany - Heilbronn
 Tel: 49-7131-67-3636

Germany - Karlsruhe
 Tel: 49-721-625370

Germany - Munich
 Tel: 49-89-627-144-0
 Fax: 49-89-627-144-44

Germany - Rosenheim
 Tel: 49-8031-354-560

Israel - Ra'anana
 Tel: 972-9-744-7705

Italy - Milan
 Tel: 39-0331-742611
 Fax: 39-0331-466781

Italy - Padova
 Tel: 39-049-7625286

Netherlands - Drunen
 Tel: 31-416-690399
 Fax: 31-416-690340

Norway - Trondheim
 Tel: 47-7289-7561

Poland - Warsaw
 Tel: 48-22-3325737

Romania - Bucharest
 Tel: 40-21-407-87-50

Spain - Madrid
 Tel: 34-91-708-08-90
 Fax: 34-91-708-08-91

Sweden - Gothenberg
 Tel: 46-31-704-60-40

Sweden - Stockholm
 Tel: 46-8-5090-4654

UK - Wokingham
 Tel: 44-118-921-5800
 Fax: 44-118-921-5820