

FEATURES

- Single power supply
- AC-coupled I/O
- SMA I/O connectors
- DIP switch controlled enable function

AVAILABLE MEASUREMENTS

The SY89833L evaluation board allows the following measurements:

- Frequency performance
- Output eye pattern generation
- Jitter
- Output rise/fall time
- BER testing

DESCRIPTION

This manual provides information on the SY89833L evaluation board. It should be used in conjunction with the SY89833L datasheet, which contains full specifications of the SY89833L.

The SY89833L evaluation board enables fast and thorough evaluation of the SY89833L fanout buffer/translator. The board is designed in multiple layers for better performance and simpler signal evaluation.

EVALUATION BOARD

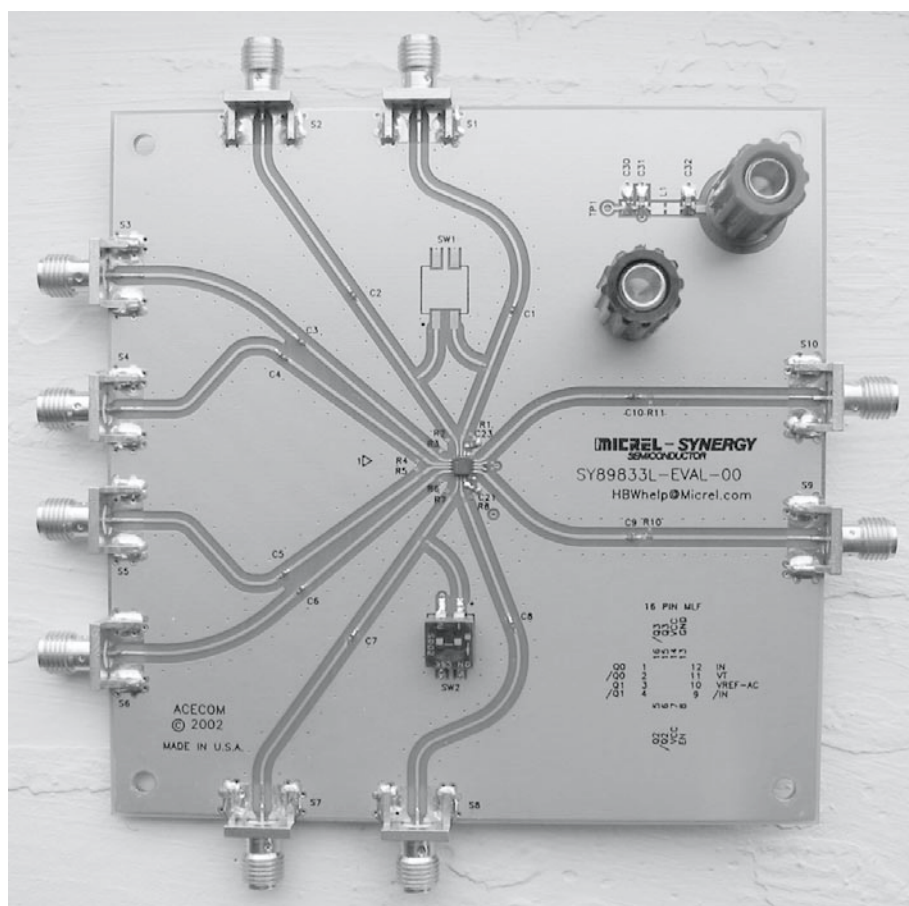


Figure 1. SY89833L Evaluation Board

MEASUREMENT SETUP

Equipment used for time domain measurements:

- Agilent 83752A Synthesized Sweeper
- Agilent 70004A Display
- Agilent 70843B Error Performance Analyzer
- Agilent 86100A Wide-Bandwidth Oscilloscope
- Agilent E3620A DC Power Supply
- Matched high-speed cables w/SMA connectors

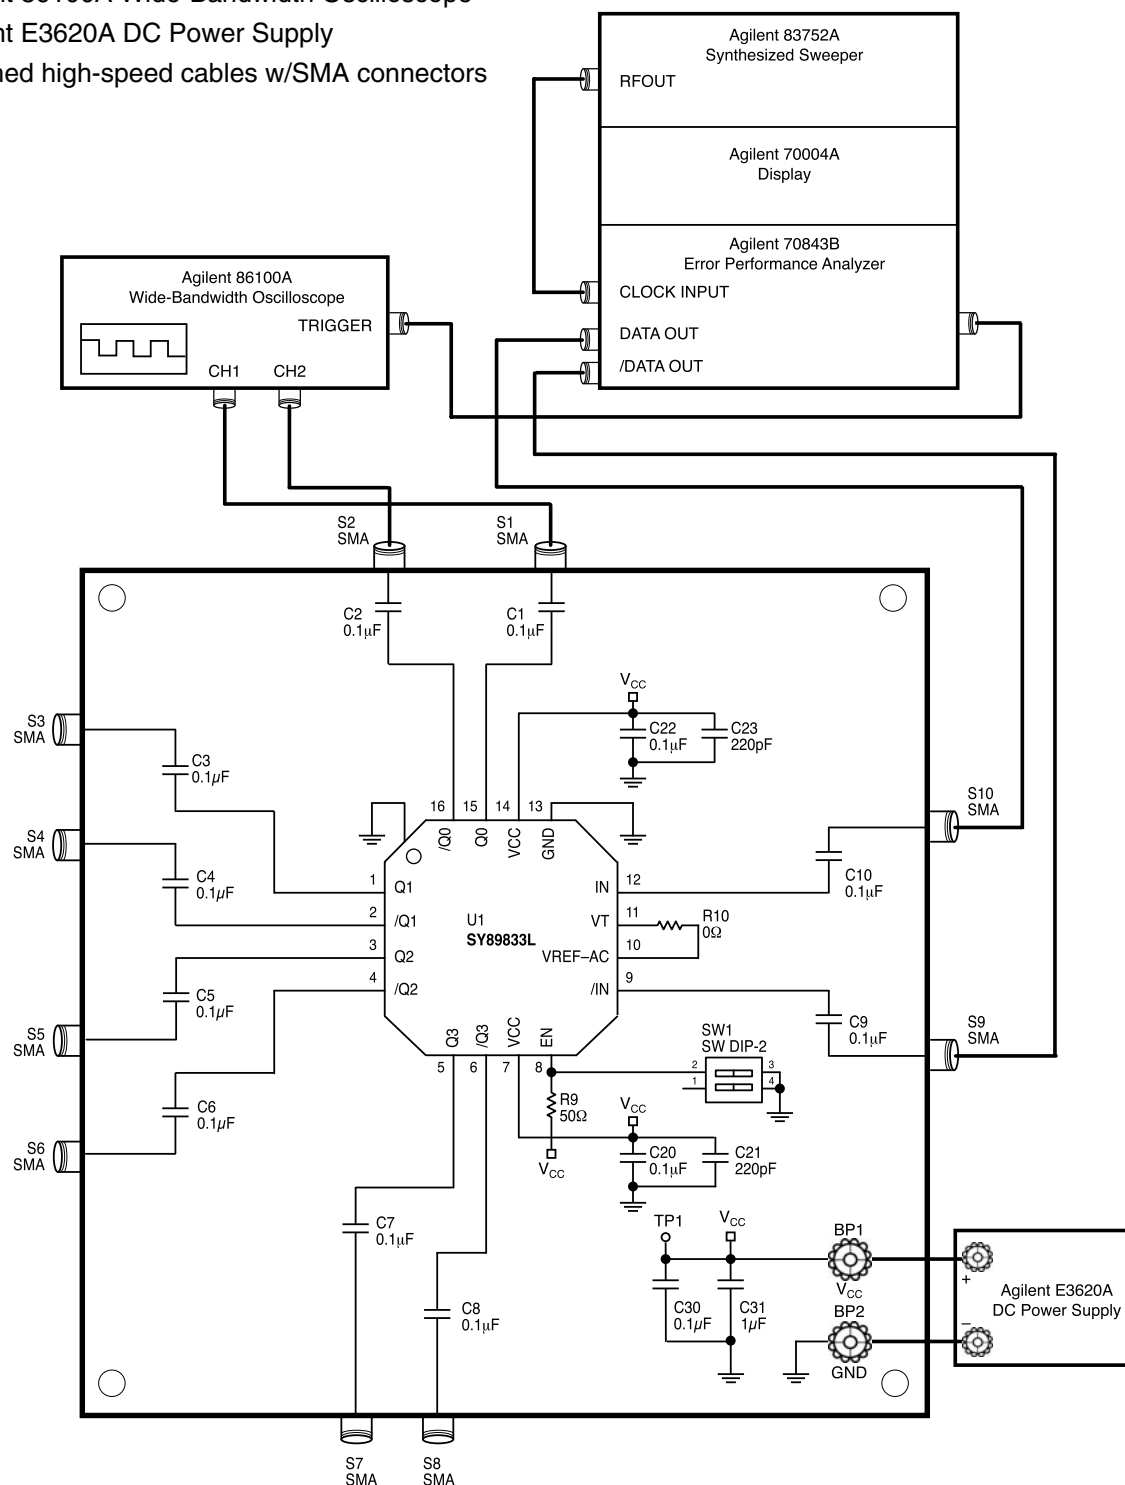


Figure 2. Setup for Measurements

SETUP FOR MEASUREMENTS (FIGURE 2)

1. Connect power; a single power supply is used. Connect BP1 (V_{CC}) to +3.3V. Connect BP2 (GND) binding post to supply ground. See SY89833L datasheet for power supply range.
2. Set SW2 to enable device.
 - a. Set switch 2 off to enable device.
 - b. Switch 1 has no effect on operation.
3. Set signal generator for appropriate output swing amplitude, data rate and bit pattern, as allowed by the SY89833L datasheet. There is no need to set DC-offset as the board is AC-coupled. Ensure the signal generator is capable of driving AC-coupled loads. The SY89833L evaluation board does not provide 50 Ω source termination resistors.
4. Connect desired SY89833L outputs to the oscilloscope. Unused outputs of a switching pair must be terminated. Ensure the oscilloscope is triggered properly. The oscilloscope must have internal 50 Ω terminations to ground. Choose desired measurements on oscilloscope.
 - a. Please refer to oscilloscope's manual for eye pattern, total jitter and rise/fall measurements.
 - b. For BER testing, feedback an output to the BERT data input. After resetting the error count, the error count should remain zero. See BERT manual for more details.

BILL OF MATERIALS

Item	Part Number	Manufacturer	Description	Qty.
BP1	7004K-ND	Keystone ⁽¹⁾	Red binding post	1
BP2	7005K-ND	Keystone ⁽¹⁾	Black binding post	1
C1,C2,C3,C4,C5, C6,C7,C8,C9,C10, C20,C22,C30	PCC1731CT-ND	Panasonic ⁽²⁾	0.1μF surface mount capacitor, size 0402	13
C21, C23	PCC1706CT-ND	Panasonic ⁽²⁾	220pF surface mount capacitor, size 0402	2
C31, C32	PCC1915CT-ND	Panasonic ⁽²⁾	1μF surface mount capacitor, size 0603	2
R9	P49.9LCT-ND		49.9Ω surface mount resistor, size 0402	1
R10	311.0.0JCT-ND		0Ω Phicomp surface mount resistor, size 0402	1
S1,S2,S3,S4,S5, S6,S7,S8,S9,S10	142-0701-851	Keystone ⁽¹⁾	End launch SMA	10
SW2	CKN3054-ND		2-DIP switch	1
TP1	TSW-101-07-S-S	Samtec ⁽³⁾	1-header through hole terminal strip	1
U1	SY89833L	Micrel Semiconductor ⁽⁴⁾		1

1. Keystone tel: 800-247-8256

2. Panasonic tel: 847-468-5624

3. Samtec tel: 800-726-8329

4. Micrel Semiconductor tel: 408-944-0800

MICREL, INC. 1849 FORTUNE DRIVE SAN JOSE, CA 95131 USA

TEL + 1 (408) 944-0800 FAX + 1 (408) 944-0970 WEB <http://www.micrel.com>

This information is believed to be accurate and reliable, however no responsibility is assumed by Micrel for its use nor for any infringement of patents or other rights of third parties resulting from its use. No license is granted by implication or otherwise under any patent or patent right of Micrel, Inc.

© 2002 Micrel, Incorporated.